



ISR SERIES Mounting Kits

Our Mounting Kits are better than the “other guy’s” and are constructed from high quality materials made here in the USA. Custom and Universal brackets install center of axle, Custom Brackets require less drilling and install faster, and our Universal kits fit more trucks without ordering extra kits.



Super Lite
#2400 - 20K

(King Pin Adapter and Handle included)



Super 5th
#1900 - 16K
#2100 - 20K
#2200 - 24K



SuperGlide
#2700 - 16K
#2900 - 18K
#2300 - 24K

NOTE: In order to determine the total tow capacity of a system, you must consider the weight ratings of each component in that system. This includes, but may not be limited to, the rating of the tow vehicle, the fifth wheel hitch, and the hitch's mounting system. Actual tow capacity of the system will be equal to the lowest rated component.

		Universal	Universal HEAVY DUTY	Custom	Custom HEAVY DUTY	SuperRail
		PullRite#	PullRite#	PullRite#	PullRite#	PullRite#
CHEVY / GMC						
2016-2019	2500 & 3500 (NO DRILL) <i>(designed for easier install)</i>			2762		
2011-2019	2500 & 3500 (NO DRILL)			2724	2226	2328
2001-2016	2500 & 3500 HD	2720	2220			
1999-2010	2500 & 3500 HD			2734	2224	2326
2007-2019	1500 (6-1/2' bed, old body style)	2720		2730		
DODGE						
2013-2018	3500 (NO DRILL)			2742		
2014-2019	2500 (NO DRILL)			2746		2336
2013	2500 (NO DRILL)			2740		
2003-2012	2500 & 3500 (*NO DRILL) <i>(does not fit 3500 w/ overload springs)</i>	2720	2220	2736*	2230*	2330*
2016-2018	1500 (does not fit w/ air bags)			2764		
2009-2015	1500 (does not fit w/ air bags)			2728		
FORD						
2017-2019	F250 & F350 (NO DRILL)			2766		2332
2011-2016	F250 & F350 (NO DRILL)			2738	2228	2324
1999-2016	F250 & F350	2720	2220			2324
1999-2010	F250 & F350			2726	2228	
2015-2019	F150 (NO DRILL)			2760		
2004-2014	F150 (NO DRILL)			2732		
TOYOTA						
2007-2019	Tundra (fits all bed lengths)			2748		
NISSAN						
2004-2012	Titan			2744		

ALL THE ABOVE KITS FIT LONG OR SHORT BED TRUCKS WITH ANY BRAND ISR HITCH. HD KITS ARE RECOMMENDED FOR HITCHES RATED FOR MORE THAN 20K

UNIVERSAL KITS include "L" Brackets, ISR Base Rails & Hardware. Heavy Duty kits include ISR HD Base Rails & Hardware

CUSTOM KITS include Custom Mounting Brackets, ISR Base Rails, & Hardware. Heavy Duty kits include ISR HD Base Rails, & Hardware

SUPERRAIL KITS featuring Clean Bed Technology include totally removable SuperRails & Posts, Mounting Brackets & Hardware for a clean truck bed!



TRADITIONAL SERIES Mounting Kits



#4100 - 16K (left)
#4400 - 20K (right)
Universal Mounting Kits
only applicable for
#4100 and #4400
SuperGlide models



#3100 - 12K
#3100 SuperRail Mounting Kits
only applicable to the #3100
Traditional Series SuperGlide

NOTE: In order to determine the total tow capacity of a system, you must consider the weight ratings of each component in that system. This includes, but may not be limited to, the rating of the tow vehicle, the fifth wheel hitch, and the hitch's mounting system. Actual tow capacity of the system will be equal to the lowest rated component.

Universal	SuperRail	#3100 SuperRail
PullRite#	PullRite#	PullRite#

CHEVY / GMC		PullRite#	PullRite#	PullRite#
2011-2019	2500 & 3500 (NO DRILL)		4428	
1999-2010	2500 & 3500	3340	3345	
2007-2019	1500 (6-1/2' bed, old body style)		4423	
1999-2007	1500 (6-1/2' bed, except 2007 mid-year body change)	3340	3345	
2007-2019	1500 (5'8" bed, old body style only)			3117
2004-2007	1500 (5'8" Bed, except 2007 current body style. Added limitations on trailers 98" or wider)			3114
DODGE		PullRite#	PullRite#	PullRite#
2013	2500 (NO DRILL)		4440	
2003-2012	2500 & 3500 (NO DRILL)		3349	
2009-2018	1500 (5'7" & 6-1/2' bed, added limitations 96" or wider trailers)			3122
2002-2008	1500 (NO DRILL)		3349	
1995-2002	(except '02 1500)	3340	3346	
FORD		PullRite#	PullRite#	PullRite#
1999-2016	F250 & F350	3340	4426	
2015-2019	F-150			3123
2004-2014	F-150 (6-1/2' bed)		3361	
1997-2003	F-150 (not SuperCrew)	3340	3342	
2009-2014	F-150 (5'7" bed, added limitations on 96" or wider trailers)			3119
2004-2008	SuperCrew F-150 (5'6" bed. Added limitations on trailers over 90" wide)			3113
2001-2003	SuperCrew F-150 (5'6" bed)			3111
TOYOTA		PullRite#	PullRite#	PullRite#
2007-2019	Tundra (Double Cab Only, 6-1/2' bed, Universal Rails with Custom Mounting Brackets)	4421		
2001-2006	Tundra (Standard Extra Cab)			3112
2007-2019	Tundra (Crew Max and 5'8" bed only)			3118
NISSAN		PullRite#	PullRite#	PullRite#
2004-2013	Titan Short Beds (Crew Cab limitations on trailers over 90" wide, King Cab may be used up to 102" wide—call for more information)			3115

ALL THE ABOVE KITS FIT SHORT BED TRUCKS, EXCEPT #3100 SUPERGLIDE WHICH IS DESIGNED FOR SUPER SHORT (5-1/2') BEDS ONLY.

UNIVERSAL KITS include "bolt to the bed" Baserrails, Universal "L" Brackets and Hardware
SUPERRAIL KITS featuring <i>Clean Bed Technology</i> include totally removable SuperRails & Posts, Mounting Brackets & Hardware for a clean truck bed!
#3100 SUPERRAIL KITS featuring <i>Clean Bed Technology</i> include totally removable SuperRails & Posts, Mounting Brackets & Hardware for a clean truck bed!

PullRite

SINGLE POINT ATTACHMENT HITCHES and Accessories

SuperLite

PullRite's line of SuperLite and our NEW Super 5th single point attachment hitches combine the lightweight design of a SuperLite hitch base with the innovation of an underbed gooseneck mounting system.

Lightweight and stronger than aluminum, the base made from high grade American steel. Mounts directly to your truck's OE puck mounting system or any aftermarket underbed gooseneck with a 2-5/16" ball.

Bed Saver Rails prevent damage to your truck bed through movement of the hitch base because they act independently to insulate your bed from hitch movement. Multiple height adjustments for bed side clearance. Both feature Clean Bed Technology (CBT). SAE J2638 tested. **MADE IN USA.**

Super 5th



#2600 - 20K
(SuperLite King Pin Adapter and Handle included)




#3700 - 16K
#3800 - 20K
#3900 - 24K


NOTE: In order to determine the total tow capacity of a system, you must consider the weight ratings of each component in that system. Actual tow capacity of the system will be equal to the lowest rated component, including the vehicle tow rating.

CHEVY / GMC	
2008-2019	2500 & 3500, long and short bed trucks w/underbed gooseneck ball
2016-2019	2500 & 3500, long and short bed trucks w/ OE tow package
DODGE	
2008-2019	2500 & 3500, long and short bed trucks w/ underbed gooseneck ball
2013-2019	2500 & 3500, long and short bed trucks w/ OE tow package
FORD	
2008-2019	F250 & F350, long and short bed trucks w/ underbed gooseneck ball
2010-2019	F250 & F350, long and short bed trucks w/ OE tow package

GOOSENECK PLATES & ADAPTERS

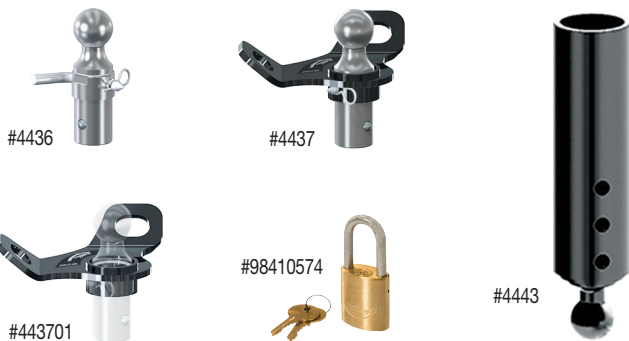

SINGLE POINT ACCESSORIES

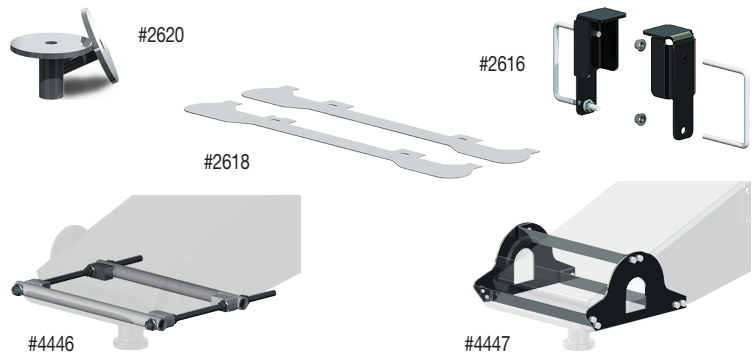

PART#	PRODUCT DESCRIPTION
4436	30K OE CAM-ACTION BALL W/ PIN & CLIP
4437	30K OE CAM-ACTION BALL W/ PLATE
443701	OE CHAIN PLATE ONLY
98410574	PULLRITE SAFETY PADLOCK & KEY
4443	30K SUPERLITE HORSE TRAILER / GOOSENECK ADAPTER

PART#	PRODUCT DESCRIPTION
2620	CHEVY/GMC PUCK PLUG SET (4 PCS)
2616	CHEVY/GMC BED SUPPORT BRACKET KIT
2618	BED SAVER PLASTIC SLIDE SET
4446	ROTA-FLEX PIN BOX ISOLATOR
4447	ROTA-FLEX PIN BOX ISOLATOR



NEW! OE PUCK SERIES SUPERGLIDE



SuperGlide is now available in our expanding OE Puck Series line of fifth wheel hitches, as well as two new Super 5th's for Chevy/GMC trucks! These direct attachment hitches mount directly to your truck's OE mounting points...NO ADAPTER RAILS NEEDED!

The mounting post assemblies are completely removable for easier removal and installation of the hitch. Simply unpin handles, rotate 1/4 turn outward and lift the hitch out of the bed. NO TOOLS NEEDED!

Premium hardware, like the use of castle nuts, allow for finer adjustments of the OE puck handles for ease of installation and fit!

This SuperGlide is adjustable front-to-back to center it over the axle. SAE J2638 tested. Made in the USA.

OE PUCK SERIES SUPER 5TH



PART#	PRODUCT DESCRIPTION
1300	18K OE SERIES SUPER 5 TH FOR FORD
1400	25K OE SERIES SUPER 5 TH FOR FORD
1500	18K OE SERIES SUPER 5 TH FOR CHEVY/GMC
1600	25K OE SERIES SUPER 5 TH FOR CHEVY GMC

PART#	PRODUCT DESCRIPTION
2714	16K OE SERIES SUPERGLIDE FOR FORD
2914	18K OE SERIES SUPERGLIDE FOR FORD
2715	16K OE SERIES SUPERGLIDE FOR CHEVY/GMC
2915	18K OE SERIES SUPERGLIDE FOR CHEVY/GMC
2315	24K OE SERIES SUPERGLIDE FOR DODGE

NEW!


OE SERIES RAIL ADAPTERS



#4442

Make your ISR hitch fit any OE puck mounting system. Quick install/removal with pins and clips, NO TOOLS REQUIRED, leaves you with a clean bed. SAE J2638 tested.

OE PUCK BASE FEET FOR ISR SUPERGLIDE

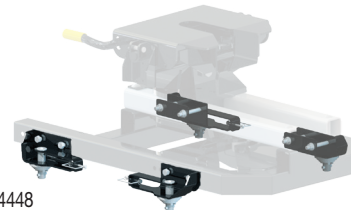

#4448

Convert ISR SuperGlide hitches to fit OE puck mounting systems. Sits lower in the bed than a OE Series ISR Rail Adapter. SAE J2638 tested.

PART#	PRODUCT DESCRIPTION
4439	25K OE SERIES RAIL ADAPTER FOR DODGE
4442	20K OE SERIES RAIL ADAPTER FOR FORD
4444	20K OE SERIES RAIL ADAPTER FOR CHEVY/GMC

PART#	PRODUCT DESCRIPTION
4448	OE PUCK BASE FEET KIT FORD (#2700 & #2900 ONLY)
4449	OE PUCK BASE FEET KIT CHEVY/GMC (#2700 & #2900 ONLY)
4450	OE PUCK BASE FEET KIT FOR DODGE (#2300 SUPERGLIDE ONLY)

NOTE: In order to determine the total tow capacity of a system, you must consider the weight ratings of each component in that system. This includes, but may not be limited to, the rating of the tow vehicle, the fifth wheel hitch, and the hitch's mounting system. Actual tow capacity of the system will be equal to the lowest rated component.

ISR RAIL ADAPTERS PullRite#	OE PUCK SERIES SUPER 5 th	OE PUCK SERIES SUPERGLIDE
--------------------------------	---	------------------------------

CHEVY / GMC				
2016-2019	2500 & 3500 (not compatible with #2300 HD SuperGlide)	4444	1500/1600	2715/2915
DODGE				
2014-2019	2500 & 3500	4439		2315
2013	3500	4439		2315
FORD				
2010-2019	F250, F350 & F450	4442	1300/1400	2714/2914

ISR RAIL ADAPTER KITS featuring *Clean Bed Technology* include totally removable SuperRails, Posts & Hardware for a clean truck bed!