


## Hook Engagement

**Overview:** The retaining portion of all Wall Control Slotted Tool Board hooks and attachments offer a unique “double offset” design. This design prevents the attachments from unintentionally falling out of the panel, yet still permits easy movement from slot to slot.


Please note that for **1/4” Pegboard Accessories** conventional engagement will still apply for the round holes. Simply place the pegs in the round holes and you’re done.

The required motion for **Slotted Hook Engagement** is shown below. A simple “Up, down, up, down” motion is all that is required to engage a slotted hook or accessory.


**Step 1:** Slip the upper portion of the rear tang through the slot in the panel in an upward motion as illustrated here

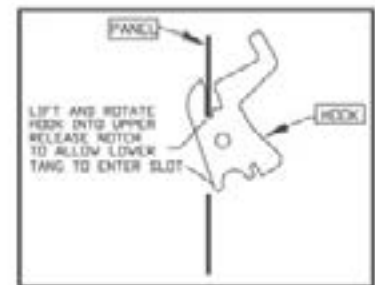


**Step 2:** Rotate the body of the tang into the slot and lower the hook so the rotation arc in the tang rests on the panel

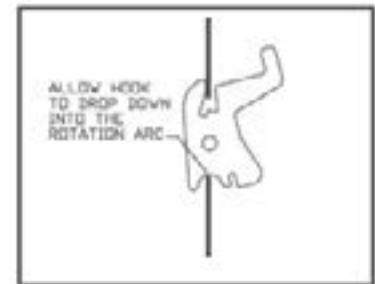

**Step 3:** Lift the hook and rotate the lower end of the hook toward the slot on the panel face

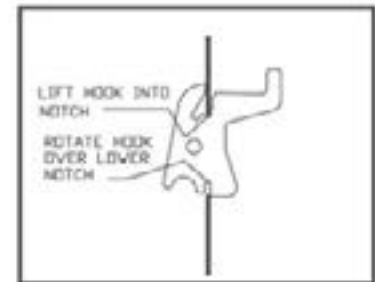

**Step 4:** Lower the hook until the positioning slot in tang is fully seated in the panel’s slot

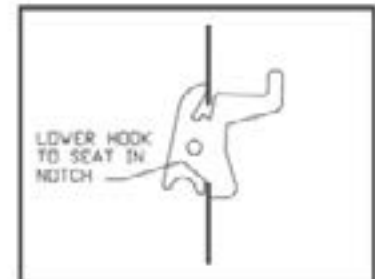

[www.HangTimeStore.com](http://www.HangTimeStore.com)  
email: [support@hangtimestore.com](mailto:support@hangtimestore.com)



@HANGTIMESTORE