


Installation & Assembly

Multiple Panels

Slots should be vertical for use with Wall Control Accessories

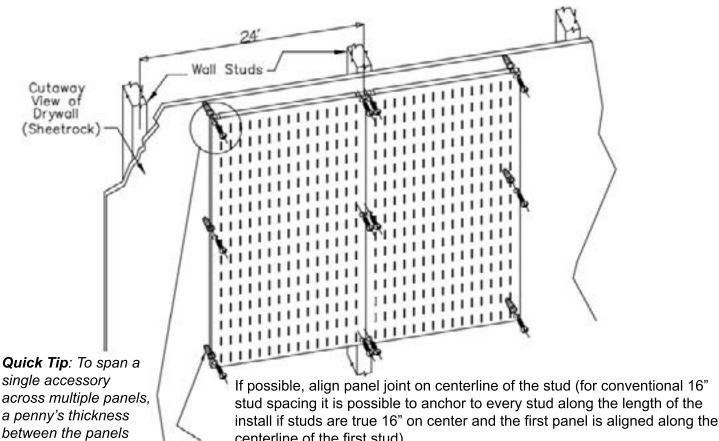

a penny's thickness between the panels creates the perfect spacing. Note, this is not required for any Wall Control accessory

Quick Tip: Stripping out the mounting holes in sheetrock with the screws included create a perfect sized hole to hammer the provided anchors into

Plastic wall anchor (provided) inserted into sheetrock



Mounting screw (provided) passes through panel face to mount flush with return flange and wall or flat surface into stud, anchor, or other backing









