

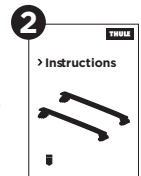


2

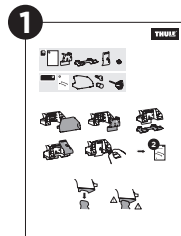

# > Instructions

Thule Evo Flush Rail  
710601

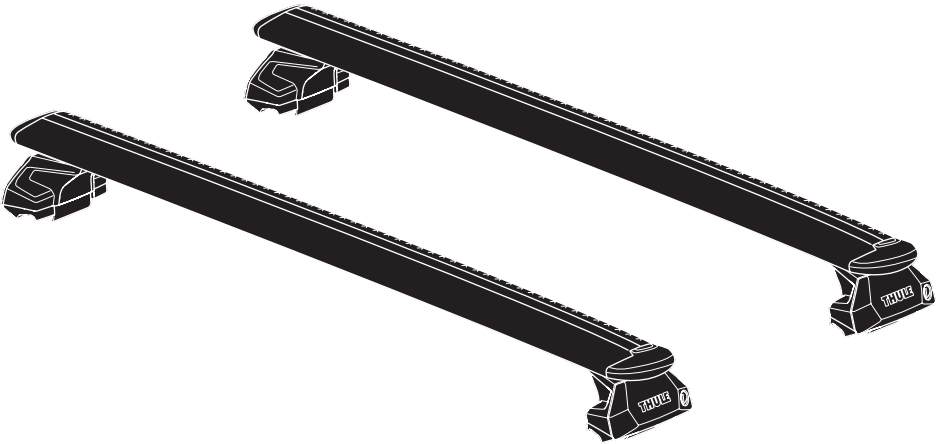

THULE.COM

**EN** Roof mounted load carrier  
**DE** Lastenträger zur Dachmontage  
**FR** Barre de toit  
**NL** Dakdrager  
**IT** Barra portatutto da installare sul tetto  
**ES** Portaequipajes de techo  
**PT** Barra para montagem no tejadilho  
**SV** Takmonterad lasthållare  
**DK** Tagmonteret lastholder  
**NO** Takmontert lasteholder  
**FI** Katolle asennettava teline  
**ET** Katusele paigaldatav katuseraam  
**LV** Uz jumta uzstādāms kravas turētājs  
**LT** Ant stogo tvirtinamas krovinijų laikiklis  
**PL** Uchwyty na bagażnik bazowy montowany na dachu  
**RU** Багажник на крышу  
**UK** Багажник для даху  
**BG** Багажник, монтиран върху покрива  
**CS** Nosič pro montáž na střeche  
**SK** Strešný nosič  
**SL** Nosilec za strešni prtljajnik  
**HR/BIH** Krovni nosač tereta


**RO** Suport încărcătură montat pe acoperiș  
**HU** Tetőre szerelhető csomagszállító  
**EL** Σχάρα οροφής για μεταφορά φορτίου  
**TR** Araç üstüne bağlanan yük taşıyıcı

**ZH** 顶行李架  
**JA** ルーフマウント型ロードキャリア  
**KO** 루프 장착 화물 캐리어  
**TH** โครงยึดของบรรทุกแบบติดตั้งบนหลังคา

**HE** מנשא מטען לגג הרכב  
**AR** حامل نقل مثبت على السقف

**CITY CRASH**  
 Complies with ISO norm


ISO 11154-E

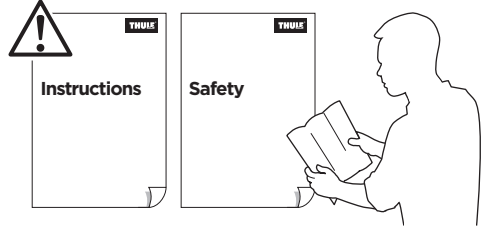



**i**




**i**

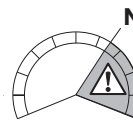

Max 130 km/h  
80 Mph

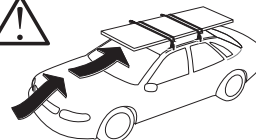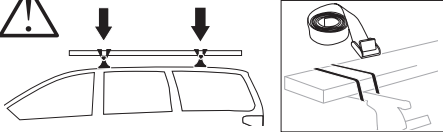

80 km/h  
50 Mph




## ► Mounting Tutorial

Thule Evo Flush Rail








**1**  
KIT






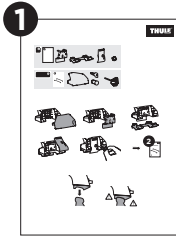


+

**2**  
FOOT PACK

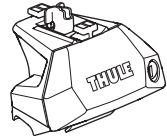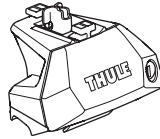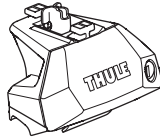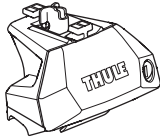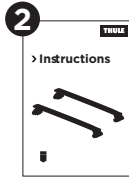

**3**  
BAR

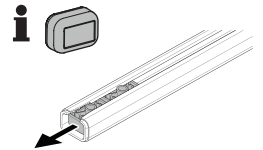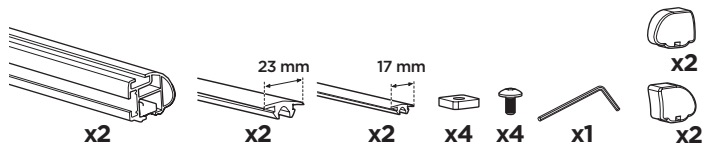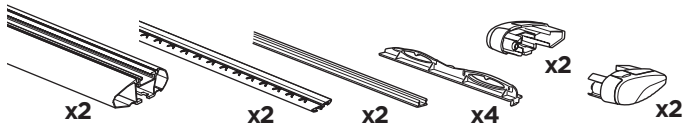

1


BAR

3




Thule  
WingBar Evo


A

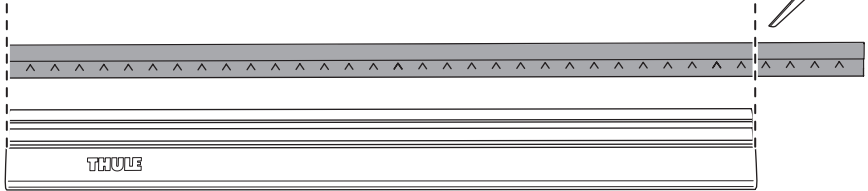



B

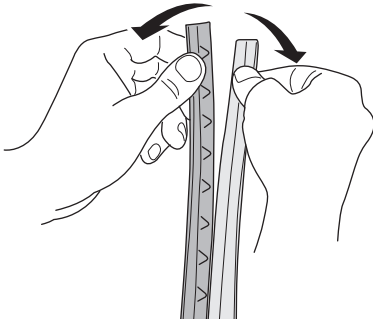


C

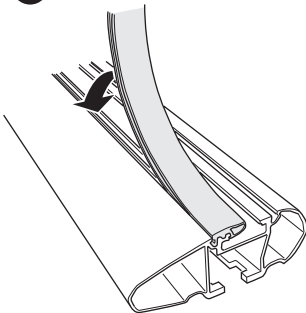

D

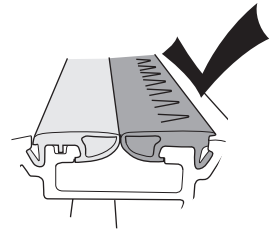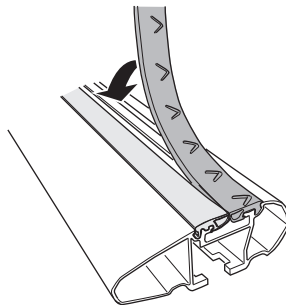

 Thule  
AeroBlade

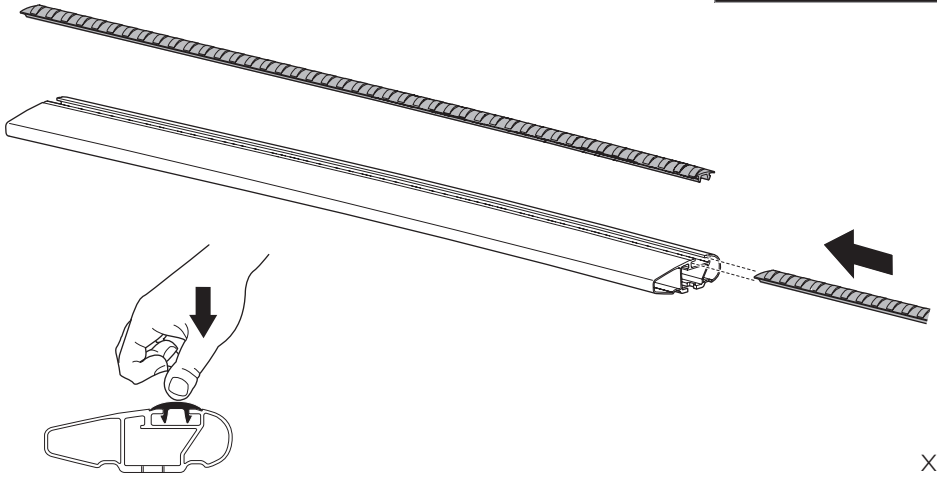

2

BAR

3


A

 Thule  
WingBar Evo















B

 Thule  
AeroBlade

C

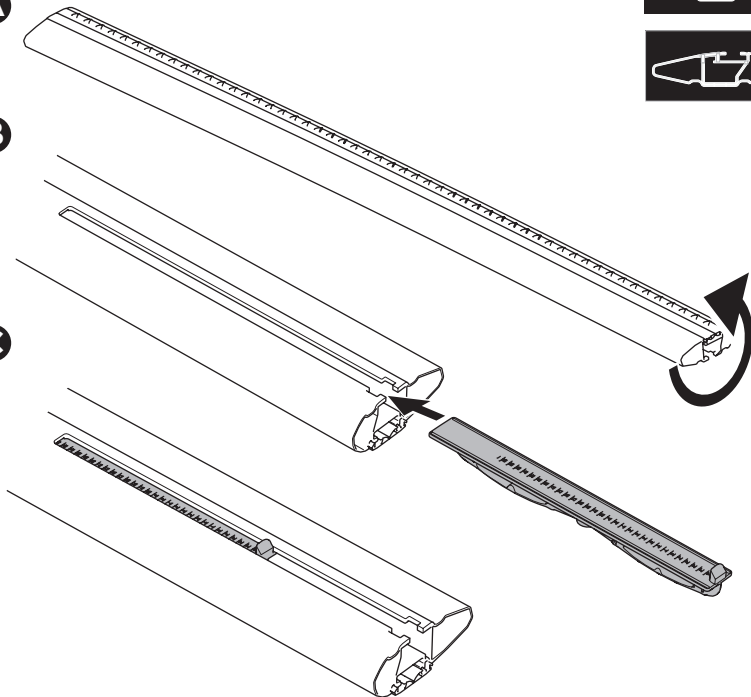


3

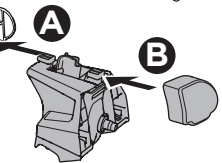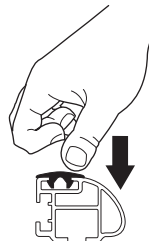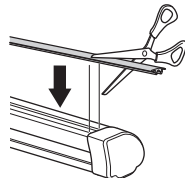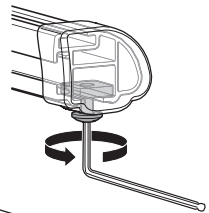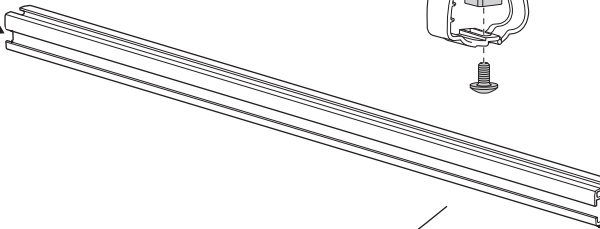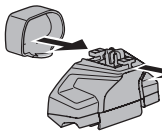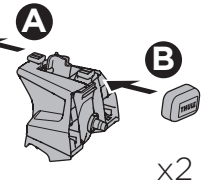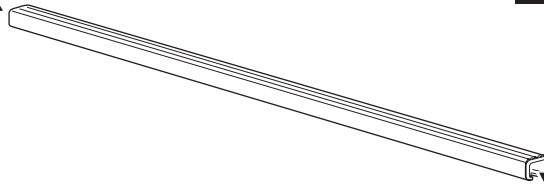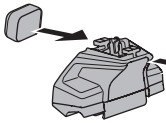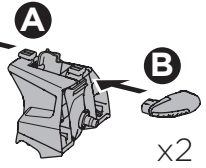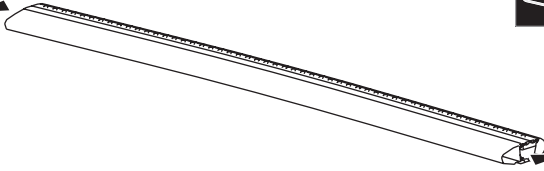


4



A

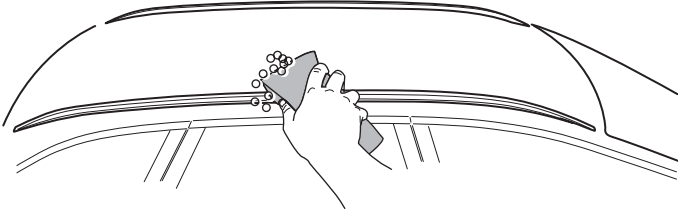

B

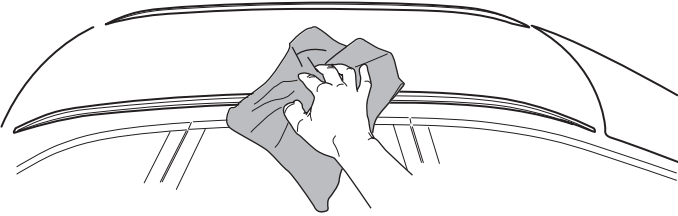


5

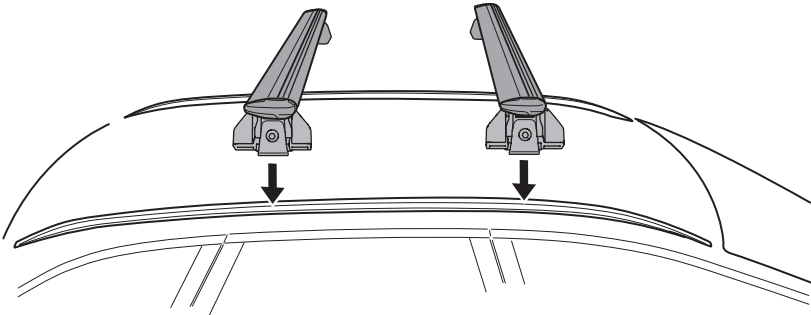
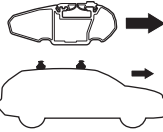


6


~ 700 mm

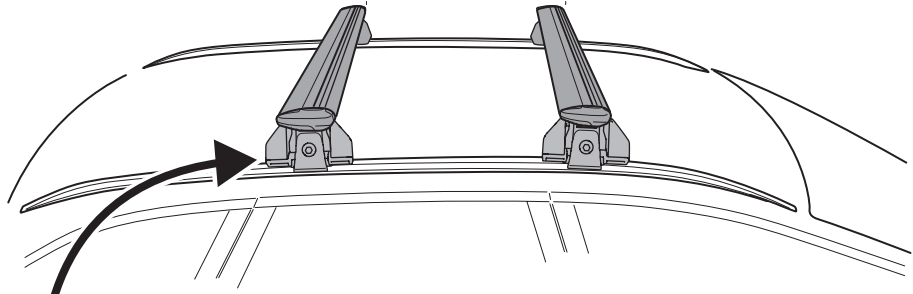

1


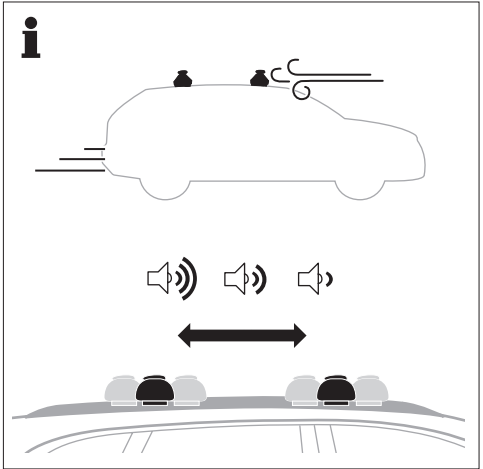
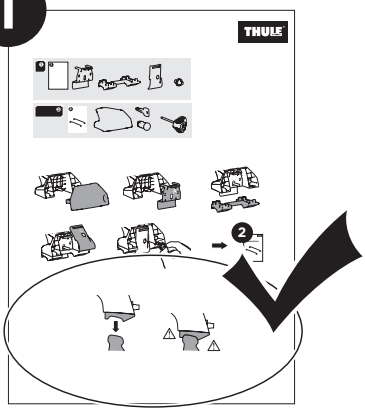


7

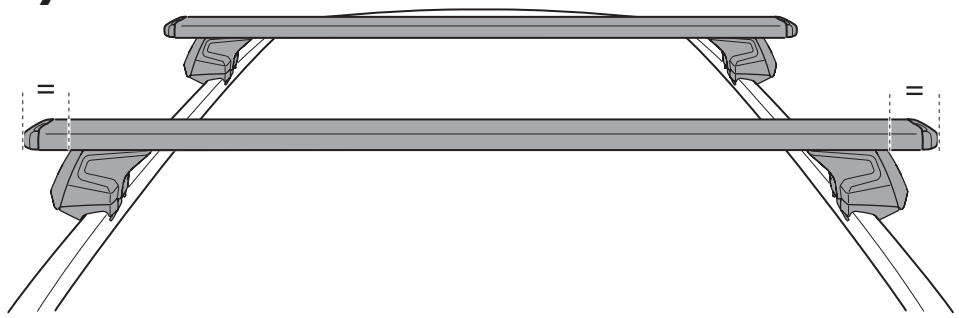




8

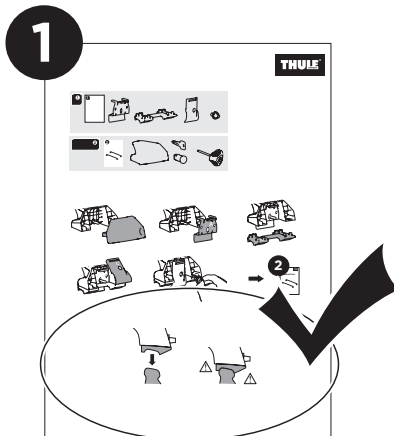
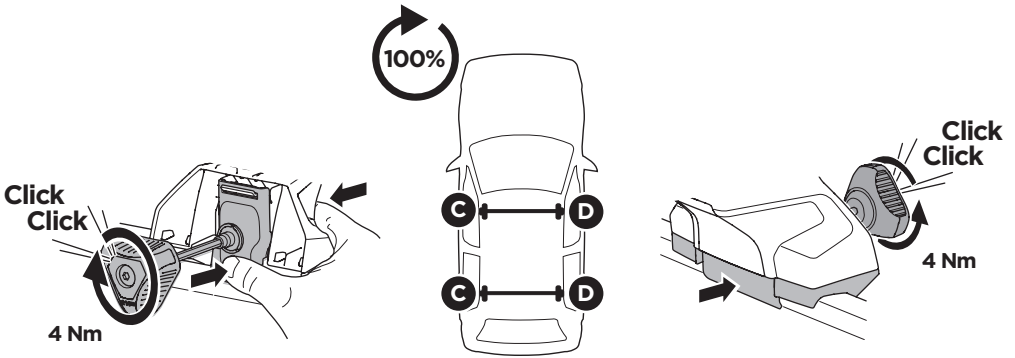
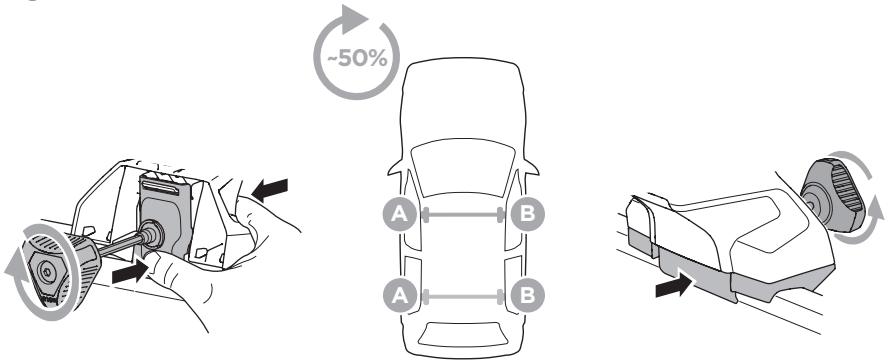


9

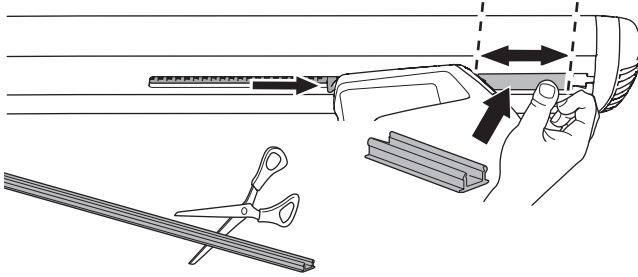

x4


17 mm

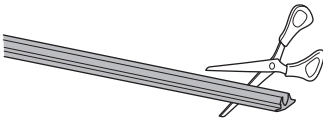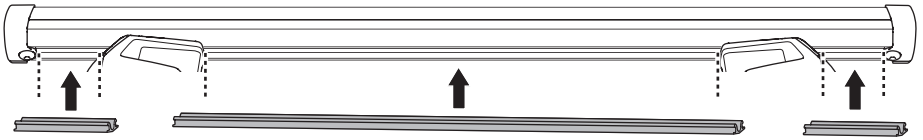


x2

10


A

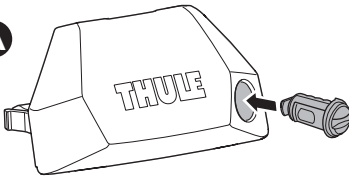

B

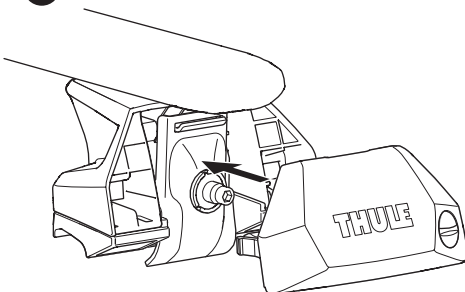


C

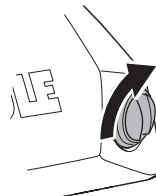


x4


**i** Accessory




**A**

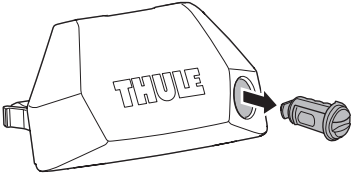


**B**

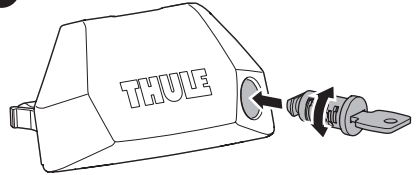

**C**

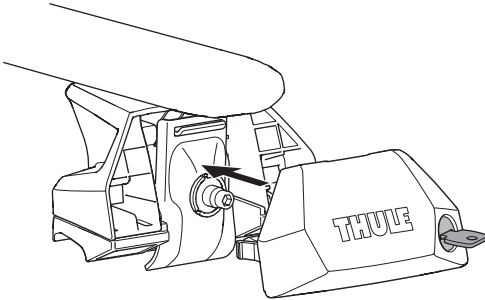


**D**

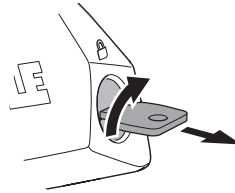

x4

**11**

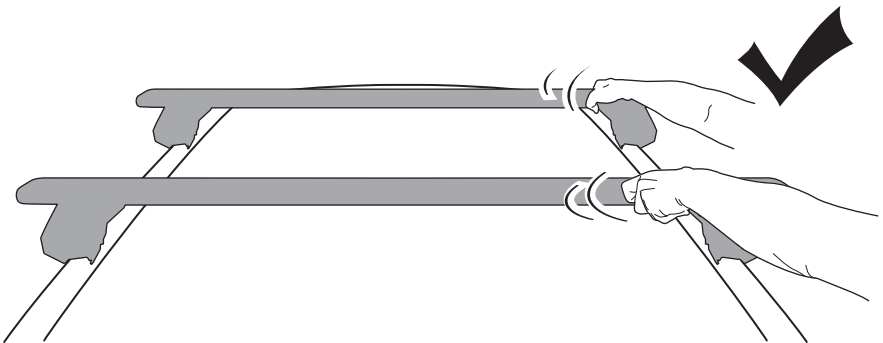

**i**

