


IVY 8 PENDANT

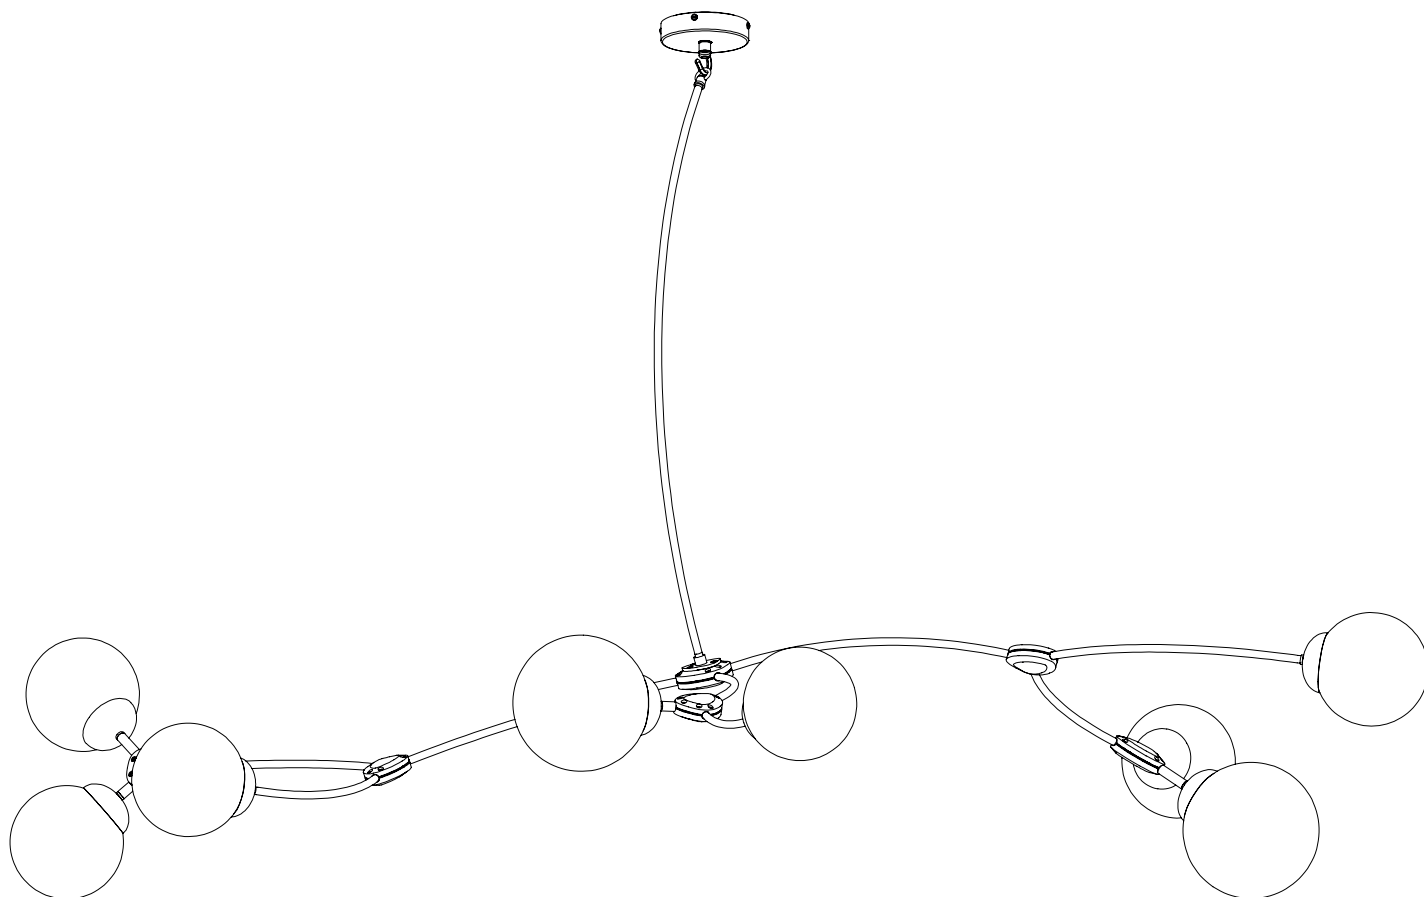


! Please handle with care and wear gloves at all times during assembly and installation to avoid damaging or marking components.

TECHNICAL

bulb holder	8 x E14 - 40w max (golf-ball, size : 45mm diameter max.)
weight	12 Kg
cleaning	dust using a dry lint-free cloth as required
replacement/ repairs	please contact CTO Lighting
warranty	1 year from date of delivery
certification	CE

COMPONENTS

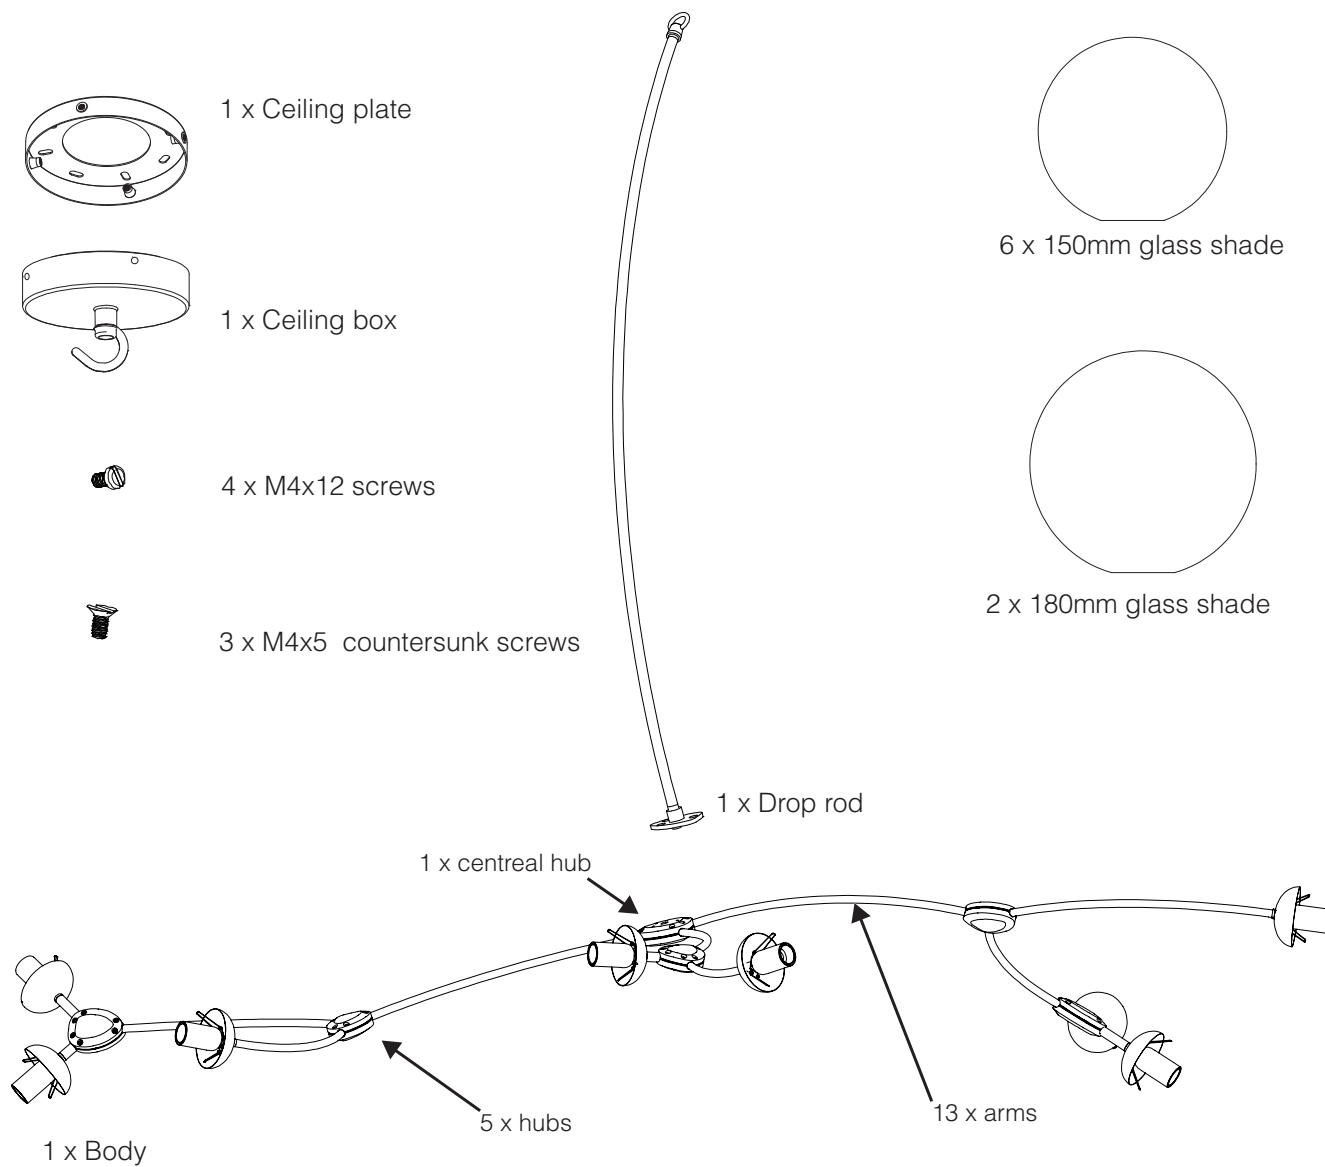


BEFORE INSTALLATION

- Installation **must** be carried out by a qualified electrician.
- A minimum of **two people** is required to install this pendant.
- Check that the ceiling fixing and components are suitable and strong enough to support the weight of the pendant.


INSTALLATION SUMMARY

1. Remove contents from the box.
2. Loosen screws so arms can rotate.
3. Twist arms and hubs to align arrows
4. Tighten screws
5. Fit drop rod
6. Make wiring connections and hang pendant.


1. Fix the ceiling plate to the ceiling.
Ensure that suitable screws are being used for the surface you are mounting to.

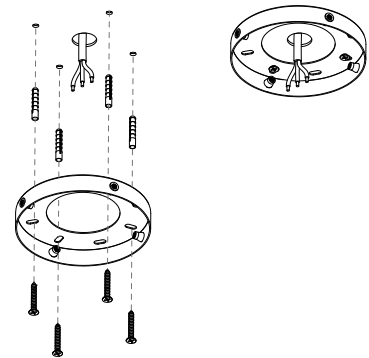


2. Moving the lighting modules into the correct **positions**:
A. Place the body of the pendant onto a flat surface as shown below.

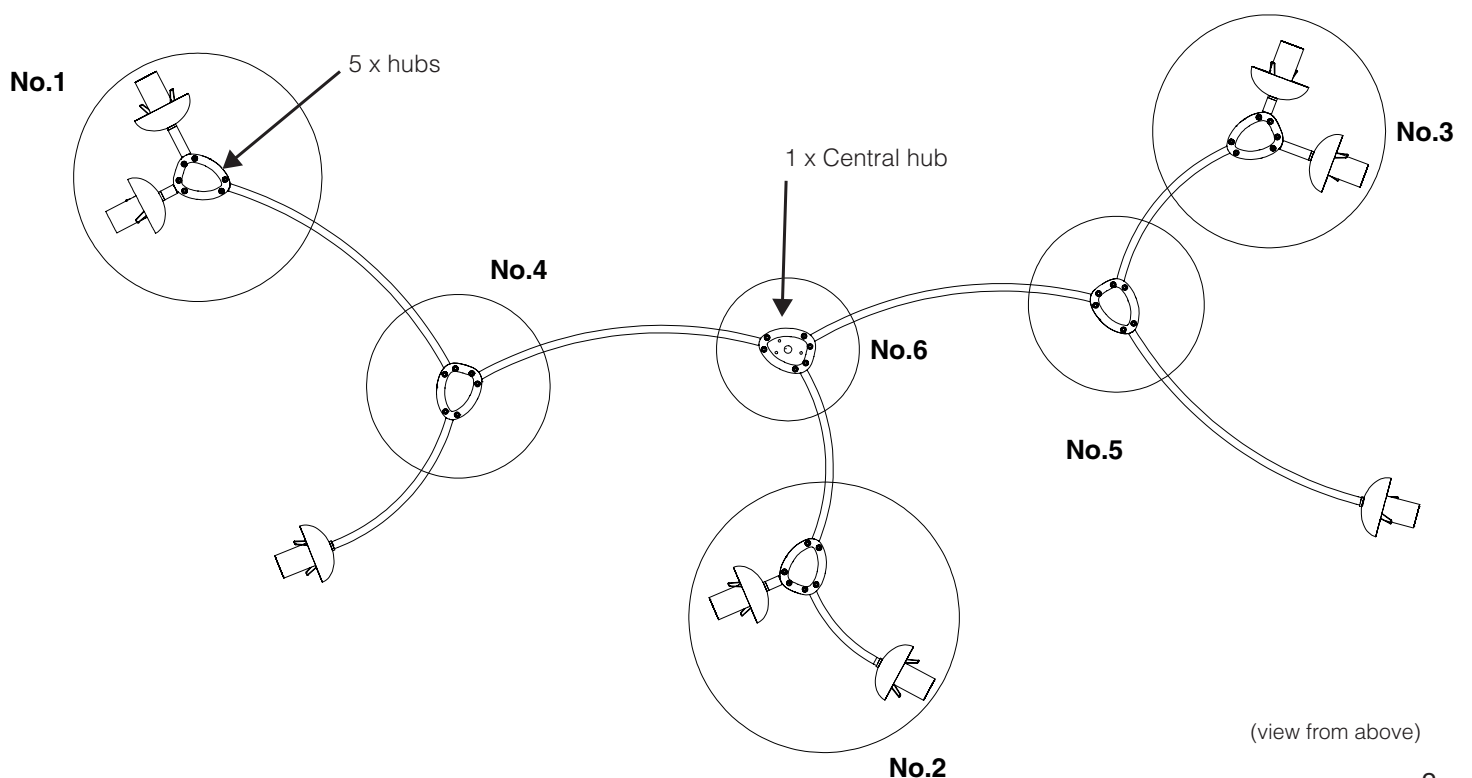


B. Starting from the outer hub(No.1, No.2, No.3), loosen the screws highlighted with arrows on the diagrams below
Do not fully undo the screws from the modules, just enough to allow the arms to rotate.

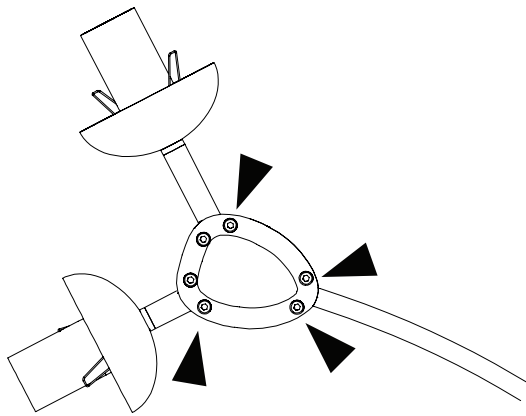

No.1


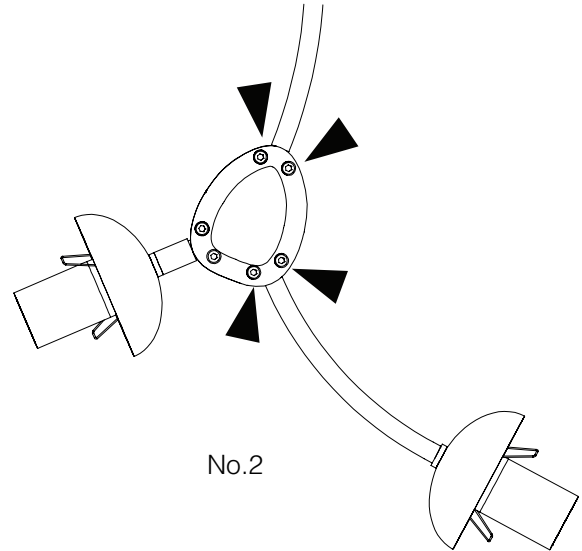


No.2

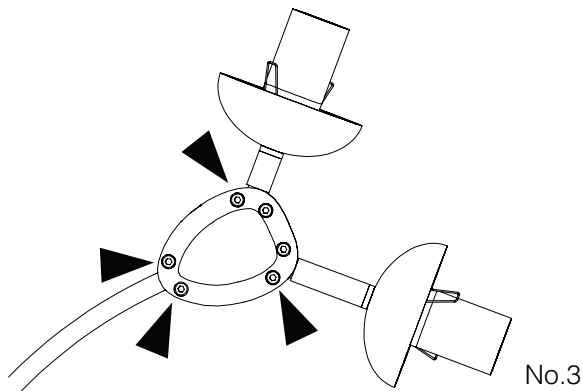

No.3

C. Gently turn the parts so the arrow stickers on the arm and the arrow stickers on the hub align.

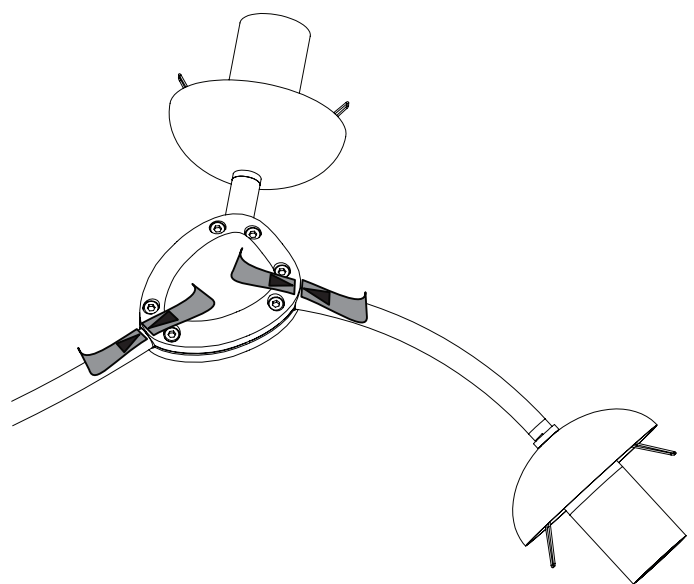
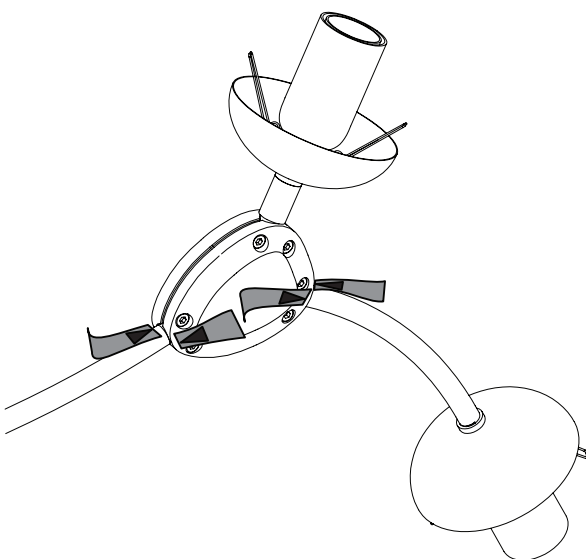


D. Tighten the loosened screws securing the parts in place.


E. Tighten all 6 screws on the hub and repeat several times until all screws are well tighten and fully secure.

NOTE: Do not remove the arrow stickers before you install the light to the ceiling and attach the shades.

- F. Repeat the stages **B,C,D** and **E** for the inner hubs (No.4, No.5). Loosen all 6 screws slightly.
Do not fully undo the screws from the hubs, just enough to allow the parts to rotate.

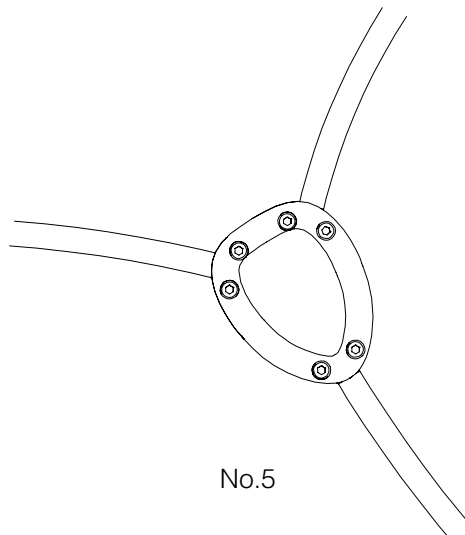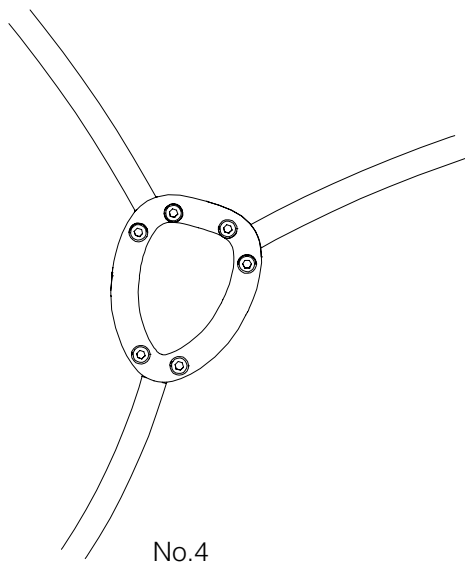


- G. Repeat the stages **B,C,D** and **E** for the central hub(No.6). Loosen all 6 screws slightly.
Do not fully undo the screws from the hub, just enough to allow the parts to rotate.

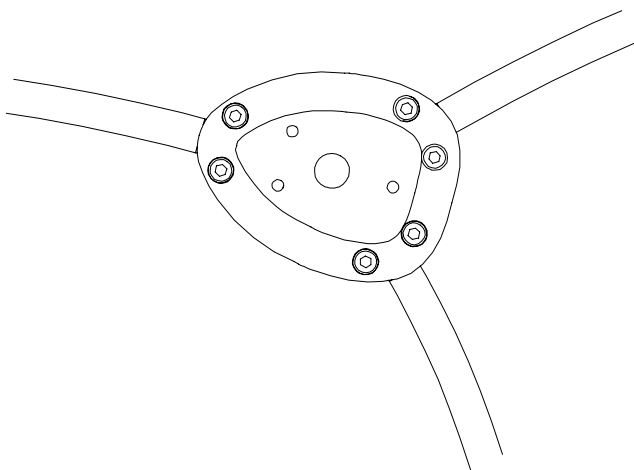


Note: Take care when using the allen-key not to damage the socket on each screw.
If your allen-key is not in a perfect condition, replace the tool before continuing.
Use allen-key size No.3 (3mm).


3. A. Feed the power cable through the drop-rod.

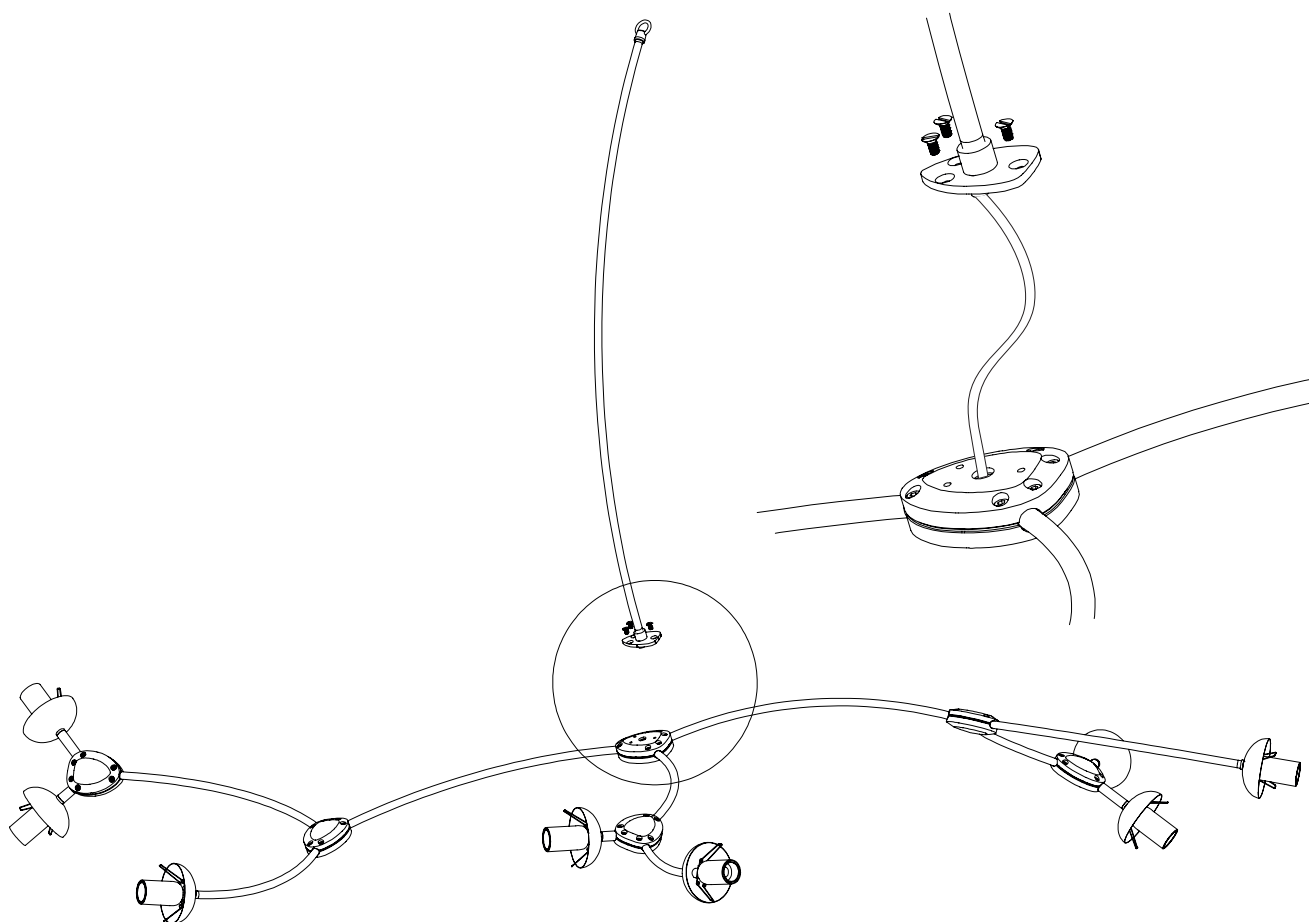

- B. Lower the drop-rod to the central hub and secure with the 3 x M4 countersunk screws.


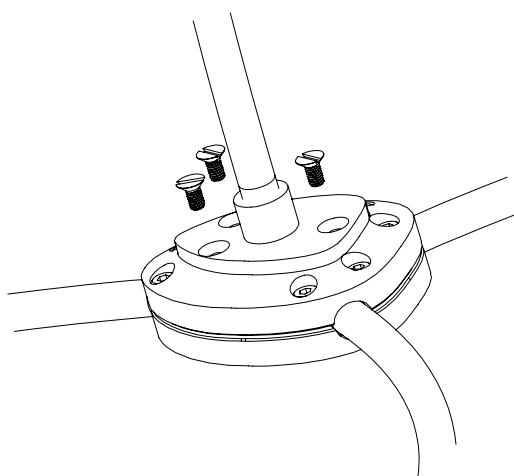


4. Feed the power cable from the drop-rod into the ceiling box and hook the drop-rod to the ceiling box

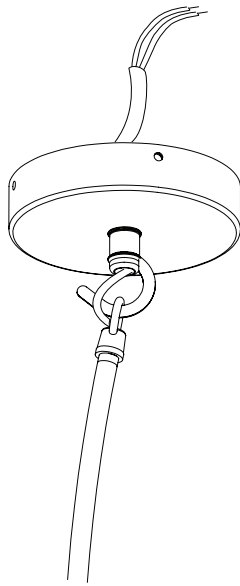



5. Raise the pendant towards the ceiling and make the electrical connections. Further raise the pendant, closing the ceiling box with the ceiling plate and secure with the provided screws.

NOTE: Ensure that the weight of the pendant is fully supported during the electrical installation.

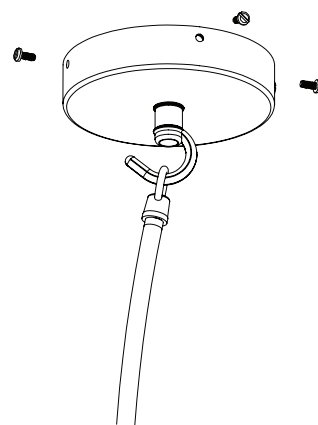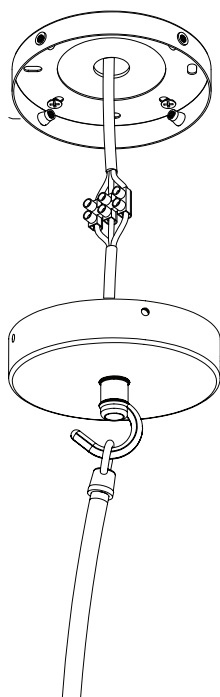

6.

- A. Fit the bulb (not supplied) to the lamp-holder.
- B. Fit the glass shades to the pendant body.
Pinch the spring clips inwards and hold, slowly feeding the glass shade over the spring clips. **Do not** release the glass shades too quickly.

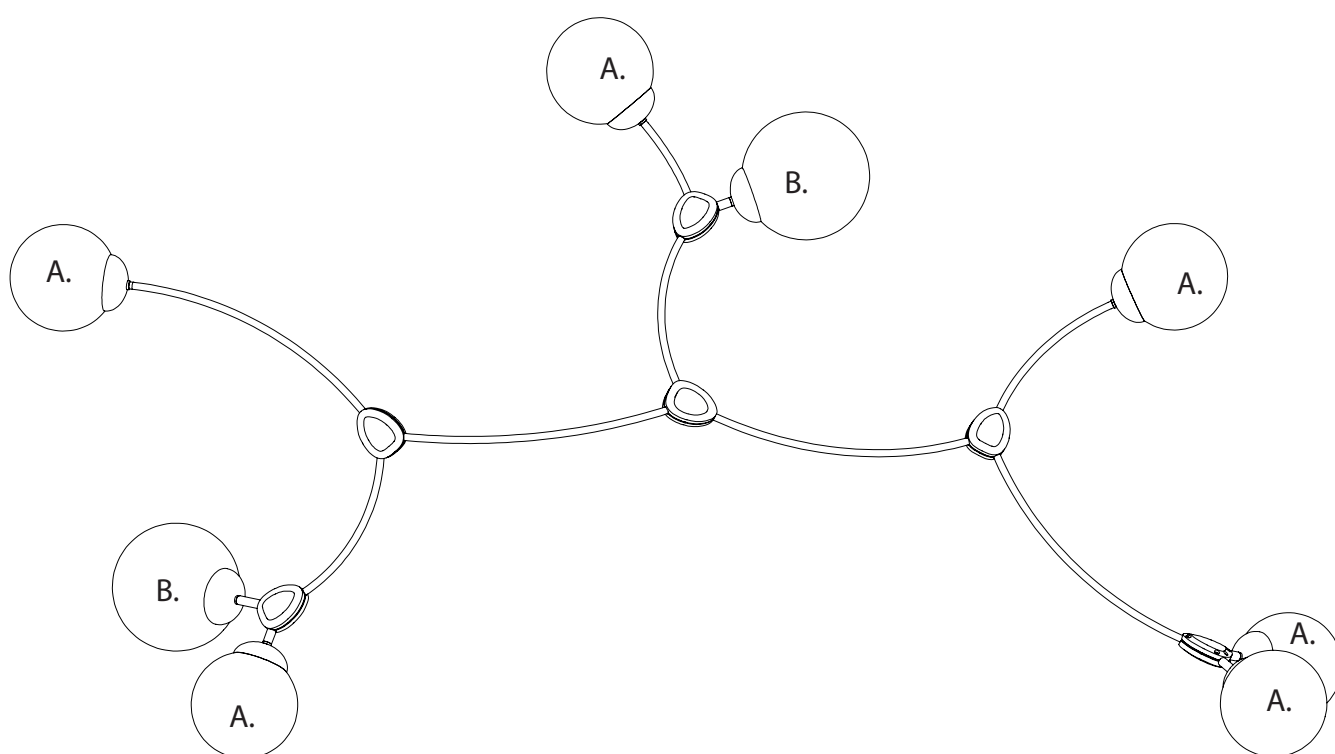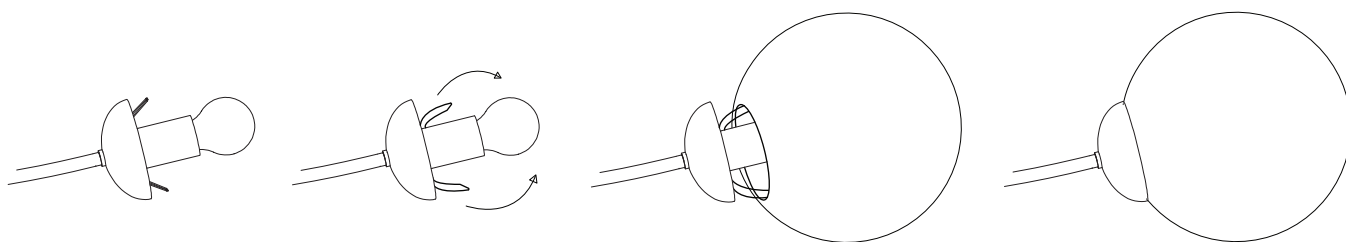

(view from below)

A. 150mm diam. glass shade
B. 180mm diam. glass shade

CTO Lighting
9 Cloudesley Road
London
N1 0FH

tel: +44 (0)20 7686 8700
fax: +44 (0)20 7686 8701

info@ctolighting.co.uk
www.ctolighting.co.uk