

# Snap Track - Recessed Trimless

## Datasheet



### Product Codes

<b>Unit:</b> SRT (Snap Recessed Trimless)	<b>Length (m):</b> 1 2	<b>Color:</b> B (Black) W (White)
--	------------------------------	---



### Accessories Codes

<b>Unit:</b> LC.SIDE (L Corner Side) LC.IN (L Corner Inside) LC.OUT (L Corner Outside)	<b>Snap Type:</b> SRT (Snap Recessed Trimless)	<b>Color:</b> B (Black) W (White)
---	---	---


<b>Unit:</b> CB (Connection Bracket)	<b>Snap Type:</b> SS/SP/SRT (Snap Surface / Snap Pendant / Snap Recessed Trimless )	<b>Color:</b> B (Black) W (White)
---	---	---

<b>Unit:</b> LEC (Live End Connector) LFC (Live Flexible Connector) LSC (Live Straight Connector) EC.AL (Aluminum End Cap)	<b>Snap Type:</b> SS/SP/SR/SRT (Snap Surface / Snap Pendant / Snap Recessed Snap Recessed Trimless )	<b>Color:</b> B (Black) W (White)
--	---	---

### Track Dimensions (mm)

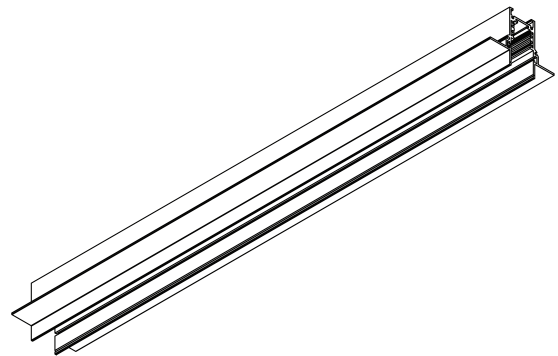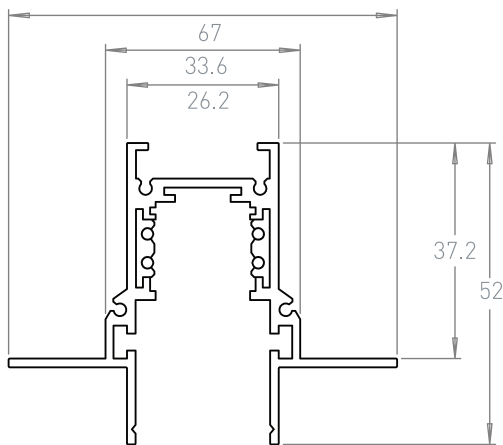


## Installation

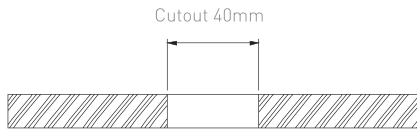


### Step 1

Cut 40 mm slot from framework.  
Box out if required.

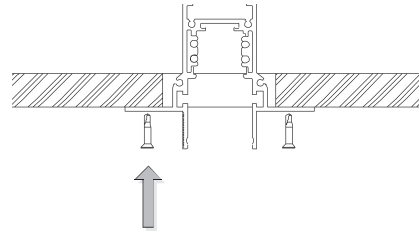


### Step 2

Screw Track to framework.

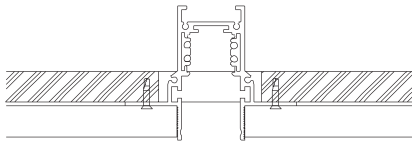


### Step 3

Apply 10mm Plasterboard up to edge of track.

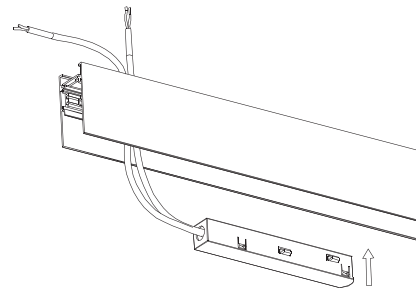


### Step 4

Snap Live end connector into track light  
and thread through rear of the track.

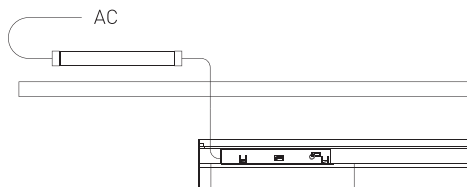

### Step 5


Wire cable from end connector into driver.

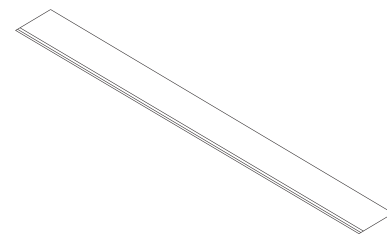

### Step 6


Installation Complete.

## Trimless Recessed Track

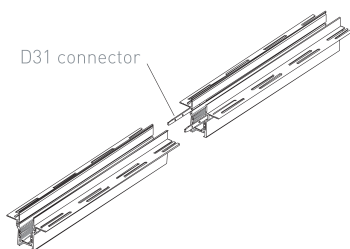


### Step 1

Insert the 2 brackets provided into the box.

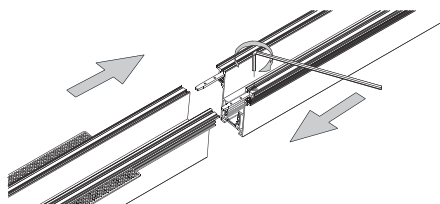

### Step 2

Fix with screws provided.

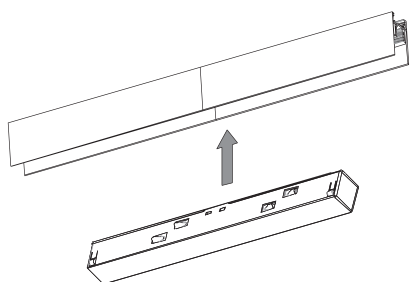

### Step 3

Insert straight connector.