

PROSPEED TRD/MAGI CATCH CAN SYSTEM INSTALL GUIDE



COMPONENTS IN KIT:


- (2.50") 1/2" HOSE
- (2FT) 3/8 HOSE
- (1) .500" VACUUM CAP
- (1) .375" VACUUM CAP
- (1) M6X1.00X.750" STUD, NUT, WASHER
- (1) FILTER

Installation:

1. Undo the PCV hose from the intake and passenger side valve cover, then remove the 6mm bolt holding the black plastic tee fitting to the supercharger, remove it from the hose that runs to the driver's side valve cover, install a 1/2" vacuum cap onto the port on the intake.



2. Remove the hose that connects the supercharger inlet (snout) to the valley pcv, connect the supplied 3/8" hose to the valley pcv and lay to the side, then put the 3/8" vacuum cap on the supercharger port.

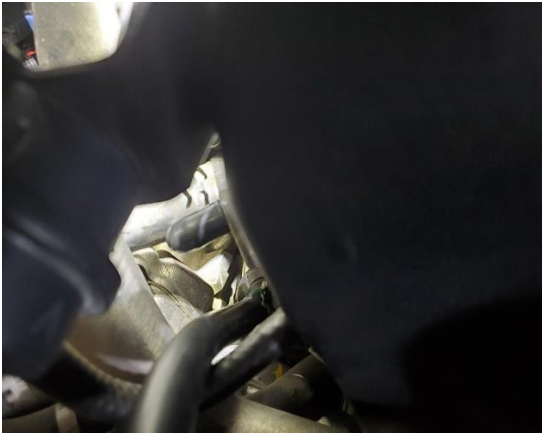

3. Slide the 2.50" long 1/2" hose onto the pcv port on the passenger side valve cover barb, then slide the catch can down on it using the barb at the very bottom, the mounting bracket for the catch can will utilize the spot where the PCV hose tee once bolted to on the supercharger, install the provided stud, then washer and nut, adjust catch can till it looks even, then tighten.
4. Attach the 1/2" hose that comes from the driver's side valve cover earlier, trimming as needed, to the remaining 1/2" hose barb on the tank. Then attach the 3/8" hose you installed onto the valley pcv earlier to the last barb on the catch can, trimming the hose as needed.



