



USER MANUAL

TONNEAU COVER







openroad4wd.com








INDEX

1.Product introduction-----	2-3
2.Precautions-----	4
3.Installation Steps-----	5-10
4.Use Method-----	10

1.Product Introduction

1.1 Accessories List


M1  1X	M2  1X
M3  1X	M4  1X
Adjust the accessory M5 used in the product according to the actual situation	

 Bag 1: Rolling Shutter Box Bolt	 Bag 2: Mounting Bracket Block And Nuts	 Bag 3.1: Mounting Brackets
 Bag 3.2: C-Clamp Bolt	 Bag 3.3: Slide Blocks	 Bag 4: Water Pipes and Fixing Rings
 Bag 5: Rubber block with Rolling Water proof Strap		

Please prepare the following stuff before installation:

Clean water, Duster Cloth/ Scrub Sponge, Tape Ruler, Hex Key, Hole Saw, Gloves

1.2 Product overview

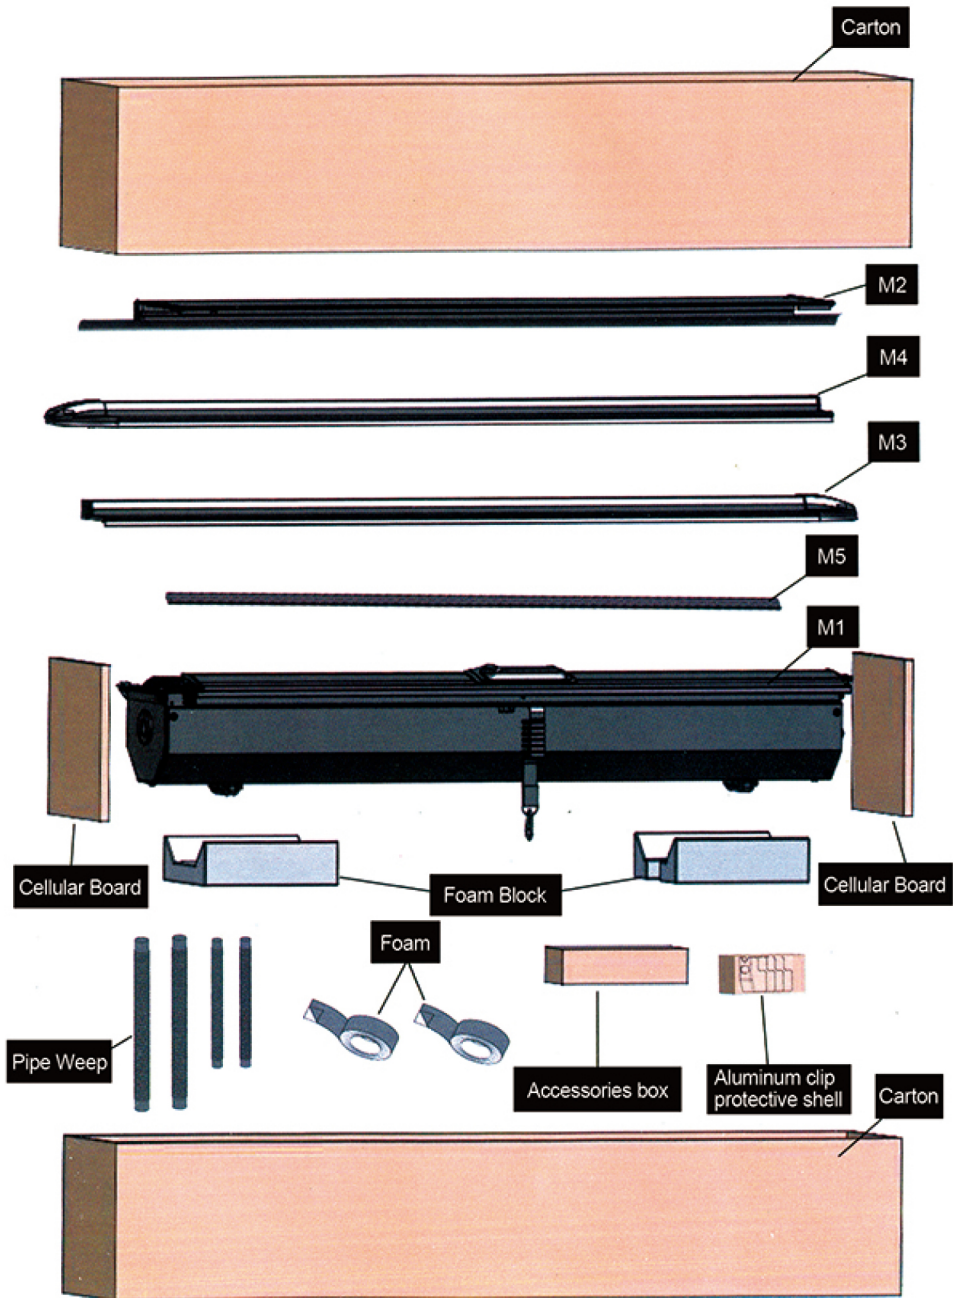

2.Precautions


1. Clean and lubricate the side rods and case regularly for quiet, smooth operation. Clean every 3 months or 6,000 km, or after driving in mud, desert, or other harsh conditions. Focus on removing sand, sludge, and debris from the side rods and screw box. Use the included silicone lubricant or a similar product. Avoid petroleum-based products on rubber seals. Teflon spray lubricants work best when applied lightly and often.
2. Check all bolts and clamps for tightness regularly. We recommend inspection every 500 miles or after extreme off-road use.
3. Do not use thick grease. It collects dust and dirt, then dries out. Do not use silicone dry lubricants—they can cause squeaking.
4. Always stop the curtain before cleaning or lubricating.
5. To clean side bar tracks: apply lubricant to a rag and wipe the inside of the track along the slide and wear strip. Repeat until all dust is gone. If needed, use a high-pressure water gun, but keep water away from the motor, controller, and wiring. Protect electrical connectors from water.
6. To clean inside the box: remove side rods and cover plates. Extend the curtain to access the box. Apply lubricant to a rag and wipe the spiral disc and all inner components. Clear the drain of debris. Reinstall all parts after cleaning.
7. Clean and maintain the product as you would the truck exterior. Neglecting maintenance can affect operation and shorten the product's life.
8. Do not drive with the tailgate partially open.
9. Remove all foreign objects—snow, ice, or debris—from the curtain before opening.
10. Do not pull the curtain from the rear while it is rolling.
11. Do not place objects on top of the rolling curtain.

Ignoring these precautions may cause serious damage and void your warranty.


3.Installation Steps



Step 1: Pull out the cover

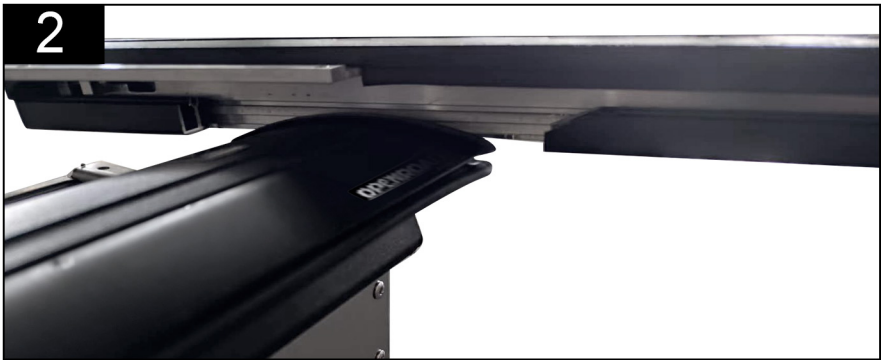

Step 2: Align visually with the protrusion on the side of the cover and the slides of the accessories M2/M3 inner side.

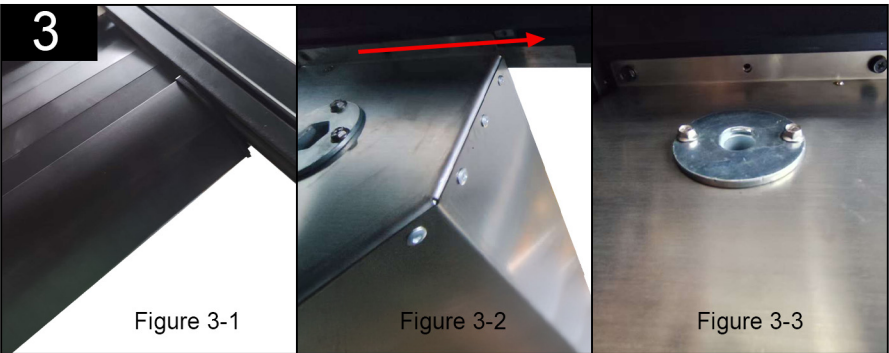

Step 3: Align the sliding blocks at the bottom of M3/M4 with the holes on the side of M1 and fix them with bolts. The final appearance is shown in Figure 3-3.

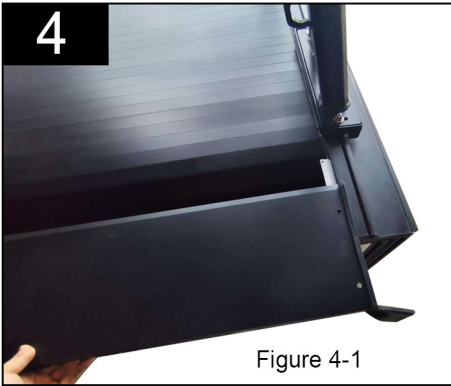


Figure 4-1

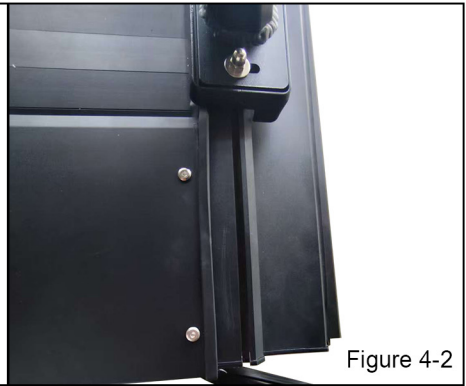


Figure 4-2

Step 4: Place the M2 on the M1. Align the bolt holes and tighten it. The final appearance is shown in Figure 4-2.



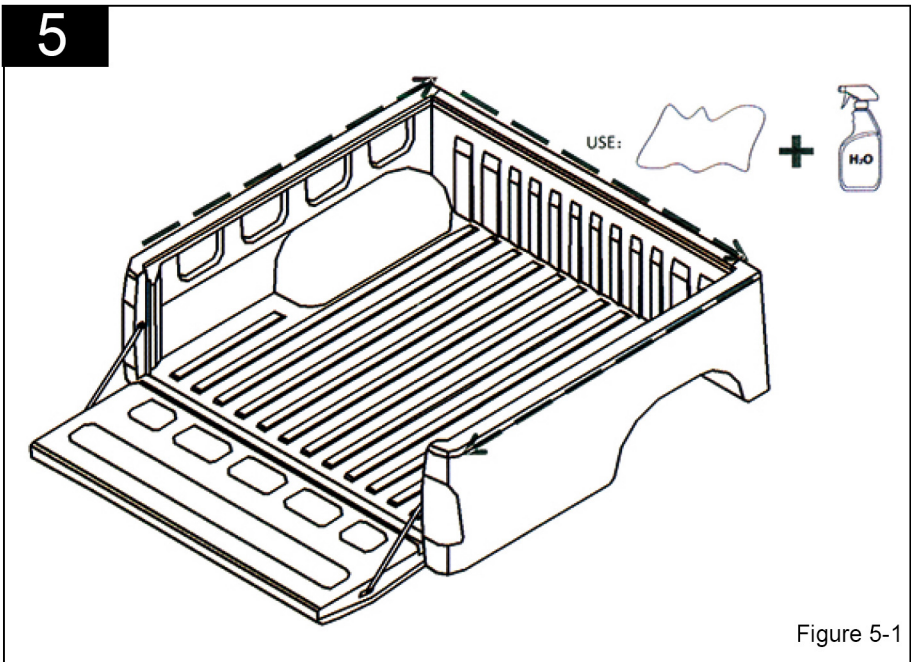


Figure 5-1

Step. 5 Wipe the top edge of your truck bed with water and rag.

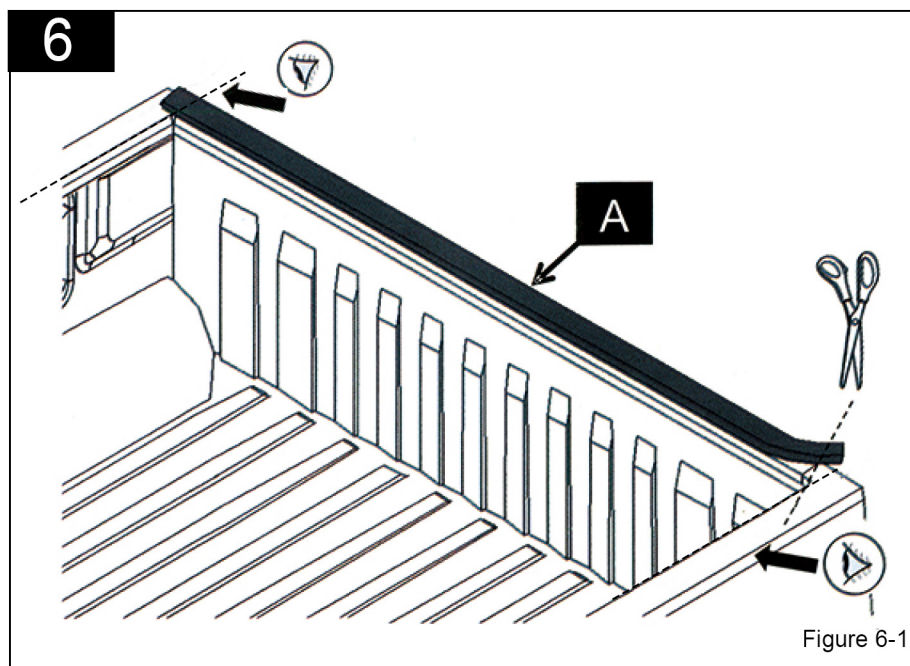

Step. 6 Attach the foam (Bag 5) to the top edge of bed front side. Tip: Align the ends of the foam bar with the inner sides of both beds.

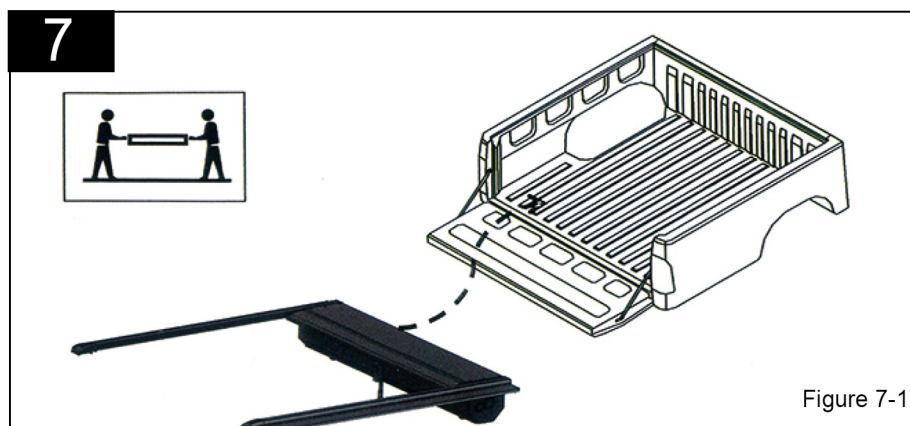

Step. 7 Load the tonneau cover onto the bed. Tips: For personal safety and no damage to the appearance of its products, it is recommended that two people carry the carriage to avoid rubbing the surface of the carriage and its products during the process.



Step8 Move the block (Bag 2) into the T-slot and stop it at the appropriate position. Fix the L-shaped bracket (Bag 3.1) and the slider bolt to the half-joint by nuts.

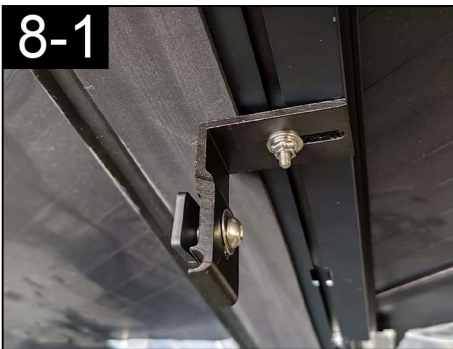


Figure 8-1-1

Step 8-1: If your truck bed is built with rail system, please fix by the block (bag 3.1) and short bolt (bag 3.1). The final appearance is shown in Figure 8-1-1.





Step 8-2: If your truck is built without rail system, please combine the clamp as shown in Bag 3.1.




Figure 8-2-1

Adjust the distance of the bracket and the tightness of the C-clamp by bolts. The final appearance is shown in Figure 8-2-1.

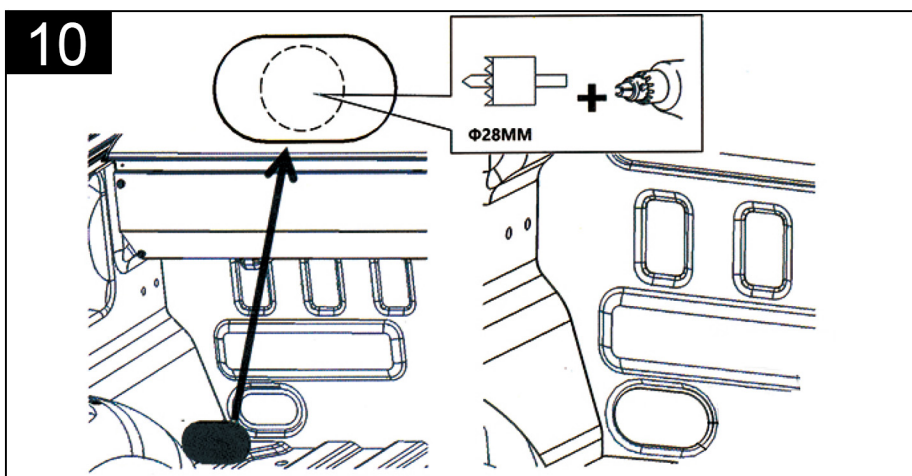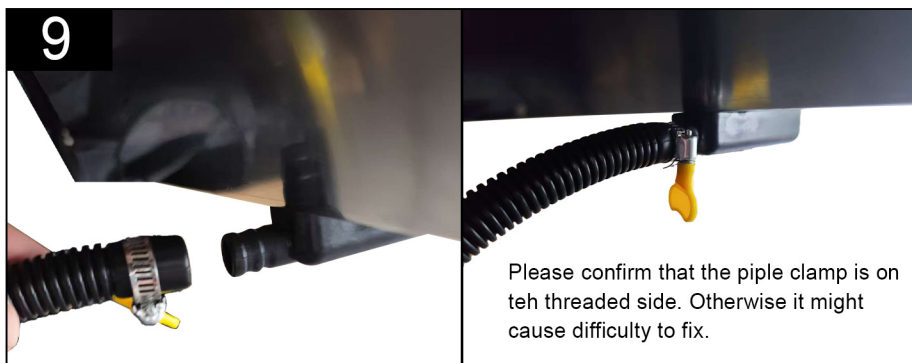

Step 10: Make holes at the designated punching positions on the Bed using the hole saw.

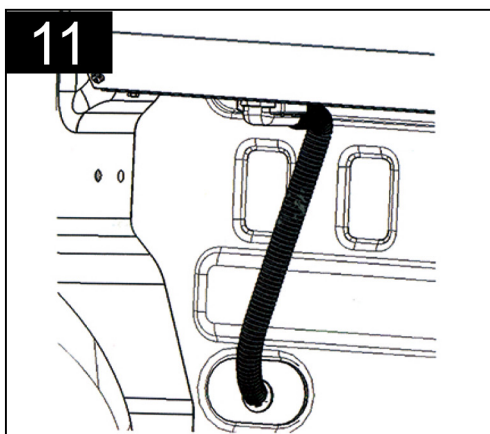

Step 11: Plug the box drain pipe out of the car through the rubber plug

12




Find two holes on each side edge of the cover end.




Insert the bolt.

3.Use Method

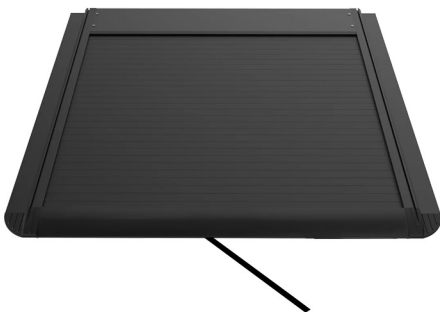

Strap unlock: Pull the strap to the right

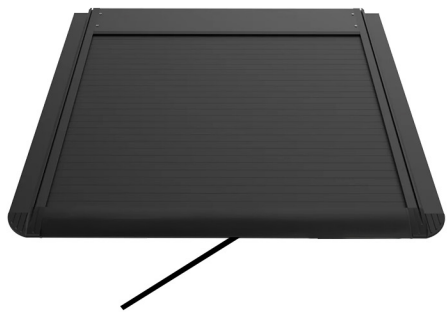

Strap lock: Pull the strap to the left



Contact us:

Kol : influencer1@openroad4wd.com

Dealership: sales1@openroad4wd.com

Customer Service:

Email: info@openroad4wd.com

Call back form: openroad4wd.com/pages/customer-service