


Assembly Instructions: Before starting please find a carpeted or soft smooth area to lay panels on

- 12 Insert 6 rods (B) into sockets located inside of side panel (A). Fasten LOOSELY with 4 plastic screws (C).
- Insert the other end of the 6 rods (B) into the other side panel (A). Fasten securely with 4 plastic screws (C).
- Now tighten original 4 screws from step 1.
- Insert nine storage bins into assembled rack three rows, three bins each row. Bins may be laid flat on rack or tilted for case of viewing. Have fun mixing the bin colors to your preference.

DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED ADULT ASSEMBLY REQUIRED

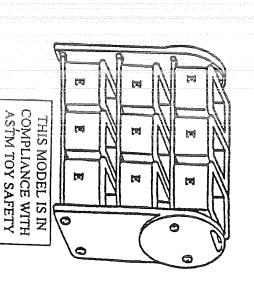

STANDARD F963-86