

Blinds4You

Measuring Guide for **Roller blinds** in an **Angled Bay window**

With Blinds4You, measuring for your beautiful new blind is easy. Just follow this step-by-step guide, taking care to double check as you go and look out for some handy tips to help you save time too. Below is a handy guide for measuring for Roller blinds in an Angled Bay window.

This guide works for:

- Standard roller blinds
- Electric roller blinds
- Day & Night roller blinds


Step 1

Before you start measuring, decide where you want to fit the blinds – top-fix or face-fix. Our Roller blind brackets come out by **50mm** if top-fix or **70mm** if face-fix. Look out for obstacles like window handles or air vents that may get in the way. If you do, add these onto the depth of your brackets to create reference measurement point X.

As well as your measuring tape, you will need 2 pieces of paper/card (A4 or A5 is fine), a pencil and a ruler.


Step 2

Place your two paper pieces side by side as shown and mark the X measurement taken before on both sheets.

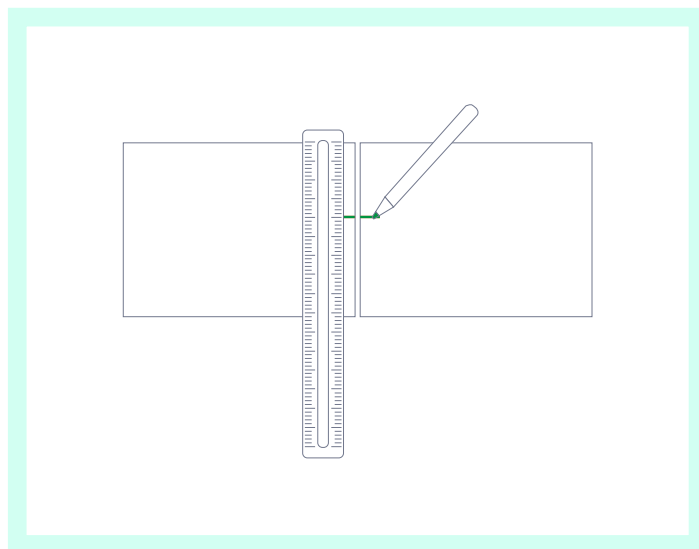

Step 3


Position the paper against the window frame on the sill. Move the paper along the sill until you see the two marks meet.

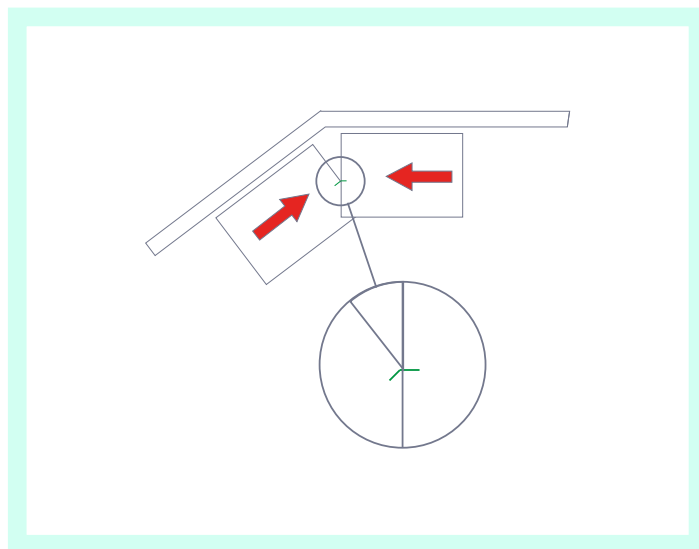


Step 4

Use your pencil to lightly mark the window sill where the paper edge meets the frame.

Repeat for other angles in the frame.

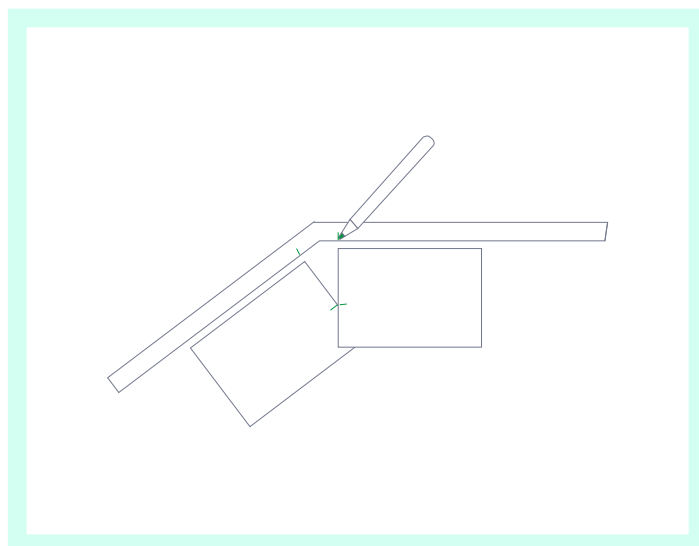

Step 5

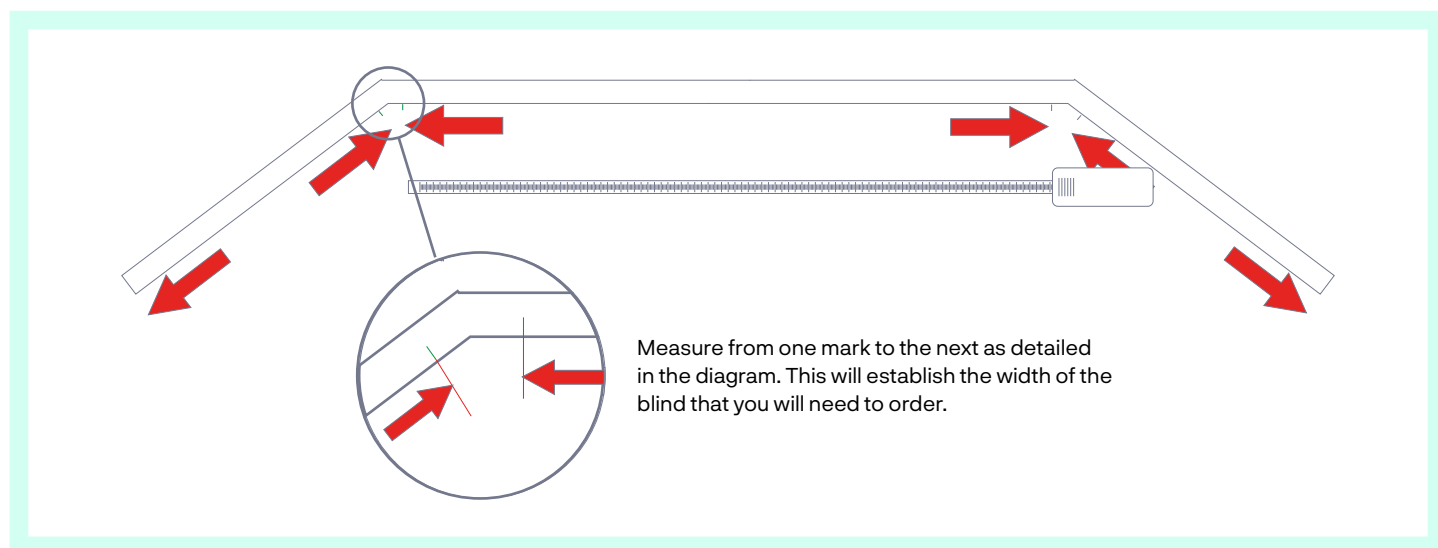

Measure the distance between marks to get the blind width.

Handy Tip: Leave the pencil marks untouched – these will be a useful guide for fitting your new blind.



Step 6

To measure your drop, take a measurement from the top of the blind to where you want it to rest – typically the window sill.

Once you have noted your measurements, enter the sizes into www.blinds4you.co.uk/collections/roller-blinds and choose the Exact fitting option. We will make your new blind to your sizes without deductions and send them out to you ready to fit.