BON PERGOLA

Manual Zipper Screen Installation Instruction

Section 1 -Tools		P2
Section 2 -Installation	s	P3-P8



Section 1 Tools required:

Electric Drill	Philips Head	Screw Driver (Flat Head)	Allen Key Set (3mm)
Self Tapper Screws	Levelling Instrument	Motor Regulator	Electrical Adhesive Tape
Wire Clamp	Measuring Tape		

***Motor Regulator, Electrical Adhesive Tape, Wire Clamp is for motorize unit


only.

Section 2 Installation

Step 1:

Clear work area and lay all parts to ensure all parts are contained in the box

***NOTE: Before installing, double check the sides are level. (not level could cause the screen to fail overtime) ***

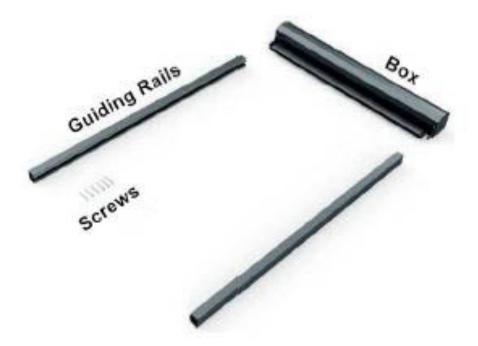


Remove front cover



Step 2:


Before installing, lift up the screen and pull down and push upward to double check if the screen can retract back to the top without falling down after you push up. If it slide down after push up, you will need to follow the increase tension instruction on our website Q&A section to increase its tension little by little until it is completely stay up.

***NOTE: Failed to check tension could result in taking the screen down and reinstall it again.

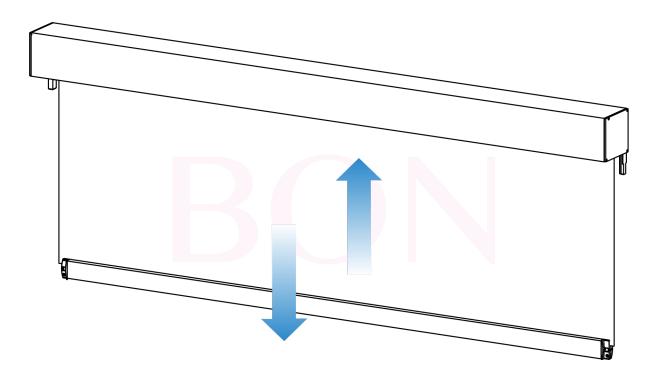


Step 3:

Pre Drill holes for the screw to connect the side channel and the pergola post later.

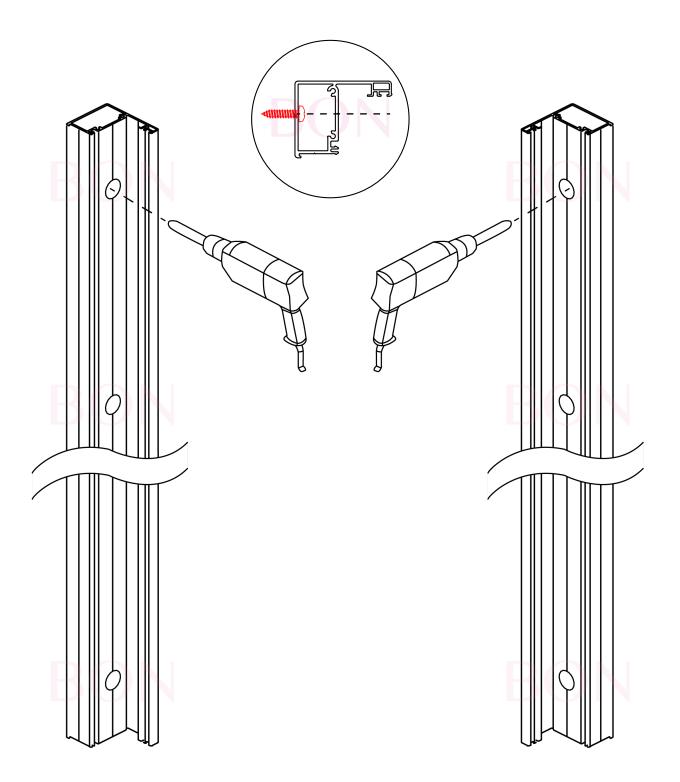


Step 4:

Separate the front rail, plastic zipper guide insert, and back rails. Insert the back rails into sides of box cassette (so they are in one piece), then screw it onto the pergola with self-tapping screws on each side.

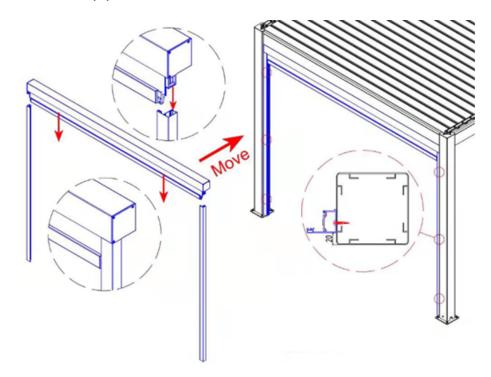


*** Note, plan which side you want the screen to align to before screwing the side rail. ***

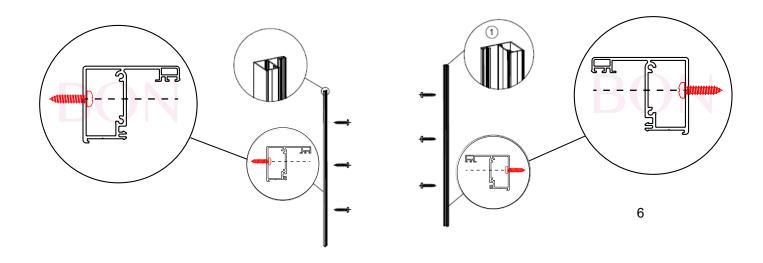


Step 5:

Insert the zipper with fabric into the plastic zipper guide insert rails and align it to the side rail .

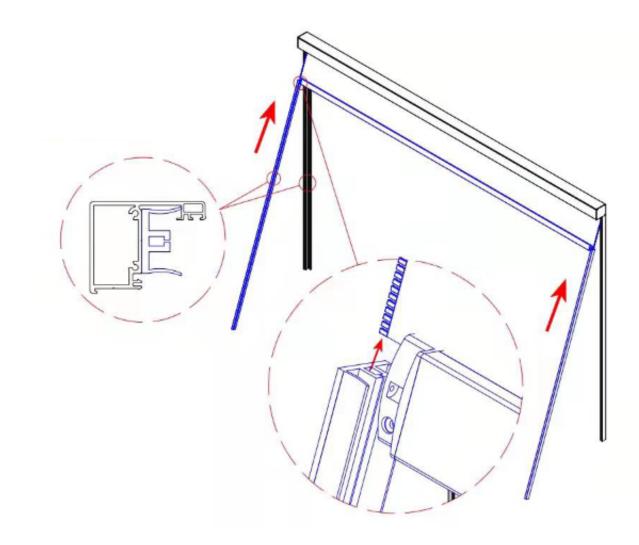

Step 6:

Assemble the front rail tight by pushing the front rail into the back rail (while the plastic zipper guide insert is within).

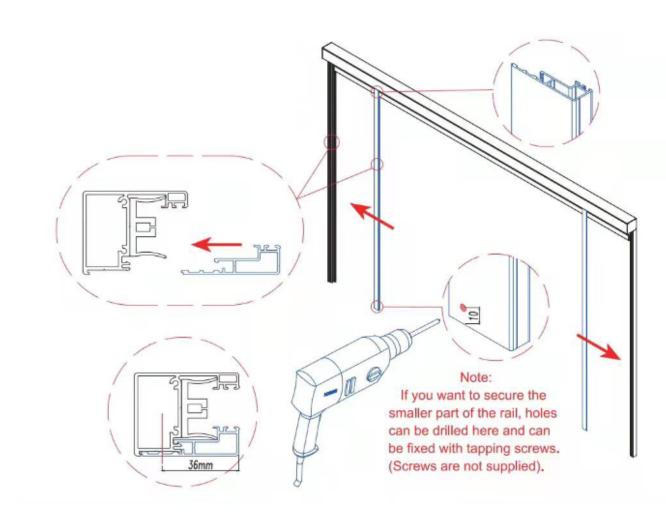

Step 7:

Pull the fabric down only after the screen is fully assembled for testing.