

J-MOUNT™

FITMENT GUIDE

1




Press four nylock nuts into the cavities on the four corners of your base plate

2



Place the top piece of the handlebar clamp under your baseplate and thread the two longer screws with washers from the top of the plate

3

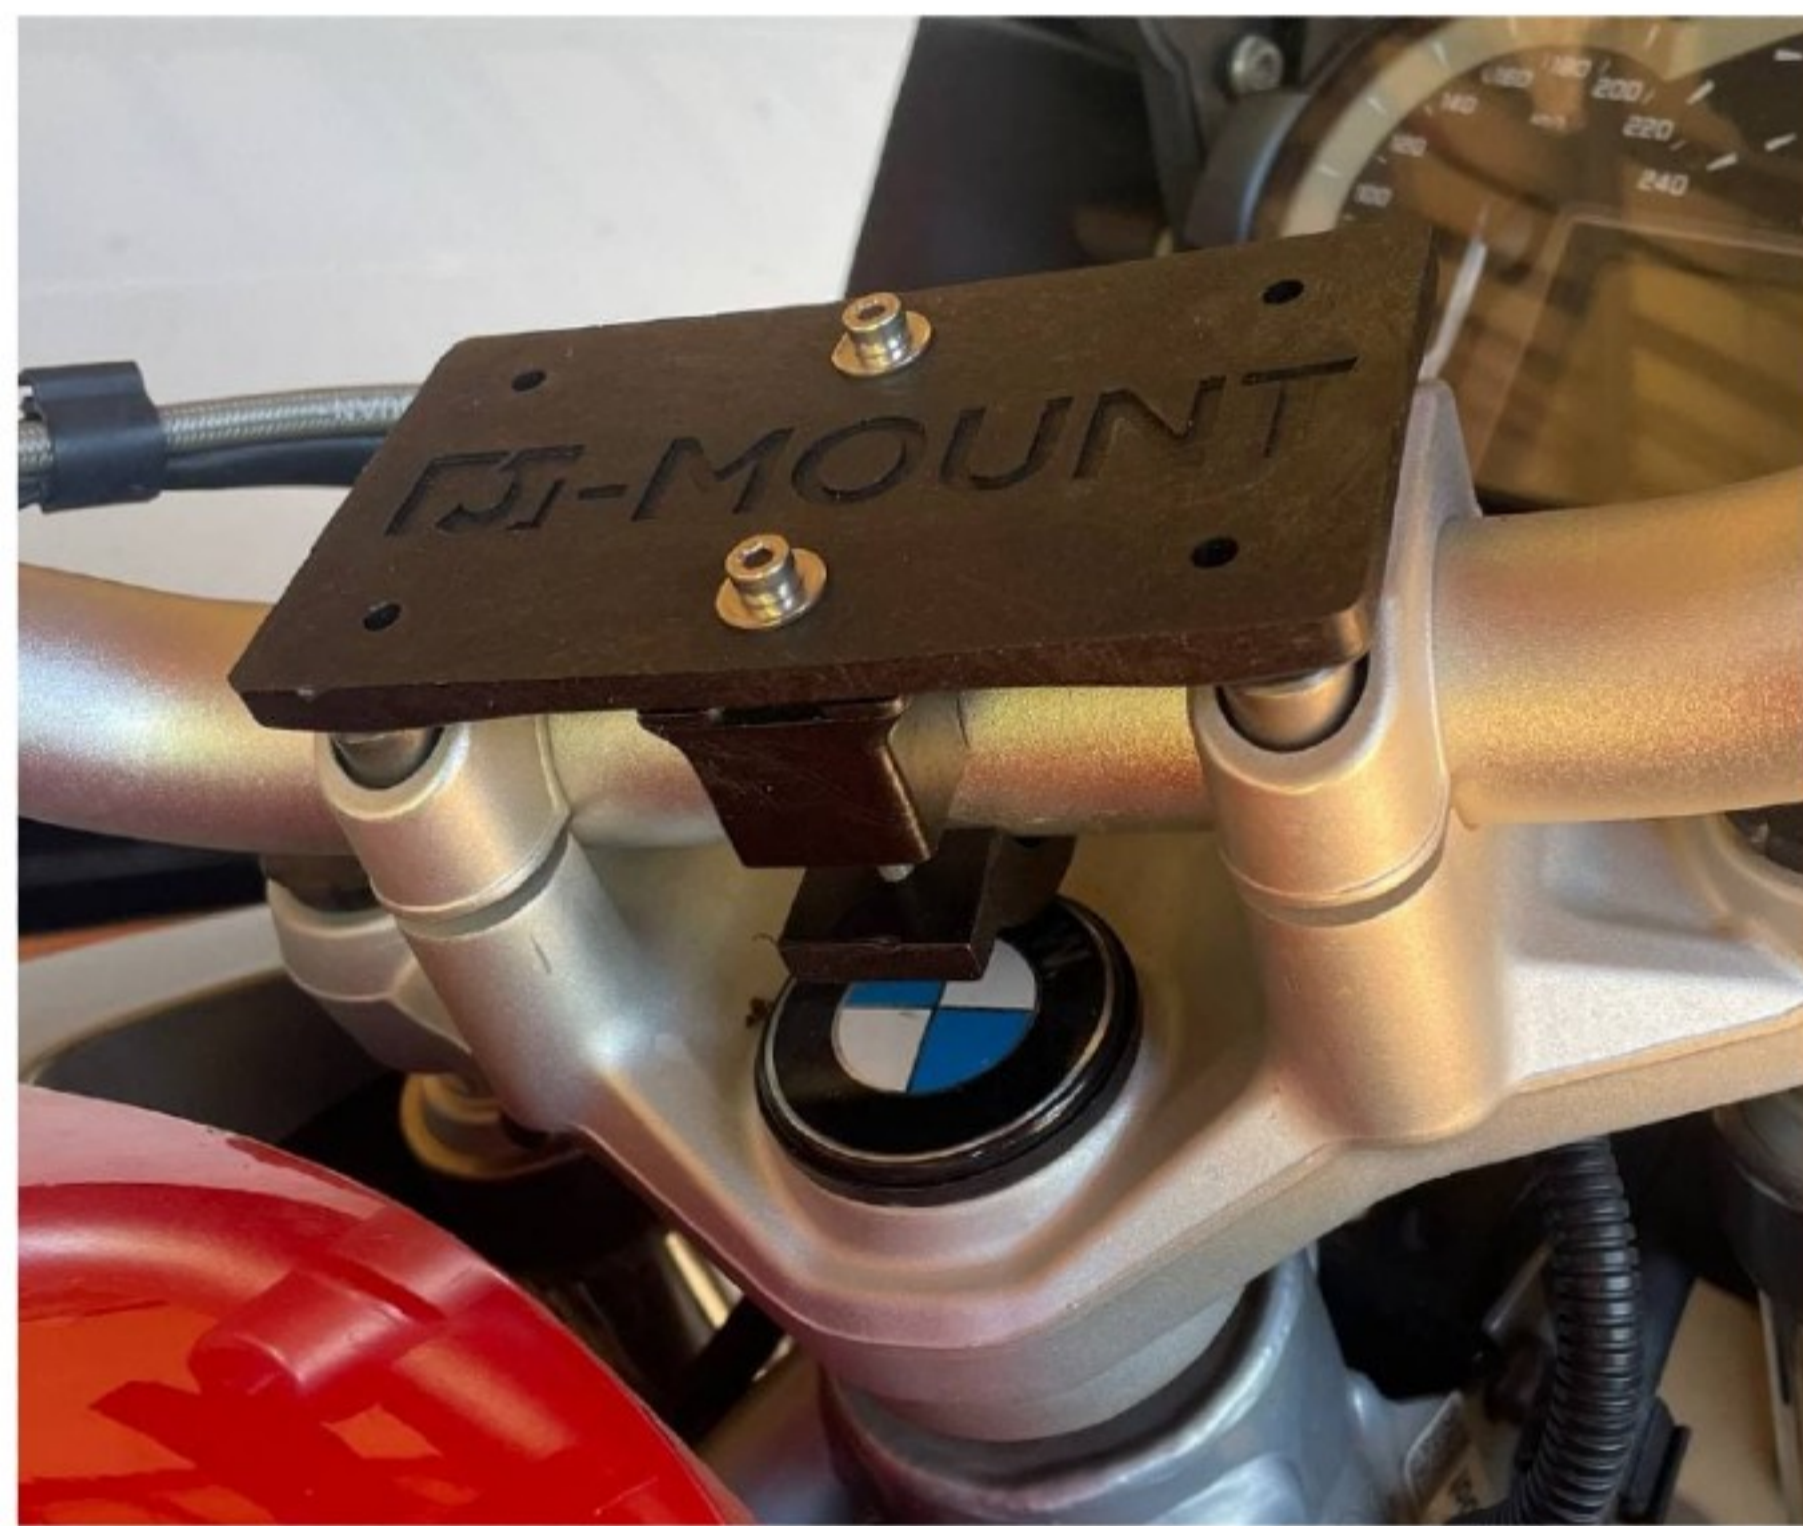

press the two other nylocks into the bottom piece of the handlebar clamp and evenly tighten the screws over the bars from the top

4



locate your baseplate in the desired location and then tighten it down evenly on both screws making sure not to overtighten

5



place the single mount in line with the cavities on either side of the baseplate and screw it down using the shorter screws

6



repeat on the other side with your second single mount
NOTE: do not overtighten any of the screws as this will strip the cavities