


Multibank Post Installation Guide

This is a guide to installing your multibank on posts. This includes information for ground or concrete mounted posts.

All letterboxes should have their mail slot within 600mm and 1500mm from the ground, no higher, no lower.


This means that our multibanks can be a maximum of 6 boxes high due to the size of the boxes and the posts.

1 High

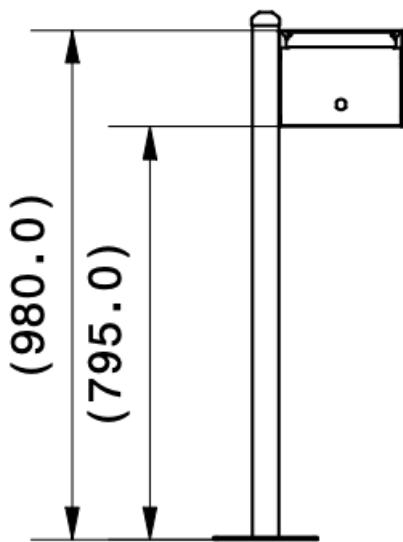


Post Height
Ground: 1400mm
Concrete: 1000mm

2 High

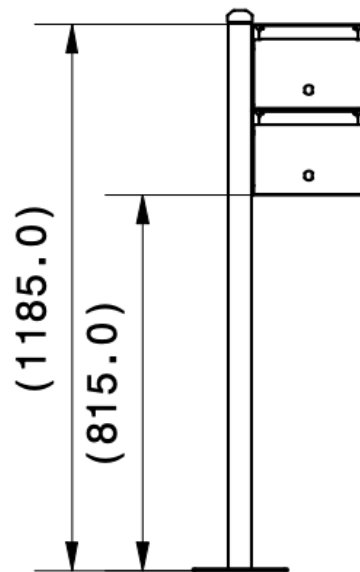


Post Height
Ground: 1600mm
Concrete: 1200mm

3 High

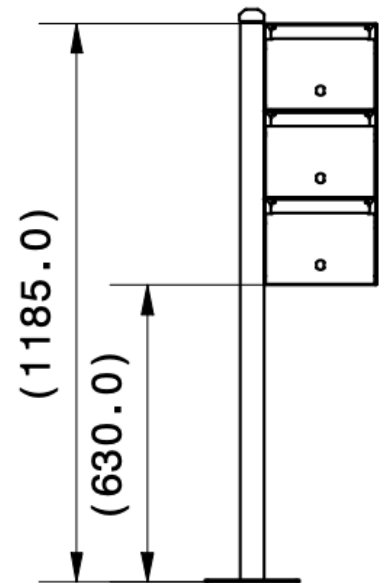


Post Height
Ground: 1600mm
Concrete: 1200mm

4 High

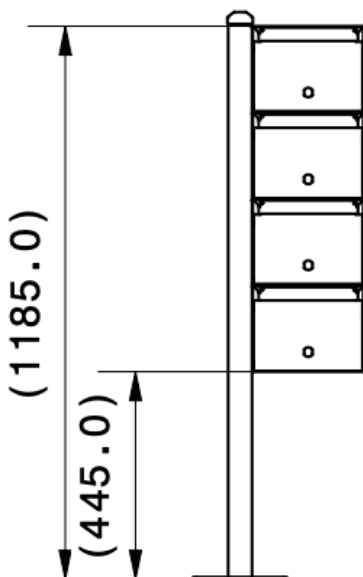


Post Height
Ground: 1600mm
Concrete: 1200mm

5 High

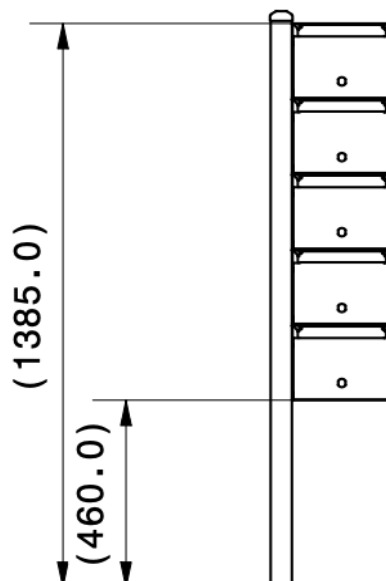

Post Height
Ground: 1850mm
Concrete: 1600mm

6 High

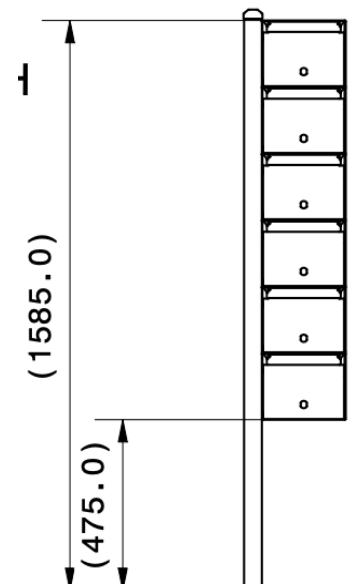

Post Height
Ground: 2100mm
Concrete: 1600mm