


- Step 9** Select the cam which suits your door and frame and attach it to the square shaft at the end of the spindle.
- Step 10** Now check the operation of the lock using the factory User Code 00 99.
- Step 11** If the lock is functioning correctly, **CHANGE THE DEFAULT MASTER CODE 55 44 33 22 and DEFAULT USER CODE 00 99** and program the lock using the programming and operating instructions enclosed.

B) New installation

- Step 1** Place template on door and mark upper 6mm ($\frac{1}{4}$ " hole and lower 16mm ($\frac{5}{8}$ " hole).

IMPORTANT NOTE: Before drilling fixing holes, please ensure that the position of the KitLock when fitted will allow enough clearance for selected cam to work.

- Step 2** Drill both fixing holes.
- Step 3** Continue installation from step 4 to 11, above.

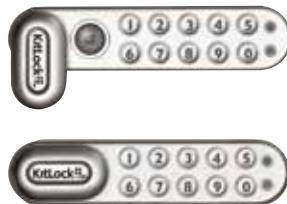

KitLock
Coded Locker Solutions

**KITLOCK
1000
ELECTRONIC**

INSTALLATION INSTRUCTIONS FOR RIGHT HAND HORIZONTAL KITLOCK1000

CODELOCKS LTD UK
Tel: +44 (0) 1635 239645
Fax: +44 (0) 1635 239644
sales@codelocks.co.uk
Helpline, service & spares
FREEPHONE 0800 393 405

CODELOCKS INC US
Tel: +1 714 979 2900
Fax: +1 714 979 2902
sales@codelocks.us
Help: 1.877.CODELOCK
www.codelocks.com

II-KL1000RH-0912




WWW.KITLOCK.COM

FITTING INSTRUCTIONS

The KitLock can be fitted to:

- A) Cupboards, cabinets and lockers etc as a direct replacement for existing cam locks.
- B) It can also be easily fitted to cupboards and cabinets that do not have an existing locking device.

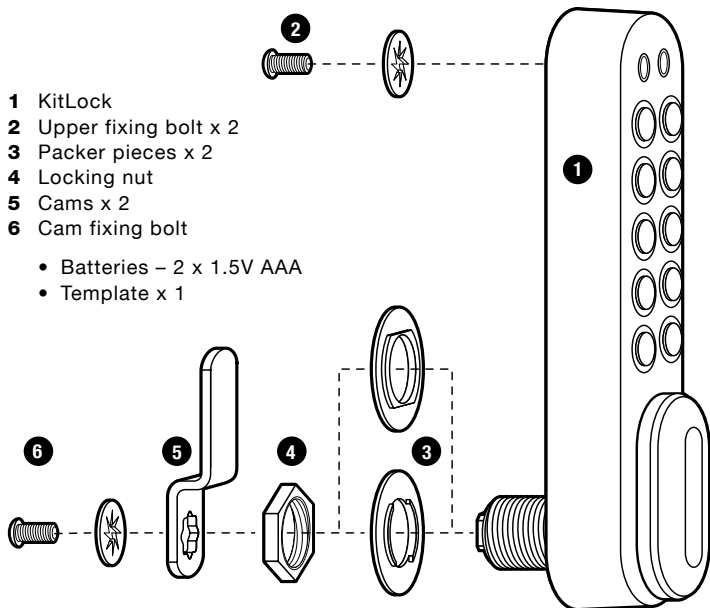

SPECIAL NOTES

- Before installing the lock, load the batteries and familiarise yourself with the operation and programming.
- The handle will not turn until you enter the factory default **Master Code 55 44 33 22 OR the User Code 00 99.**
- Please see programming guide to set your own codes.

INSTALLATION GUIDE

A) Replacing existing cam lock with the KitLock

- Step 1** Remove existing cam lock.
- Step 2** Place template over hole left by cam lock and mark upper fixing hole.
- Step 3** Drill the 6mm ($1/4$ "") upper fixing hole.
- Step 4** Fit the KitLock to the door by passing the spindle through the 16mm ($5/8$ "") hole.
- Step 5** If required, from the inside of the door, pass either of the packing pieces over the spindle to centralise the lock.
- Step 6** Now secure the lock by threading the large nut onto the spindle.
- Step 7** Fit one of the upper fixing bolts to suit your door thickness.
- Step 8** Tighten the lower fixing nut and upper bolt.