

Installing a Pyramid Handrail Bracket

Visit our website for more information: Inlinedesign.com

Overview

The following are the instructions for how to install a Stainless Steel Pyramid Handrail Bracket into a steel post. These instructions apply for Inline Design's stainless steel cable cable systems, glass systems and bar holder systems.


Caution: Wear protective ANSI approved safety glasses, working gloves and breathing mask all the times.

Tools Required

- 1) JB Weld Glue (found at any local hardware store)
 - 2) Cloth or a styrofoam bag
 - 3) Weighted rubber hammer
 - 4) [Pyramid Bracket](#)
-

Installation Instructions

- 1) Remove the top saddle of the bracket.

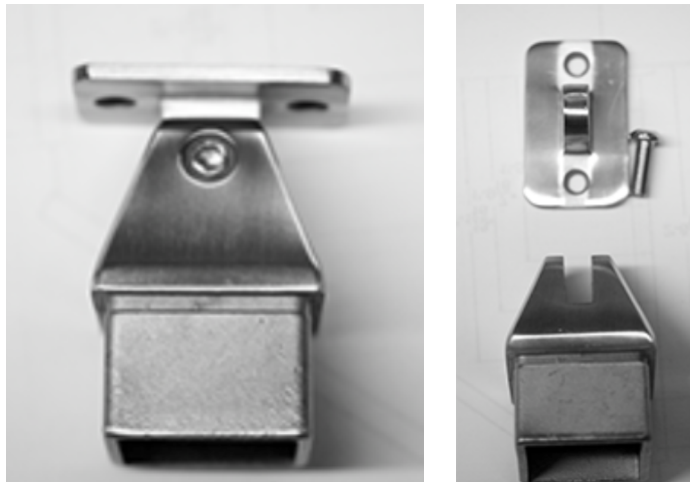

- 2) Apply JB Weld to the inside of the post.
- 3) Align the bracket on the top of the post.
- 4) Place a cloth or a styrofoam bag over your bracket to prevent scratches from the mallet.

5) Tap the bracket with a rubber mallet.



NOTE: If the bracket doesn't align properly you can tap it out using a 1" rod from the bottom of the post. Be careful not to hit any of the tube threading while inserting the rod. Do this over a piece of cloth so that they bracket does not get scratched when it is tapped out.

NOTE: A small amount of surface corrosion is not uncommon after a some exposure to weather or salty conditions. We recommend using our passivation solution or some sort of stainless polish to keep any surf corrosion from happening; more information available at https://inlinedesign.us/engineering_specifications

Passivation Solution

<https://inlinedesign.us/products/stainless-steel-passivating-kit-citrisurf-77-plus>