

# INSTALLATION GUIDE


## SCREW INFORMATION

Modern Matter hardware includes an M4 x 1" long and an M4 x 1.5" long machine screw for all knobs and pulls. A typical 3/4" cabinet door or drawer front uses a 1" long screw to secure hardware. For cabinet doors or drawer fronts that are thicker than 3/4" we have included a 1.5" screw as an option. If your cabinet doors or drawers require a longer screw you can purchase these from any hardware store. A general rule is for screw lengths is for it to be 1/4" longer than the thickness of the installation site. \*Kravet skus use #8-32 screws which will be provided.

Modern Matter appliance pulls include an M6 x 1" long machine screw and an M6 x 1.4" long machine screw. \*Some appliance skus use M8 screws which will be provided.

## INSTALLING KNOBS


1. Determine location for your new hardware on your cabinet drawer or door.  
We suggest using a tape measure to determine exact placement on each drawer in order to ensure consistency from site to site.
2. Apply painter's tape to drawer and mark the exact position where you want to place the knob.
3. Use a drill with a 7/32 inch drill bit to drill the holes that the hardware will be applied to. Remove the painter's tape.
4. Insert screw to drilled hole.
5. Attach the knob to the screw and rotate counter clockwise until hand-tight. Finish tightening with a screwdriver to secure. To prevent damage to the hardware, do not use power tools for installation. Only use hand tools.

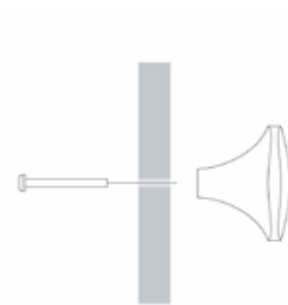

*knob installation*

## INSTALLING PULLS

1. Determine location for your new hardware on your cabinet drawer or door.  
We suggest using a tape measure to determine exact placement on each drawer in order to ensure consistency from site to site. For pulls you will want to determine the hole center to center spacing.
2. Apply painter's tape to site and mark the exact position where you want to place the pull. Be careful to mark hole locations at the same distance as detailed in your pull's description.
3. Use a drill with a 7/32 inch drill bit to drill the holes where the hardware will be installed.
4. Insert screw to drilled hole.
5. Attach the pull to the screw and rotate counter clockwise until hand-tight. Finish tightening with a screwdriver to secure. To prevent damage to the hardware, do not use power tools for installation. Only use hand tools.

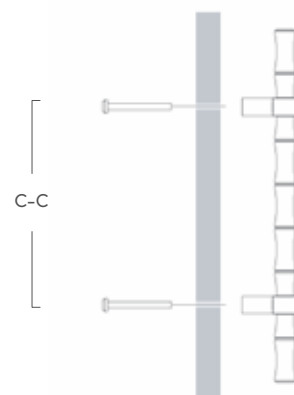

*pull installation*

## INSTALLING BACKPLATES

Backplates can be used in conjunction with a knob or a pull. Place the backplate between the cabinet door or drawer surface and the knob or pull. Longer screws may be needed based on the cabinet or drawer thickness.