




Bath Hardware

INSTALLATION GUIDE & TEMPLATE

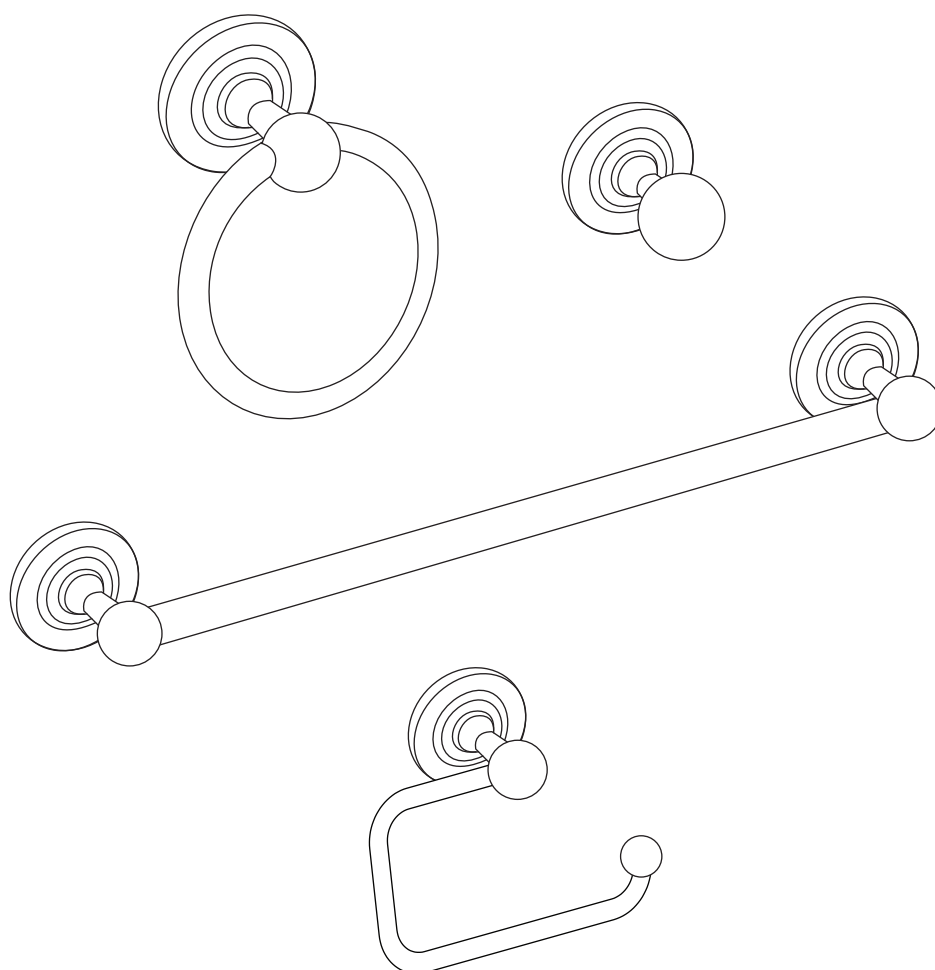

PARTS INCLUDED



A

Mounting
Wood Screws




B

Mounting
Wall Anchors




D

Set Screw

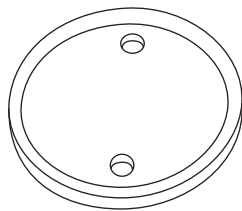

C


Mounting Bracket

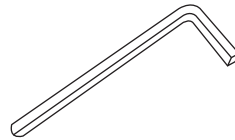


E

Allen Key

RECOMMENDED TOOLS - NOT INCLUDED

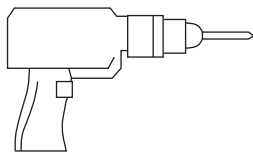


3/8" Drill Bits



Phillips Screwdriver




Hammer

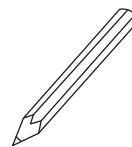

Pencil



Level

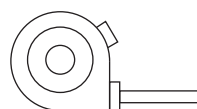


Measuring Tape


TOWEL BAR

10" C-C, 18" C-C or 24" C-C

PARTS INCLUDED WITH TOWEL BAR SETS

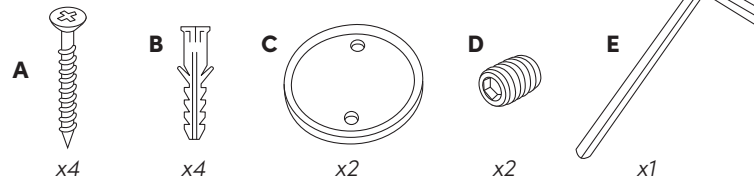

MOUNTED 18" or 24" TOWEL BAR

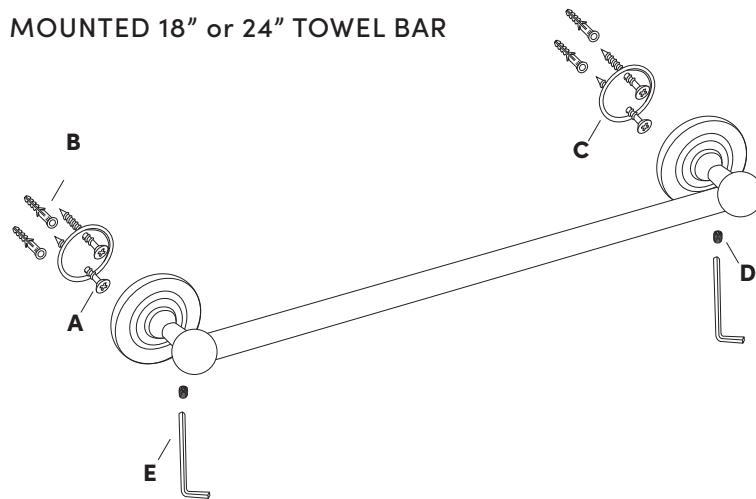


INSTALLATION INSTRUCTIONS

- 1 Mark Hardware Placement** - Use the installation template on the back of this brochure and a level to determine the desired hardware location. Mark hole positions based on the hardware's center-to-center specifications.
- 2 In Drywall** - Drill a pilot hole using a 3/8" drill bit. Insert the wall anchor into the hole and gently tap it into the wall until it's secure. Install the mounting bracket to the wall by inserting the wood screws into the wall anchors. Tighten the screws clockwise with a Phillips screwdriver until snug.


In Stud - Secure the mounting bracket to the wall with the provided wood screws. Tighten the screws clockwise with a Phillips screwdriver until snug. Repeat steps on the other side.
- 3 Attach Hardware** - Slide the hardware onto the brackets and tighten the mounting set screws with the supplied Allen key.

TOWEL RING

PARTS INCLUDED WITH TOWEL RING SETS

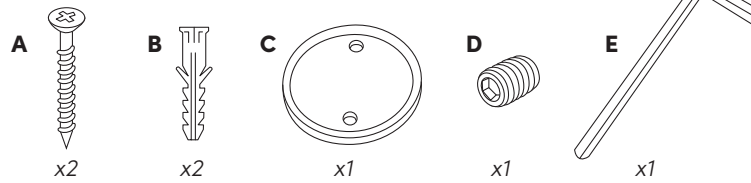

MOUNTED 18" or 24" TOWEL RING

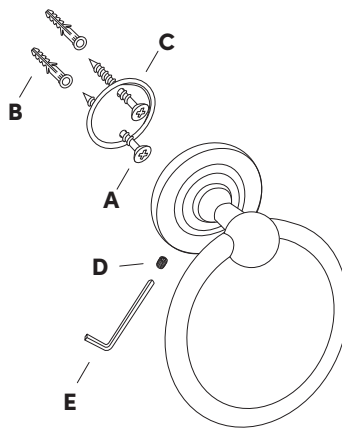

INSTALLATION INSTRUCTIONS


- 1 Mark Hardware Placement** - Use the installation template on the back of this brochure to determine the desired hardware location.
- 2 In Drywall** - Drill a pilot hole using a 3/8" drill bit. Insert the wall anchor into the hole and gently tap it into the wall until it's secure. Install the mounting bracket to the wall by inserting the wood screws into the wall anchors. Tighten the screws clockwise with a Phillips screwdriver until snug.

In Stud - Secure the mounting bracket to the wall with the provided wood screws. Tighten the screws clockwise with a Phillips screwdriver until snug.
- 3 Attach Hardware** - Slide the hardware onto the brackets and tighten the mounting set screws with the supplied Allen key.


TOILET PAPER HOLDER

SPRING BAR

PARTS INCLUDED WITH TOILET PAPER HOLDER

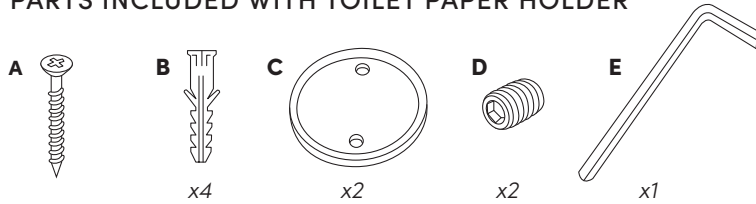

TOILET PAPER HOLDER - SPRING ARM

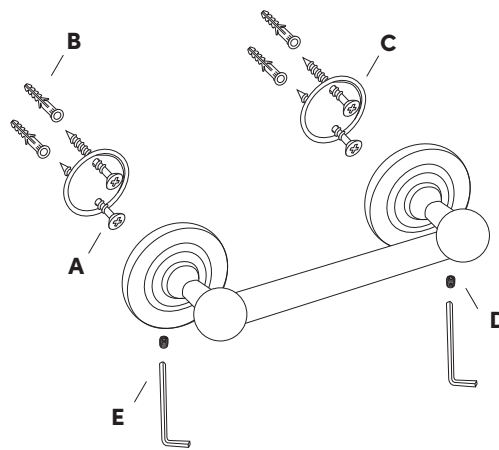

INSTALLATION INSTRUCTIONS


- 1 Mark Hardware Placement** - Use the installation template on the back of this brochure and a level to determine the desired hardware location. Mark hole positions based on the hardware's center-to-center specifications.
- 2 In Drywall** - Drill a pilot hole using a 3/8" drill bit. Insert the wall anchor into the hole and gently tap it into the wall until it's secure. Install the mounting bracket to the wall by inserting the wood screws into the wall anchors. Tighten the screws clockwise with a Phillips screwdriver until snug.

In Stud - Secure the mounting bracket to the wall with the provided wood screws. Tighten the screws clockwise with a Phillips screwdriver until snug. Repeat steps on the other side.
- 3 Attach Hardware** - Slide the hardware onto the brackets and tighten the mounting set screws with the supplied Allen key.


TOILET PAPER HOLDER

SWING ARM

PARTS INCLUDED WITH TOILET PAPER HOLDER

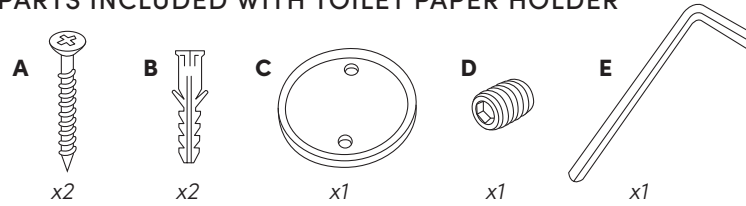

TOILET PAPER HOLDER - SWING ARM

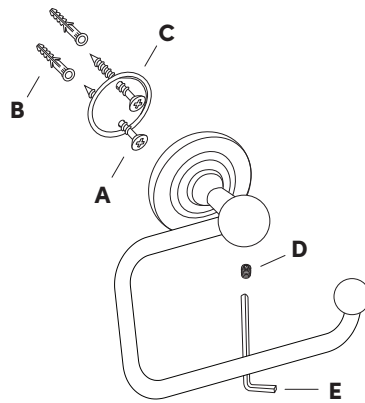


INSTALLATION INSTRUCTIONS

- 1 Mark Hardware Placement** - Use the installation template on the back of this brochure to determine the desired hardware location.
- 2 In Drywall** - Drill a pilot hole using a 3/8" drill bit. Insert the wall anchor into the hole and gently tap it into the wall until it's secure. Install the mounting bracket to the wall by inserting the wood screws into the wall anchors. Tighten the screws clockwise with a Phillips screwdriver until snug.


In Stud - Secure the mounting bracket to the wall with the provided wood screws. Tighten the screws clockwise with a Phillips screwdriver until snug.
- 3 Attach Hardware** - Slide the hardware onto the brackets and tighten the mounting set screws with the supplied Allen key.

ROBE HOOK

PARTS INCLUDED WITH ROBE HOOK

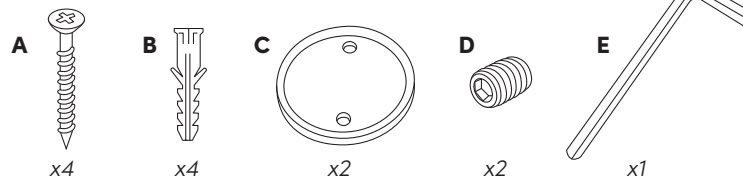

ROBE HOOK

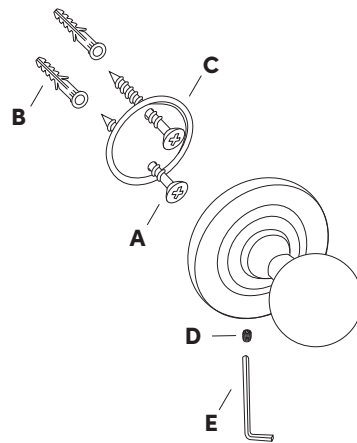

INSTALLATION INSTRUCTIONS

- 1 Mark Hardware Placement** - Use the installation template on the back of this brochure to determine the desired hardware location.
- 2 In Drywall** - Drill a pilot hole using a 3/8" drill bit. Insert the wall anchor into the hole and gently tap it into the wall until it's secure. Install the mounting bracket to the wall by inserting the wood screws into the wall anchors. Tighten the screws clockwise with a Phillips screwdriver until snug.

In Stud - Secure the mounting bracket to the wall with the provided wood screws. Tighten the screws clockwise with a Phillips screwdriver until snug.
- 3 Attach Hardware** - Slide the hardware onto the brackets and tighten the mounting set screws with the supplied Allen key.

CARE & CLEANING

For all care and cleaning, use a non-abrasive, lint-free, or microfiber cloth that won't scratch the hardware's finish. Regularly dust your hardware to maintain its appearance. If needed, clean with a slightly damp cloth and mild soap, then dry thoroughly. Designs with gemstones, lucite, or wood should be cleaned with a slightly damp, nonabrasive cloth and mild soapy water.

CHARACTERISTICS AND CARE OF LIVING FINISHES

Unlacquered Brass is a living finish that naturally develops a patina, creating a unique and beautifully aged look. This aging process is part of the finish's charm and will vary depending on humidity levels and frequency of use. If you prefer a brighter, more refined appearance, use a brass wadding polish according to the manufacturer's instructions. This will effortlessly restore the finish's original shine while preserving the integrity of the metal.

CHARACTERISTICS AND CARE OF LACQUERED FINISHES

Polished brass, polished nickel, and burnished brass (for bath hardware only) are lacquered finishes and will not develop a patina over time. Clean using the general care instructions above.

WARRANTY POLICY

At Modern Matter, we are committed to providing our customers with the highest quality hardware and exceptional customer service. We understand that sometimes products may not meet your expectations, and we are here to make the return process hassle-free.

OUR COMMITMENT TO QUALITY

We stand behind the exceptional craftsmanship of our products. Modern Matter warrants to the original purchaser or initial homeowner:

5-Year Mechanism Warranty - We warrant all mechanisms used in our hardware to be free from defects in material and workmanship for a period of five years from the date of purchase for residential use.

1-Year Lacquer Finish Warranty - We warrant our lacquered finishes to be free from defects in material and workmanship for a period of one year from the date of purchase for residential use.

No Warranty on Living Finishes - Living finishes, by their nature, will change and develop a patina over time. We cannot offer a warranty on these natural aesthetic changes.

1-Year Warranty on Alternative Materials - We offer a one-year warranty on all alternative materials, including: Gemstones, Porcelain, Wood, Acrylic, Rattan, Enamel, and Leather.