




METALLBUDE
upgrade your interior!

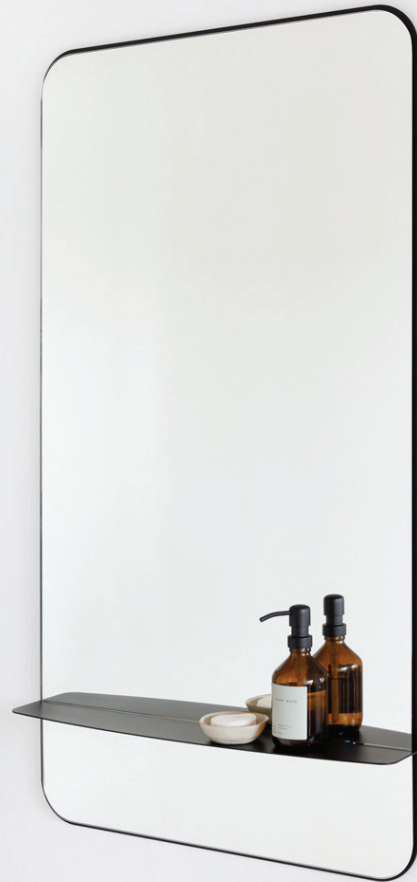

METALLBUDE


Assembly instructions | CALEO wall mirror



2 x Countersunk screws



2 x Dowels

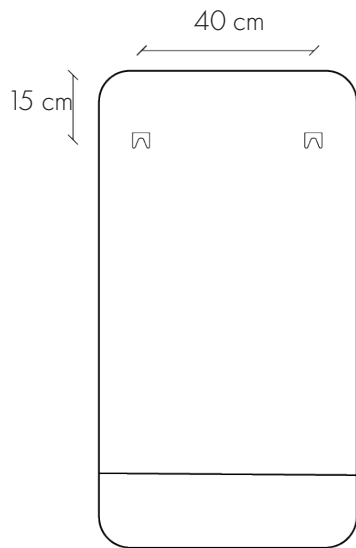

1. Mark the drill holes on the desired wall at the specified distances.

2. Drill holes in the marked positions:
At least 6 cm deep
Drill diameter: 6 mm



5 mm



3. The screws must stick out approx. 5 mm.



4. Hang the mirror on the screws at the specified angle. If the mirror sticks out too far from the wall, the screws must be screwed in deeper.

Done! Have fun with CALEO!