

  
METALLBUDE


  
METALLBUDE



# Assembly instruction | LYN S/LYN L



Countersunk screws



Dowels



Grub screws



Sockets



Allen key

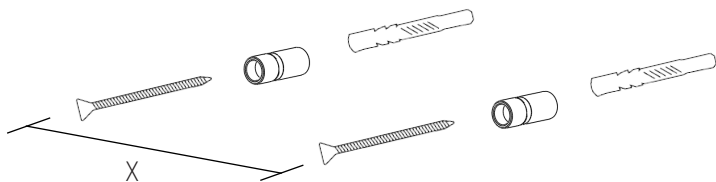


Abb. 1

1. Mark the desired position of LYN S/LYN L on the wall.

X: LYN S = 20 cm  
LYN L = 30 cm

2. Drill holes in the marked positions:

Depth: At least 6 cm

Drill diameter: 6 mm

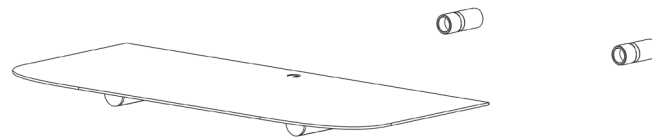


Abb. 2

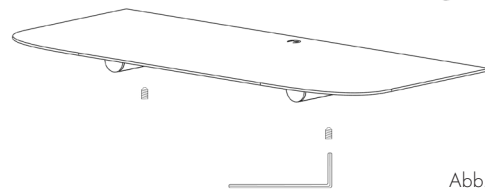


Abb. 3

3. Insert the dowel into the hole and screw the sleeve to the wall using the countersunk screws. When dealing with a drywall, special anchors must be used. Our recommendation: Tilt dowels are best suited.

(Abb. 1)

4. Place LYN S/LYN L over the sockets and hand-tighten the grub screws into the pre-drilled holes using the Allen key.

(Abb. 2 & 3)

Done! Have fun with LYN