

Content

 Countersunk screws

 Dowel

 Grub screw

 Sockets

 Allen key


METALLBUDE



Assembly instruction |

MILO

1. Drill holes at the desired wall positions. Insert the dowels into the drill holes; special dowels must be used for plasterboard walls.

Our tip: Tilt dowels are best.

At least 5 cm deep
Drill diameter: 6 mm

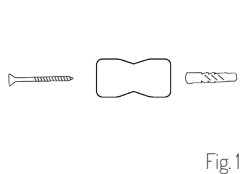


Fig.1

2. First remove the grub screws from the underside of the MILO using the Allen key in order to also remove the sleeves. Now screw the sleeves to the wall with the screws. (Fig. 1)

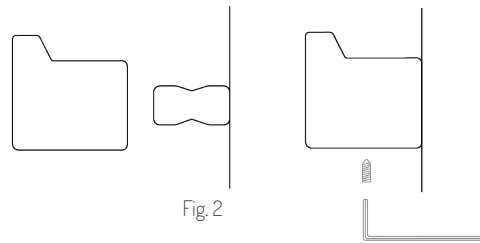


Fig.2

Fig.3

3. Place the MILOS on the screwed sockets and secure them again with the grub screws in the pre-drilled holes. Then screw on hand-tight with the Allen key. (Fig. 2&3)

Done! Have fun with MILO