



METALLBUDE



Assembly instructions | PALO

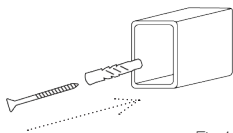
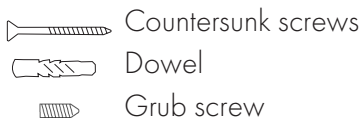


Fig.1

1. Drill holes at the desired wall positions. Insert the dowels into the drill holes; special dowels must be used for plasterboard walls.

Our tip: Tilt dowels are best.

Drill at least 4 cm deep

Drill diameter: 5 mm

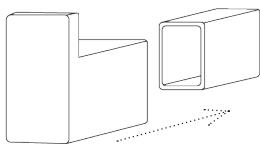


Fig.2

2. Now screw the sockets tight with the countersunk screws. Make sure that the pre-drilled holes for fixing the PALO are facing downwards.

(Fig. 1)

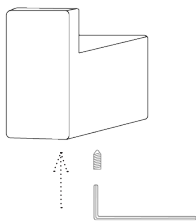


Fig.3

3. Place the PALOS on the sockets supplied and fix them in the pre-drilled holes using the grub screws. Then screw hand-tight with the Allen key. (Fig. 2&3)

Done! Have fun with PALO