


RIVO S

Assembly instruction | RIVO Accessories

Shelf RIVO

Place the wooden shelf in the desired position and secure it with the built-in magnets. Make sure that the recesses for the sockets are facing backwards.

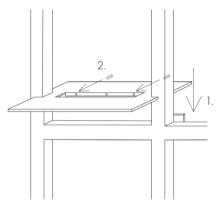

Shelf RIVO X

Place the metal shelf in the desired position and fix it hand-tight using the grub screws and Allen key supplied. Make sure that the pre-drilled hole in the shelf points to the rear.

Mirror RIVO

Hang the mirror in the desired position. Make sure that both sheet metal hooks are correctly positioned on RIVO.