





METALLBUDE



RIVO

Montageanleitung | RIVO / RIVO S

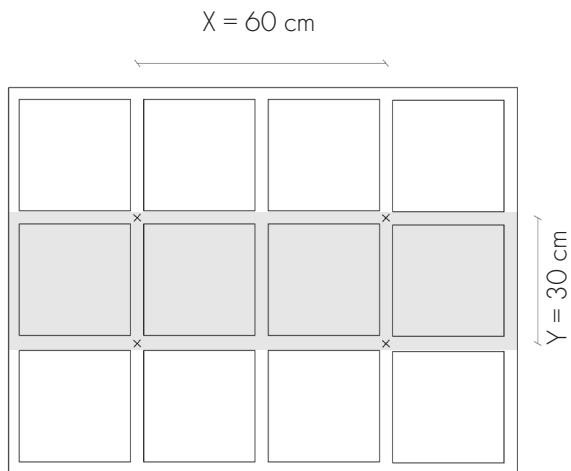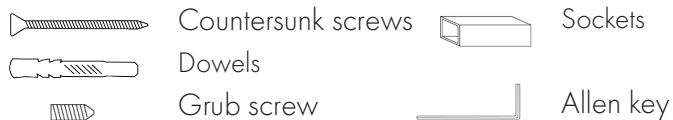

1. Mark the desired position of RIVO/RIVO S on the wall.
2. Drill holes in the marked positions:
At least 6 cm deep
Drill diameter: 6 mm



Fig. 1



Fig. 2

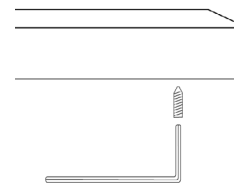


Fig. 3

3. Insert the dowels into the hole and screw the socket to the wall using the countersunk screws.
Special wall dowels must be used for plasterboard ceilings.
Our tip: Tilt dowels are best suited. (Fig. 1)

4. Place the RIVO/RIVO S over the sleeves and screw the grub screw hand-tight into the threads using the Allen key.
(Fig. 2 & 3)

Done! Have fun with RIVO