








RIVO

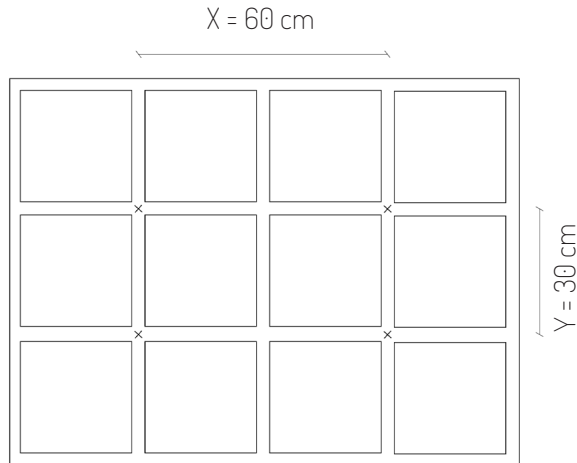

Montageanleitung // RIVO

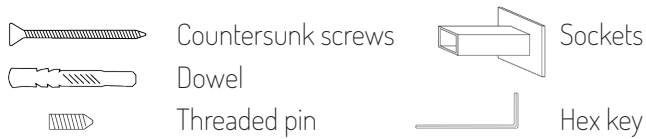

1. Mark the desired position of RIVO on the wall.
2. Drill holes in the marked positions:
At least 6 cm deep
Drill diameter: 6 mm

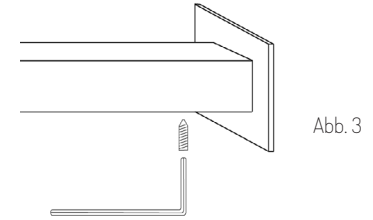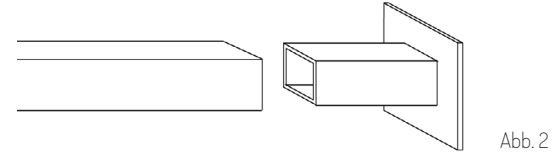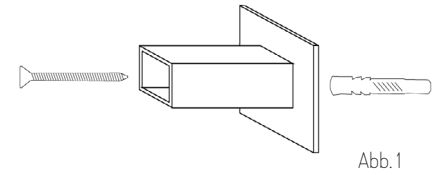

3. Insert the dowel into the hole and screw the socket to the wall with the countersunk screws.
Special dowels must be used for a drywall ceiling. Our tip: tilting dowels are best suited. (Abb. 1)
4. Place RIVO over the sockets and screw the set screws hand-tight into the threads with the hex key. (Abb. 2 & 3)

Done! Have fun with RIVO!