



METALLBUDE

SION


# Assembly instruction | SION



2 x Countersunk screws



2 x Dowel

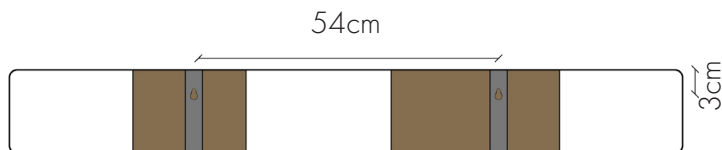

1. Mark the drill holes at the specified distances on the desired wall.
2. Drill the holes at least 6 cm deep with a 6 mm drill bit.
3. First insert dowels into the drill holes and then screw in the countersunk screws.  
The screws must protrude approx. 5 mm in order to hang the bracket on them.

Done. Have fun with SION!