



METALLBUDE

SION


Instructions // Hanging console SION



2 x countersunk screws



2 x dowels

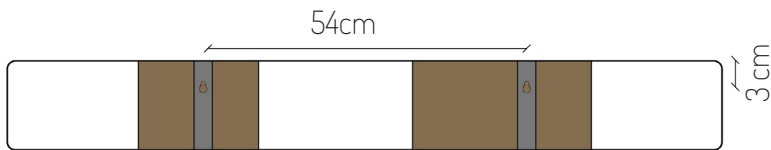

1. Mark drill holes at the specified distances on the desired wall.
2. Drill the holes at least 6 cm deep with a 6 mm drill bit.
3. First insert the dowels into the drill holes and then screw in the countersunk screws. The screws must stick out approx. 5 mm in order to hang the console on them.

Done! Have fun with SION!