



METALLBUDE



METALLBUDE

# Assembly instruction | STENNI

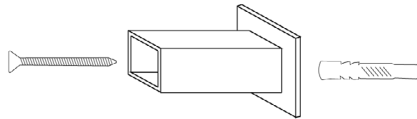
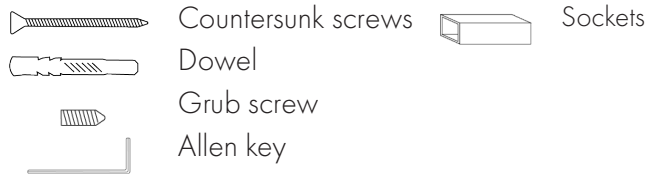


Abb.1

1. Mark the desired position of STENNI on the wall.

X= width of STENNI minus 2 cm

2. Drill holes in the marked positions:

At least 6 cm deep

Drill diameter: 6 mm

3. Insert the dowel into the hole and screw the sleeve to the wall using the countersunk screws. (Fig. 1)

Make sure that the pre-drilled holes for fixing STENNI are facing downwards.

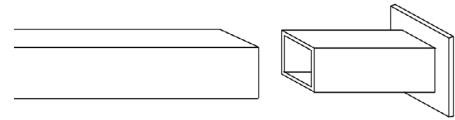


Fig.2

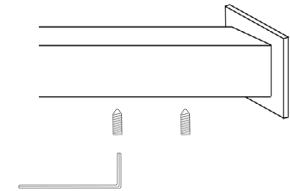


Fig.3

Special dowels must be used with a plasterboard wall.

Our tip: Tilt dowels are best suited.

4. Place the STENNI over the sockets and screw the grub screw into the pre-drilled holes using the Allen key. (Fig. 2 & 3)

Done! Have fun with STENNI