

METALLBUDE



METALLBUDE

STENNI

Instructions // STENNI

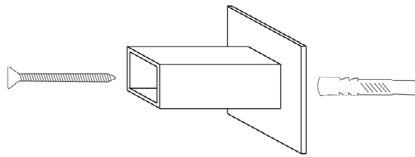
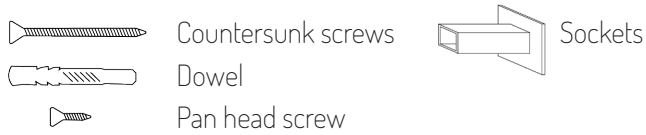


Abb. 1

1. Mark the desired position of STENNI on the wall.
X= width of STENNI **minus 2 cm**
2. Drill holes in the marked positions:
At least 6 cm deep
Drill diameter: 6 mm
3. Insert the dowel into the hole and screw the socket to the wall with the countersunk screws. (Abb. 1)
Make sure that the pre-drilled holes for fixing STENNI point downwards.

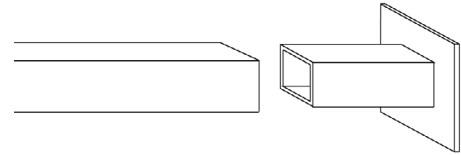


Abb. 2

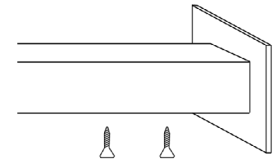


Abb. 3

Special dowels must be used for a drywall.
Our tip: tilting dowels are best suited.

4. Put STENNI over the sockets and screw the pan head screws into the pre-drilled holes.
(Abb. 2 & 3)

Done! Have fun with STENNI!