







Assembly instruction | Showe shelf SHEA

1. For a secure hold, thoroughly clean and degrease the back of the SHEA shower shelf and the desired wall surface beforehand with the CLEANER cleaning cloth from the adhesive set supplied.




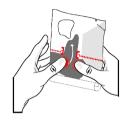

2. Mix the special adhesive. Fold the lower edge of the thick adhesive chamber over once and press the adhesive firmly upwards towards the thin reaction chamber with both thumbs so that the separating seam in the middle bursts open.



3. after the separation seam has burst open, press the adhesive completely into the thin reaction chamber by rolling up the adhesive chamber.

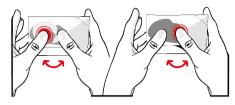

4. Now mix the adhesive inside this chamber with the reactant inside: To do this, knead the mixture back and forth with both thumbs at least 20 times, not missing a single corner.



- 5. Apply the special adhesive to the back of the SHEA at the points marked in gray as shown in the illustration and remove the film from the adhesive strips.
- 6. Position the back of the shower tray (with the adhesive surface) in the desired location and press it against the wall for at least 10 seconds.
- 7. Wait at least 4 hours before the shower tray comes into contact with moisture so that the special adhesive can harden completely.

Done! Have fun with SHEA!