




ARIS


Assembly instructions | ARIS



Countersunk screws



Dowels

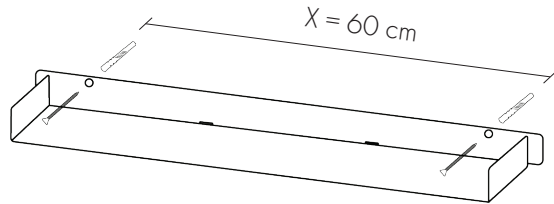

Im. 1

1 Mark the desired position of the ARIS base shelf on the wall.
($X = 60$ cm)


2. Drill holes in the marked positions:

At least 6 cm deep

Drill diameter: 6 mm

3. Insert dowels into the holes and screw ARIS to the wall using the countersunk screws.

Special wall plugs must be used for plasterboard walls. Our tip: Tilt plugs are best suited. (Im. 1)

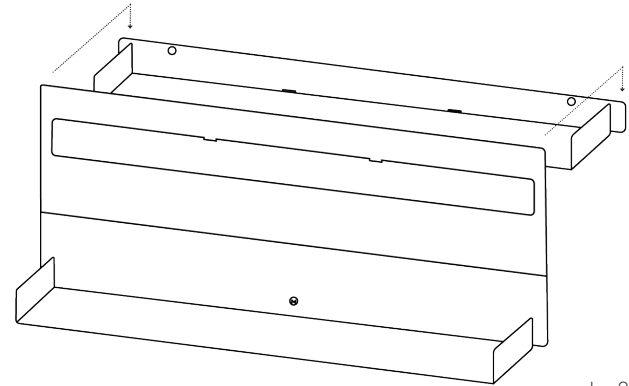

Im. 2

4. Place the ARIS end piece over the base shelf and snap it downwards. (Im. 2)

Done! Have Fun with ARIS