



Issue N°16

nalista

10



METALLBUDE

NELIO

Assembly instruction


NELIO



2 x countersunk screws



2 x dowels

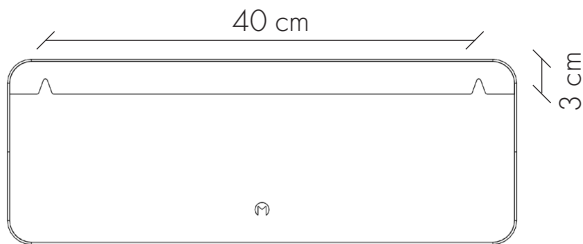

1. Mark the drill holes at the specified distances on the desired wall.
2. Drill the holes at least 6 cm deep with a 6 mm drill bit.
3. First insert dowels into the drill holes and then screw in the countersunk screws.
The screws must protrude approx. 5 mm in order to hang the bedside table on them.

Done! Have fun with NELIO