




Clothes Rail RUBI

Instructions // RUBI/TENSI



Countersunk screws




Dowel




grub screw



Hex key

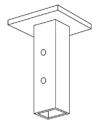

Sockets

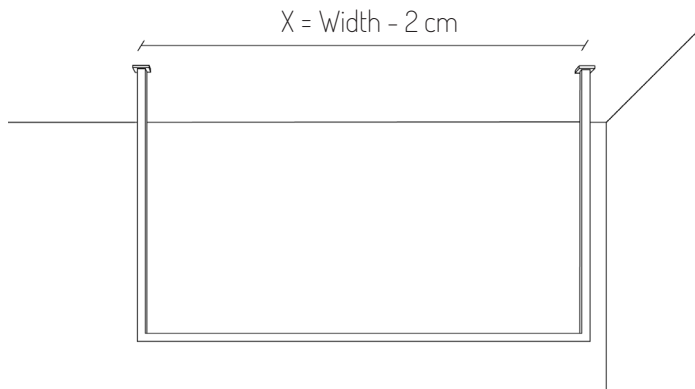

1. Mark the desired position of RUBI/TENSI on the ceiling.

$X =$ width of RUBI/TENSI minus 2 cm

2. Drill holes in the marked positions:

At least 6 cm deep

Drill diameter: 6 mm

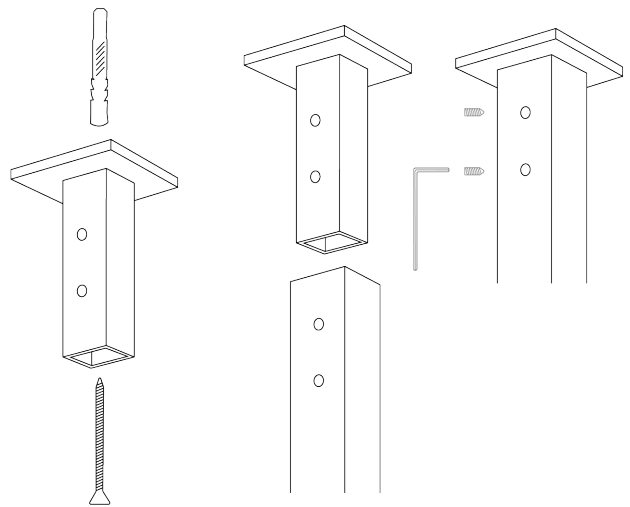


Abb.1

Abb.2

Abb.3

3. Insert the dowel into the hole and screw the socket to the ceiling with the countersunk screws. Make sure that the predrilled holes for fixing RUBI/TENSI point to the back. Special dowels must be used for a drywall ceiling. Our tip: Tilt dowels are best suited. (Abb.1)

4. Place the RUBI/TENSI coat rack over the sockets and screw the grub screws tightly into the predrilled holes using the hex key. (Abb.2 & 3)

Done! HAVE fun with RUBI/TENSI