



METALLBUDE



# Assembly instruction | TUALI

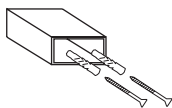
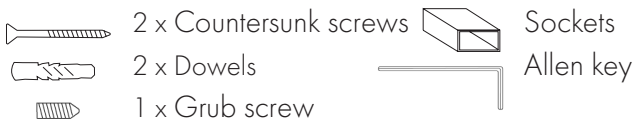


Fig.1

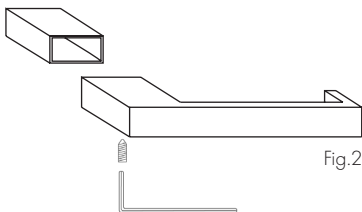


Fig.2

1. Cut out the template and place it at the desired attachment point. Drill the holes at the points marked with an X.

Insert the dowels into the drill holes:

Drill hole: at least 4 cm deep

Drill diameter: 5 mm

2. Now screw the sleeve tight with the countersunk screws. Make sure that the pre-drilled holes for fixing TUALI point downwards. (Fig. 1)

3. Place the TUALI toilet roll holder on the sleeve supplied and fix it hand-tight in the pilot hole using the grub screw and Allen key. (Fig. 2)

Done! Have fun with TUALI

