



METALLBUDE



Instructions // Toilet paper holder TUALI

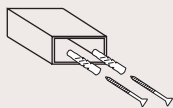
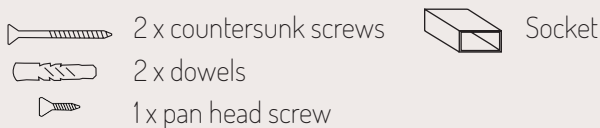


Abb.1

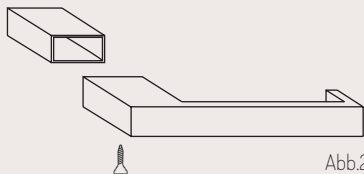


Abb.2

1. Cut out the template and place it at the desired mounting location. Drill the holes in the places marked with X. Insert the dowels into the drill holes.

Drill hole: min. 4 cm deep / Drill diameter: 5 mm

2. Now tighten the sleeve with the screws. Make sure that the predrilled holes for securing TUALI point downwards. (Abb. 1)

3. Put the toilet paper holder TUALI on the supplied socket and fix it with the pan head screw in the predrilled hole. (Abb. 2)

Done! Have fun with TUALI!

