

# Content

 Countersunk screws

 Dowel

 Grub screw

 Sockets

 Allen key



METALLBUDE



## Montageanleitung | VANA

$X = \text{Width} - 2 \text{ cm}$



1. Mark the desired position of VANA on the wall.

$X = \text{width of VANA minus } 2 \text{ cm}$

2. Drill holes in the marked positions:

At least 6 cm deep

Drill diameter: 6 mm

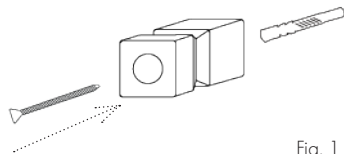


Fig. 1

3. Insert the dowels into the hole and screw the sleeve to the wall using the countersunk screws. (Fig. 1)

Special wall pludowels must be used for plasterboard walls. Our tip: Tilt dowels are best suited.

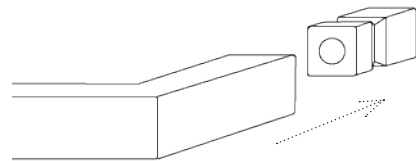


Fig. 2

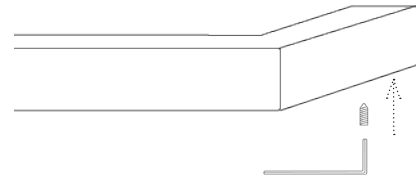


Fig. 3

4. Place the VANA over the sockets and screw the grub screws into the pre-drilled holes using the Allen key. (Fig. 2 & 3)

Done! Have fun with VANA