

Content // VANA

 2x countersunk screws

 2x dowels

 2x pan-head screws

 2x Sockets



METALLBUDE


METALLBUDE



VANA

Instructions // VANA

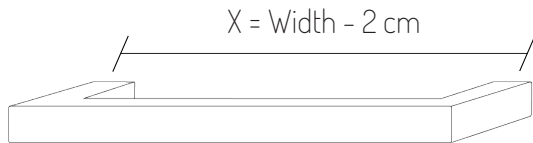

1. Mark the desired position of VANA on the wall.

X= width of VANA **minus 2 cm**

2. Drill holes in the marked positions:

At least 6 cm deep

Drill diameter: 6 mm

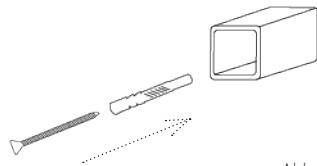


Abb. 1

3. Insert the dowel into the hole and screw the socket to the wall with the countersunk screws. (Abb. 1)

Make sure that the predrilled holes for fixing VANA point downwards.

Special dowels must be used for a drywall.
Our tip: tilting dowels are best suited.

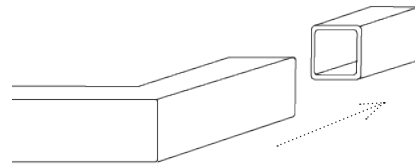


Abb. 2

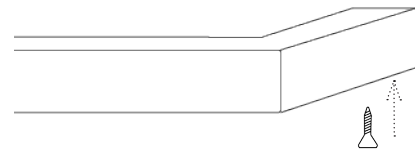


Abb. 3

4. Place VANA over the sockets and screw the pan head screws into the predrilled holes.
(Abb. 2 & 3)

Done! Have fun with VANA!