

Manual

Thank you for coosing the „Edition One“ Spoiler from TGWorks !



The installation of the spoiler takes about 30-45 minutes.

The following tools are required:

- 10mm HEX Nut
- Ratchet and suitable extension for the 10mm HEX Nut
- Phillips Screwdriver
- Pry Tool or slotted screwdriver

1.



2.




Remove the 3 service covers.
Remove the two 10mm Hex screws

3.



Pull the middle cover part or remove it with the help of the pry tool.

4.

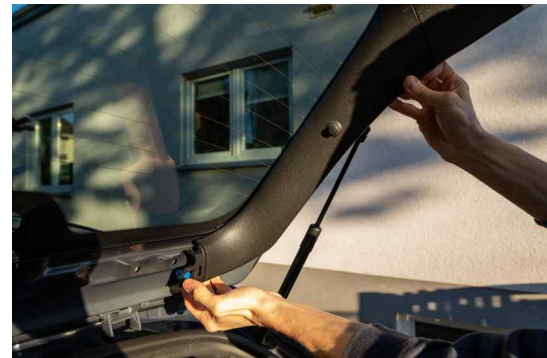

Remove the left and the right covers also.

5.



Loosen the phillips screw on both sides of the main cover part.

6.



Now loosen and take of the main cover part by pulling or using the pry tool.

7.



Unscrew and take of the 7 marked 10mm HEX Screws

8.



Also loosen and take off the 10mm Hex Nut on the left and right side.

9.



Now you can take off the trunk attachment in which the spoiler is screwed in.

10.



Loosen and take off the 6 marked HEX nuts.

11.



Insert a pry tool or a slotted screwdriver in between the trunk attachment and the original spoiler to loosen it.

12.



The original spoiler can now be taken off and changed to our Edition One Spoiler.

The assembly then should be done in reverse to the manual.

Important Note:

Installation is at your own risk! We cannot accept any liability for damage to your car or our spoiler!

We hope you will have a lot of fun with our product!

Follow us on Facebook or instagram to never miss any news on new parts etc.!

Your TGWorks.-Team!

