


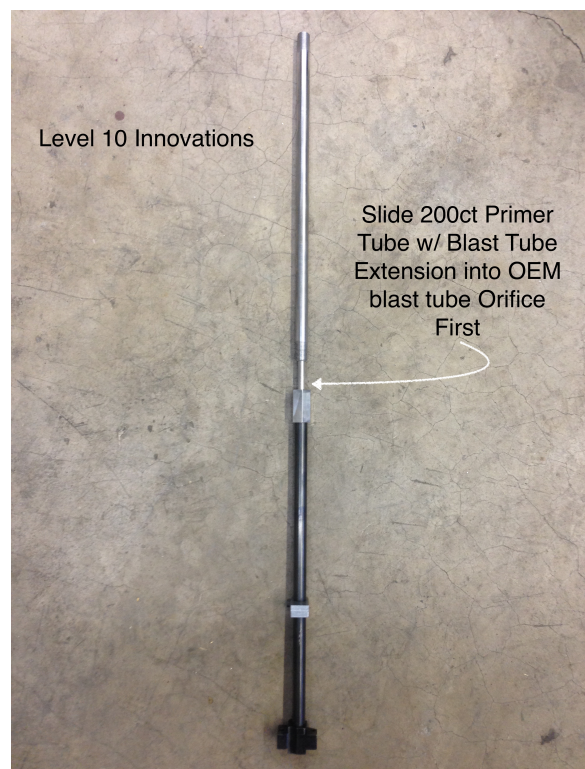
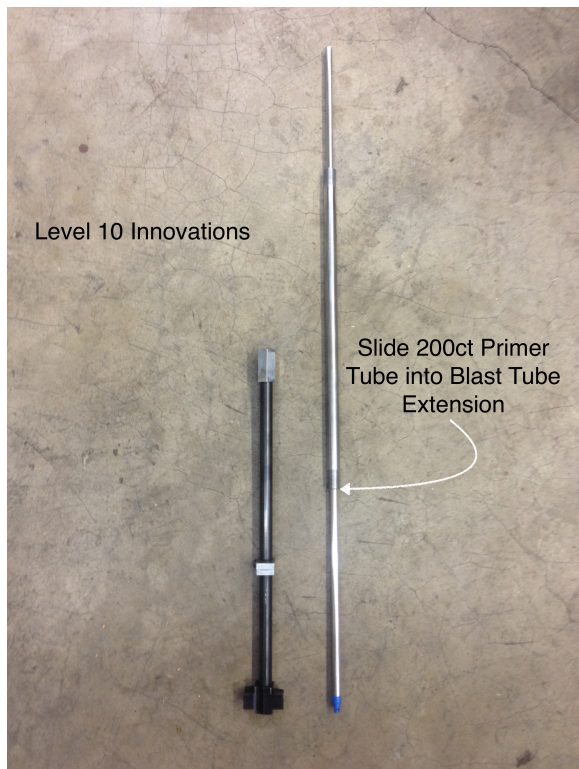
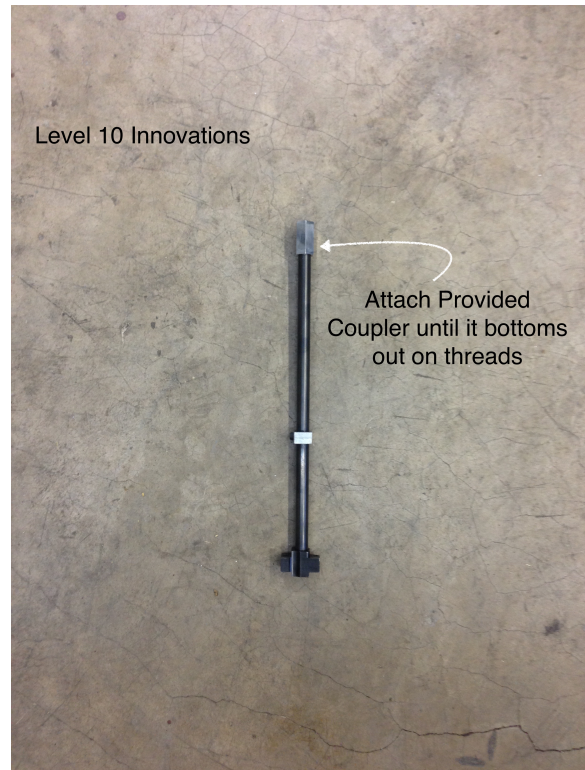
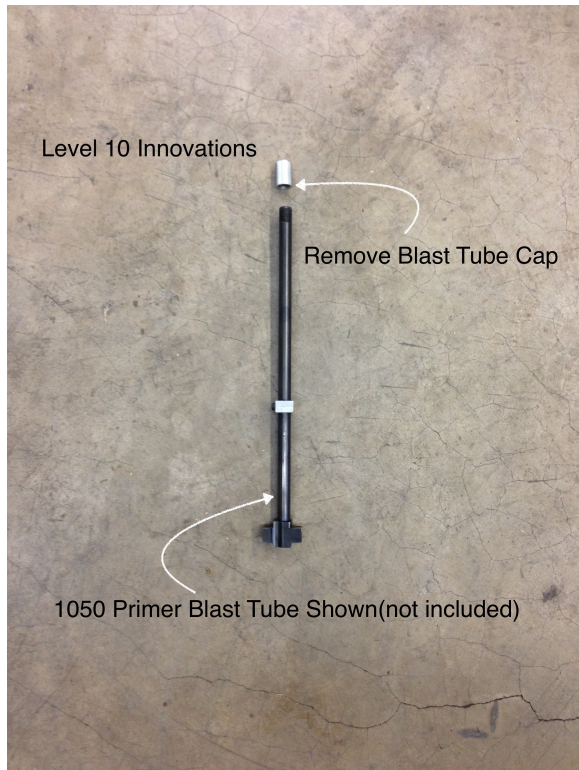


Prior to install be sure
Primer tubes are clear on
the insides

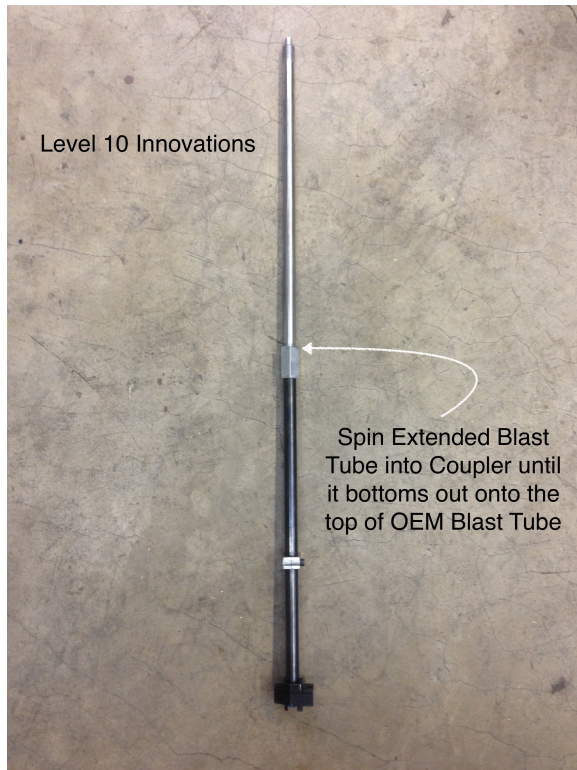

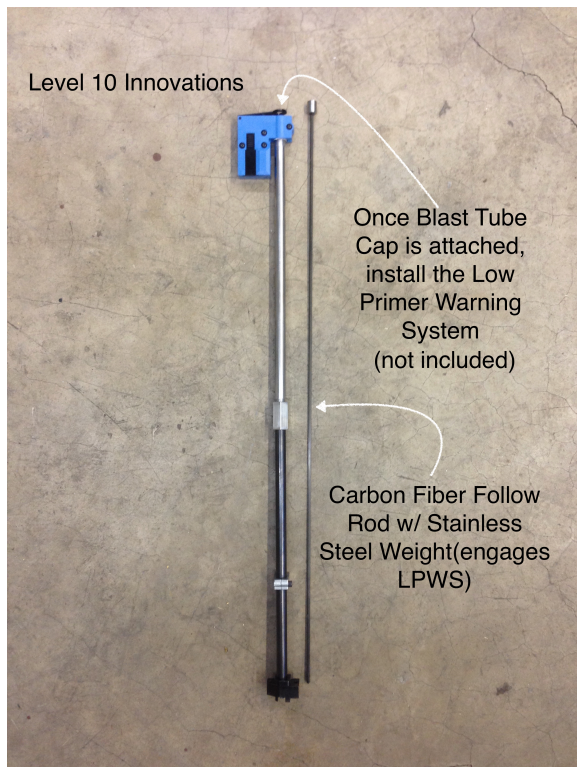

***WARNING:** Always wear Safety Glasses and Gloves. Carbon Fiber breakage will expose needle sharp material. Dispose of properly.

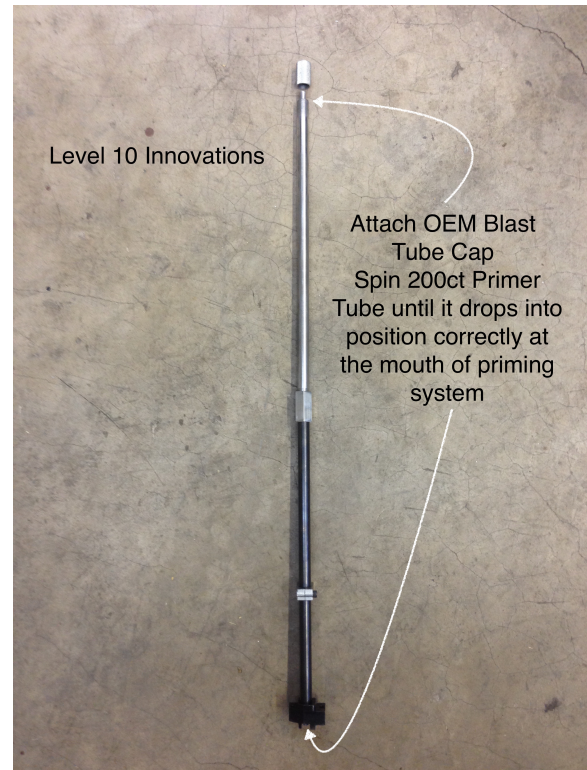

Low Primer Warning System must be used with Follow Rod.

2-Part Heavy Duty Epoxy used to secure weight and to protect the tip. **Carbon Fiber rods are Very Strong but can break if mishandled.***

Feel free to contact us with any questions/concerns.

sales@lvl10i.com