

2014+ 4Runner LED Fog Bracket

1 Vehicle & Light Prep

Start by removing the negative battery terminal. Remove the Cali Raised LED pod and the fog mounts from the packaging. The pod will come with a generic hardware kit and its bracket. Only the two smaller nuts and bolts included will be used.



2 Remove Bumper

Open the hood and remove the plastic skirt by releasing the plastic body clips on top. Under the skirt, remove 4 more clips and one 10mm bolt. Using a 10mm socket or wrench remove the remaining bolts that hold plastic to the bumper. There are 3 on each side in the wheel well and 4 on bottom of the bumper. Unplug fogs and remove bumper.




3 Fit Mount

Remove the two screws holding the factory fog light using a Phillip's screw driver. Once light is out, remove the fog light trim from the bumper by pressing the tabs and pulling lightly on the trim. After its out use a body saw, Dremel, hacksaw, or similar device, cut the top of the trim shown in the photo below. (Only the top will be used.) Hold bracket to bumper and mark areas that need to be cut. Trim until you have a flush fit to the bumper. See image for rear view of trimmed area.



4 Install Pod

Once you have a good fit its time to install the light. Off of the bumper, slide the LED pod into the bracket so that it sits flush and secure it in place using the Allen key and hardware provided with the pod. Once you have the pod firmly in bracket, place the bracket back into the bumper and use a 7/16 wrench or socket to snug down the two nylocks (with washers) that attach the bracket to the bumper.

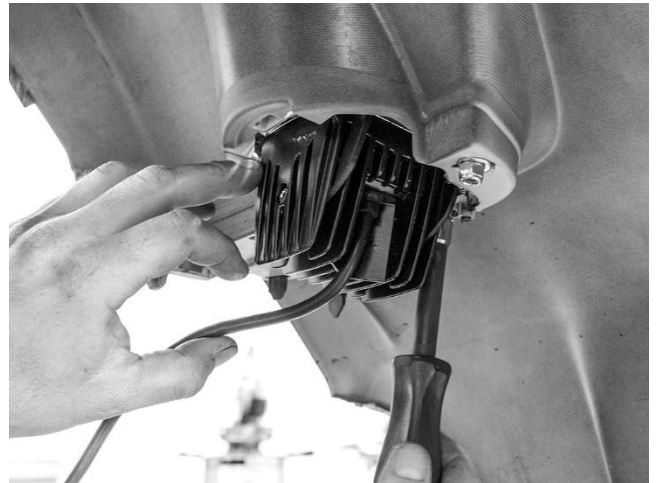

Note: Do not over tighten nylocks. Doing so will cause distortion to the bumper.

5 Finishing up

Now re-attach the bumper in the reverse order you removed it in. Tighten all the bolts *except the three on each side in the wheel well* so that you can connect the wiring. The wiring will depend on many factors: adaptor, custom system, supplied harness, or professional install. In this instruction manual, we used the plug and play adaptor that utilizes the factory harness. Connect the pod to the factory harness using the adaptor. (Sold separately) Reconnect your battery terminal and you're finished!



Factory Plug and Play Adaptor



Finished install with Hidden 30" Bumper Bracket