


SUBARU FORESTER 2019-2020

CONGRATULATIONS FOR YOUR NEW LP AVENVENTURE BUMPER GUARD!

If you have any questions or need assistance during the installation please contact our team. You can find the infomation on the last page.

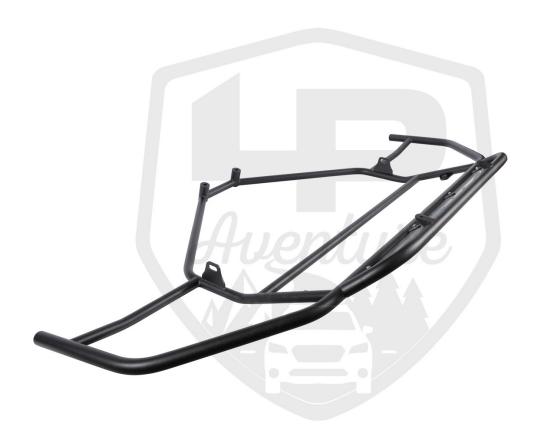

IN THE BAG



BARE BUMPER GUARD SHIPS WITH FRONT PLATE UNINSTALLED






NECESSARY TOOLS


- We recommend the use of a lift
- Knife
- Jack
- -Ratchet
- 14mm Socket
- 19mm Socket
- 22mm Socket

TRIM FACTORY UNDER TRAY






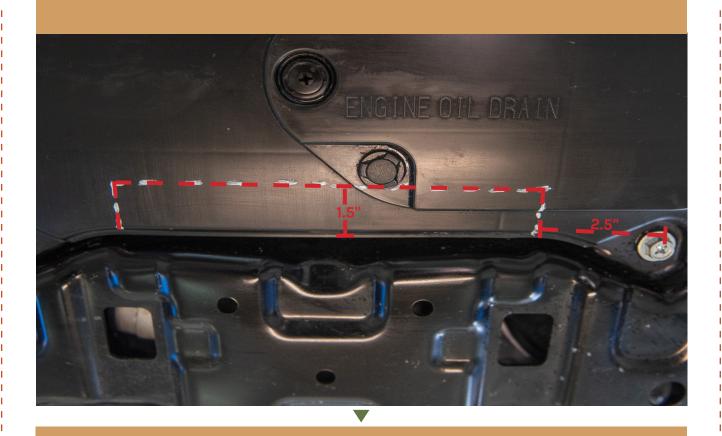

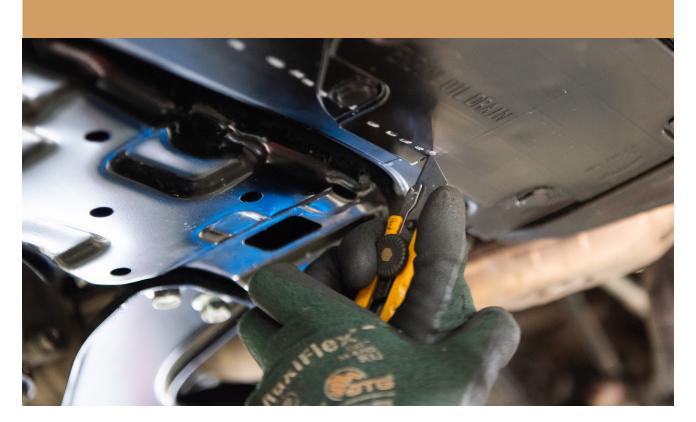




2 REMOVE BOLTS

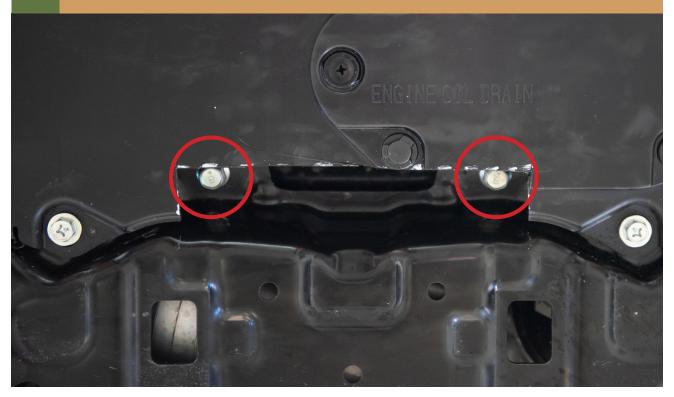



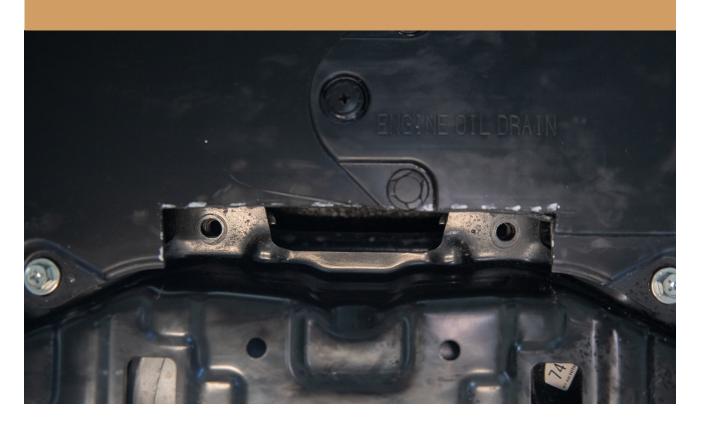



3 INSTALL BUMPER GUARD SUPPORT BOLT







4 USE A JACK AND A PIECE OF WOOD TO STABALIZE THE BUMPER GUARD DURING INSTALLATION

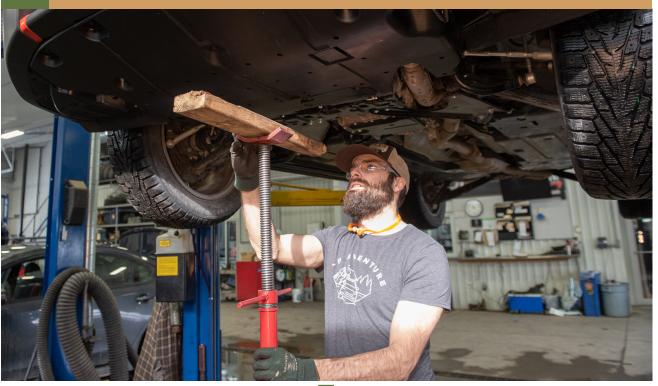

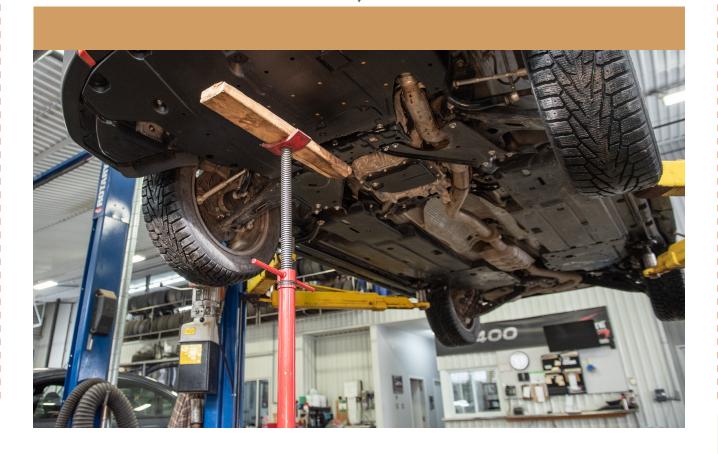


5 RAISE THE BUMPER GUARD UP INTO PLACE

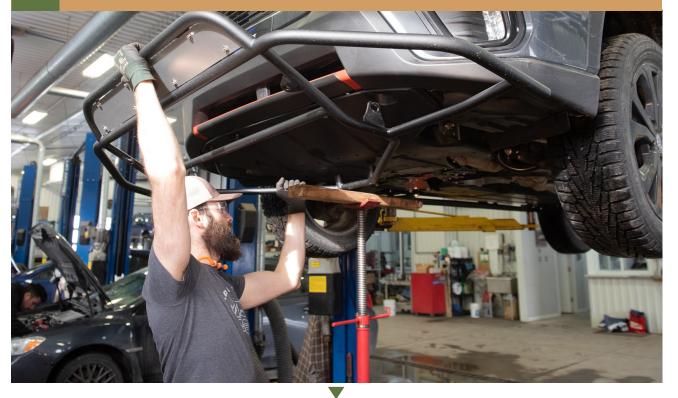

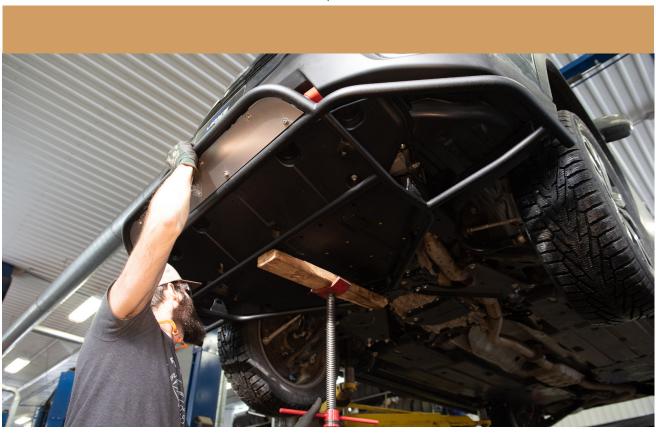


6 INSTALL REAR BOLTS INTO THE BUMPER GUARD



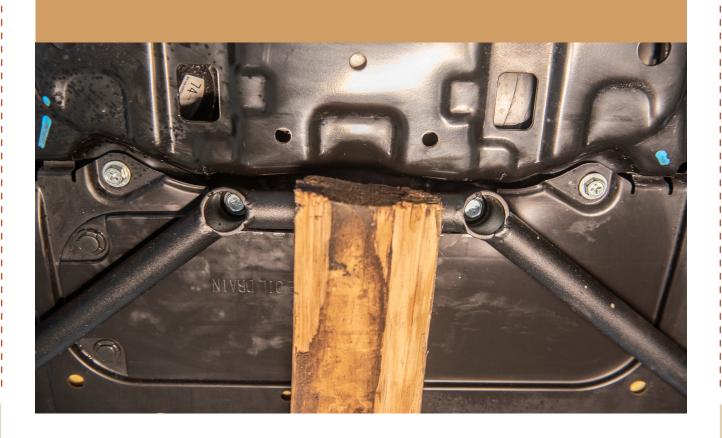

7 INSTALL FRONT BUMPER GUARD BOLTS



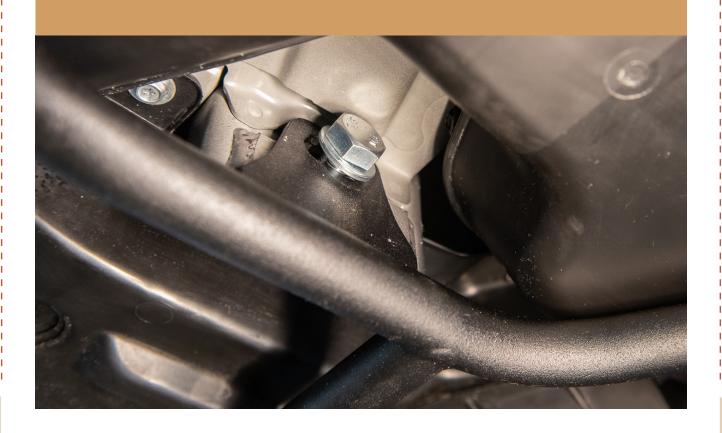

8 TIGHTEN ALL THE BOLTS





NOTES:

Tighten all the bolts to the manufacturer's specifications with a Torque Wrench

Double check your work.
Reinstall the wheels and be sure to tighten
the nuts with a torque wrench.

Products warnings: https://lpaventure.com/pages/products-warnings

Limited product warranty: https://lpaventure.com/pages/limited-prod-



You have completed the installation.

Thank you for your interest

in our products.

For all requests, information or assistance: Contact our team by phone at 1 (866) 562-1316

We are available Monday to Friday Between 8AM and 5PM (EST).

Or by email at: SALES@LPAVENTURE.COM WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!