



# Installation guide

---

## LP Adventure Bumper guard

(small & big)

---

Subaru Outback



## Necessary tools :

- Ratchets
- 12mm Socket
- 19mm Socket
- 22 mm Socket
- 12mm wrench
- 19mm wrench
- Trim pad remover



---

**Please note that you must remove the original skid plate to install the LP Adventure bumper guard.**

**We suggest replacing it with the LP Adventure skid plate**




**#1 : Unscrew the bolt of the bumper beam.**



## #2 : Install the bracket.

\*\*\* Replace the bolts of the bumper beam with bolts # 1 \*\*\*

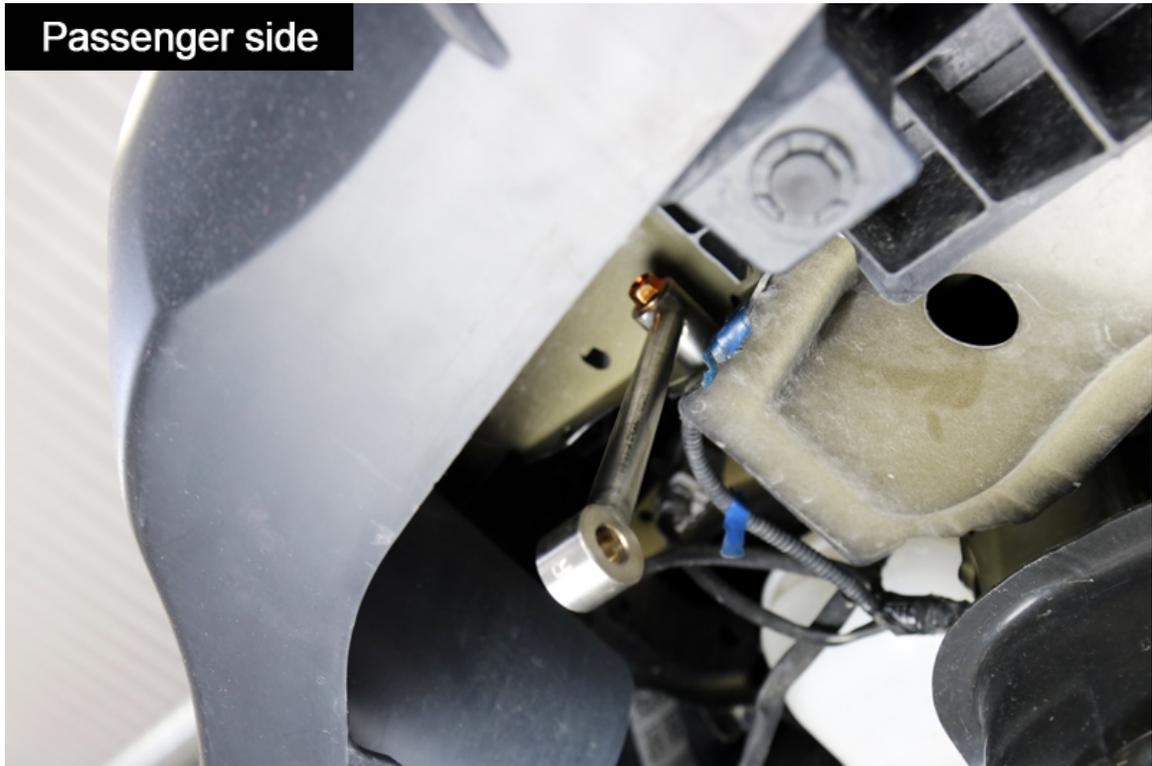

### #3 : Unscrew the bolts of the U-frame



**#4 : Attach the bumper guard to the bracket,  
using nuts and bolts # 2.**

**\*\*\* Do not screw the bolts to the end (you can tighten these after step # 5) \*\*\***



**#5 : Bolt up the bumper guard.**

**\*\*\* (use the small bolts # 3 and the big bolt #4 ) \*\*\***



**#6 : You can now completely tighten the bolts of the bracket**



**You have finalized the installation!**



Here's what it's like with the big bumper guard




## Options for the big bumper guard:

**LP Adventure big bumper guard with the Full Armor Option**



**LP Adventure Skid Plate (also fit on the small bumper guard)**

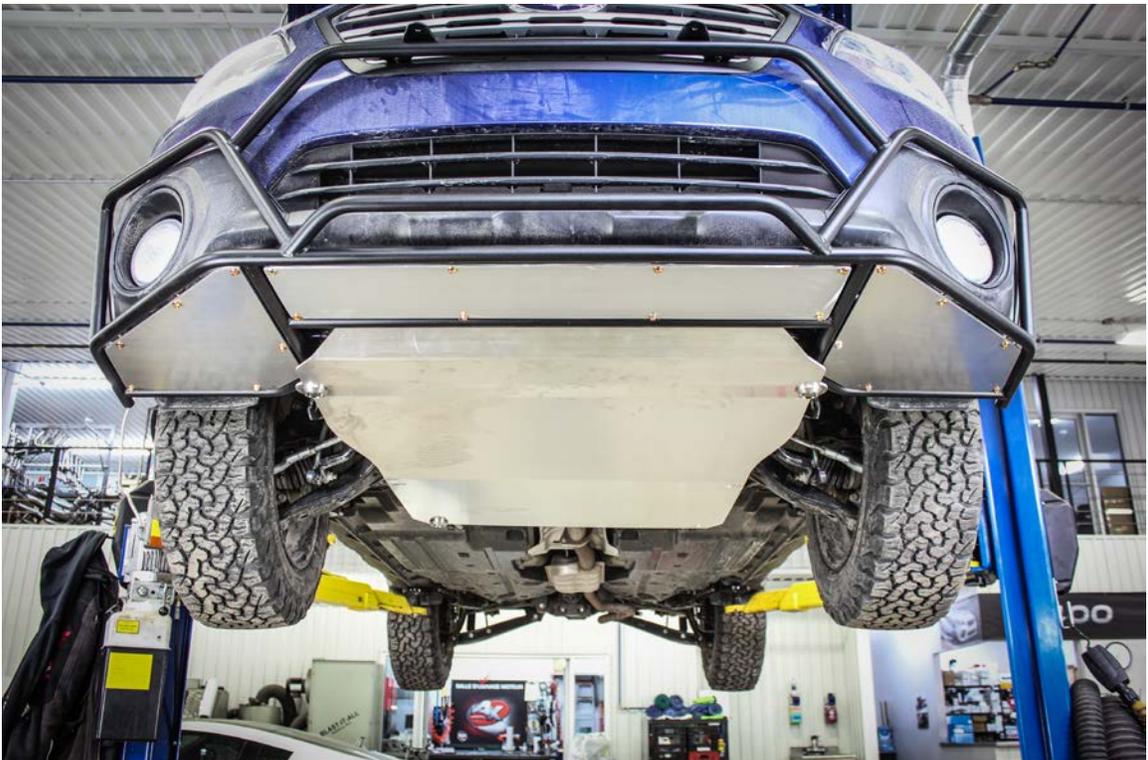

## Option for the small bumper guard

LP Adventure front plate



**Thank you for your interest in our products.**

**For all requests for information or for assistance:**

**Contact our team by phone at**

**1 - (450) 562-0344**

**We are available Monday to Friday between 8:00  
and 17:00.**

**Or by email at :**

**[sales@lachuteperformance.com](mailto:sales@lachuteperformance.com)**

**[www.lpaventure.com](http://www.lpaventure.com)**

