



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE MAIN SKID PLATE ◀

SUBARU OUTBACK 2020

**CONGRATULATIONS FOR YOUR NEW
LP AVENVENTURE SKID PLATE!**


If you have any questions or need assistance during the installation please contact our team. You can find the information on the last page.



**IN
THE
BOX**



IN THE BAGS

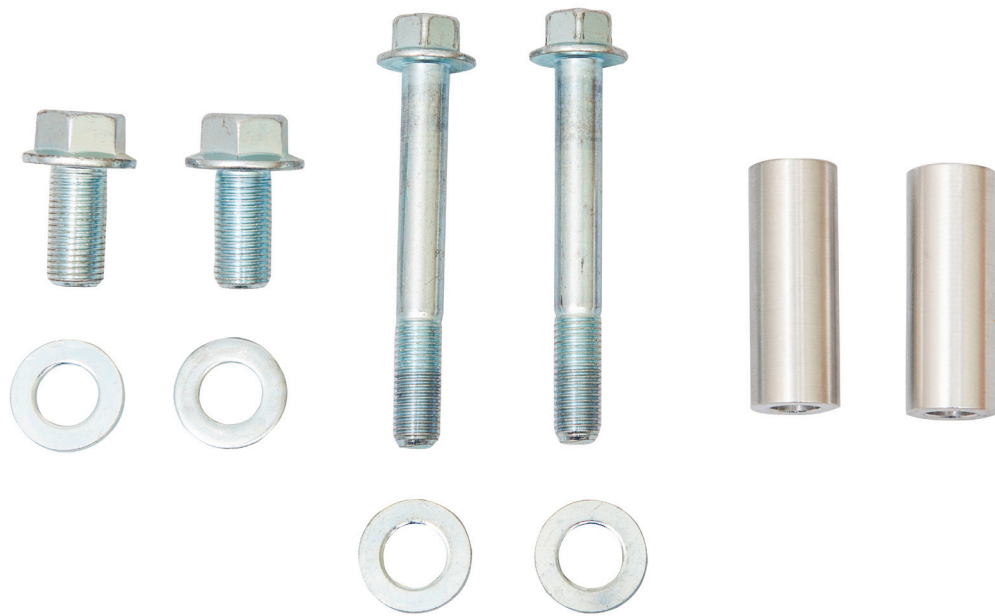






NECESSARY TOOLS

- We recommend the use of a lift
- Transmission jack (or regular jack if not on a lift)
- Ratchet
- 14mm Socket
- 17mm Socket

1


WITH A LP AVENTURE BUMPER GUARD INSTALLED REMOVE THESE TWO BOLTS FOR THE REAR OF THE SKID PLATE

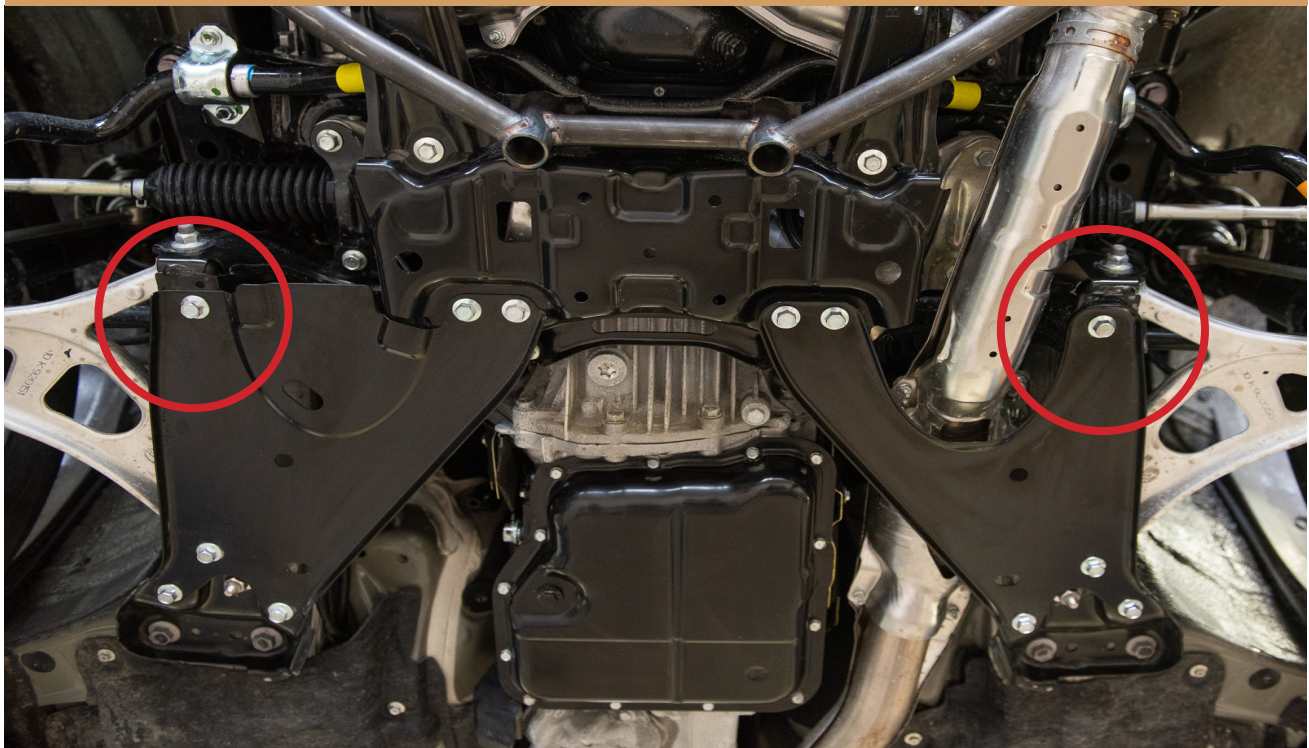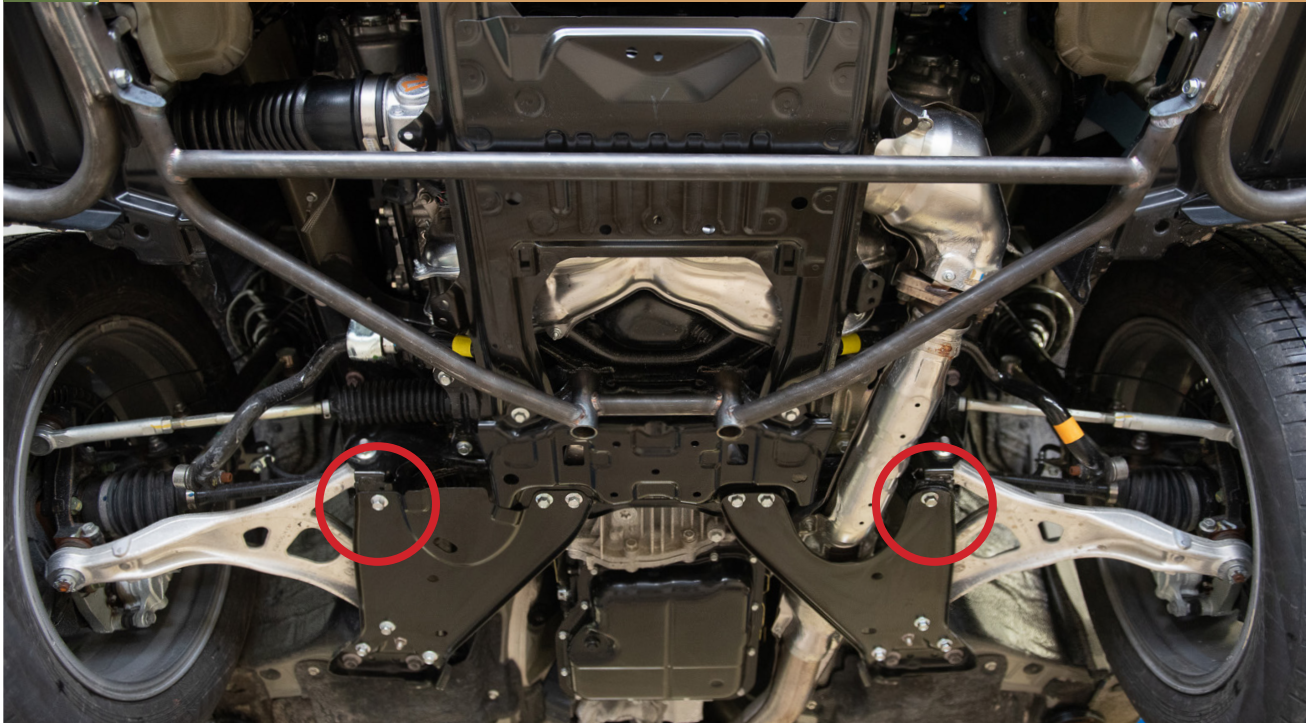

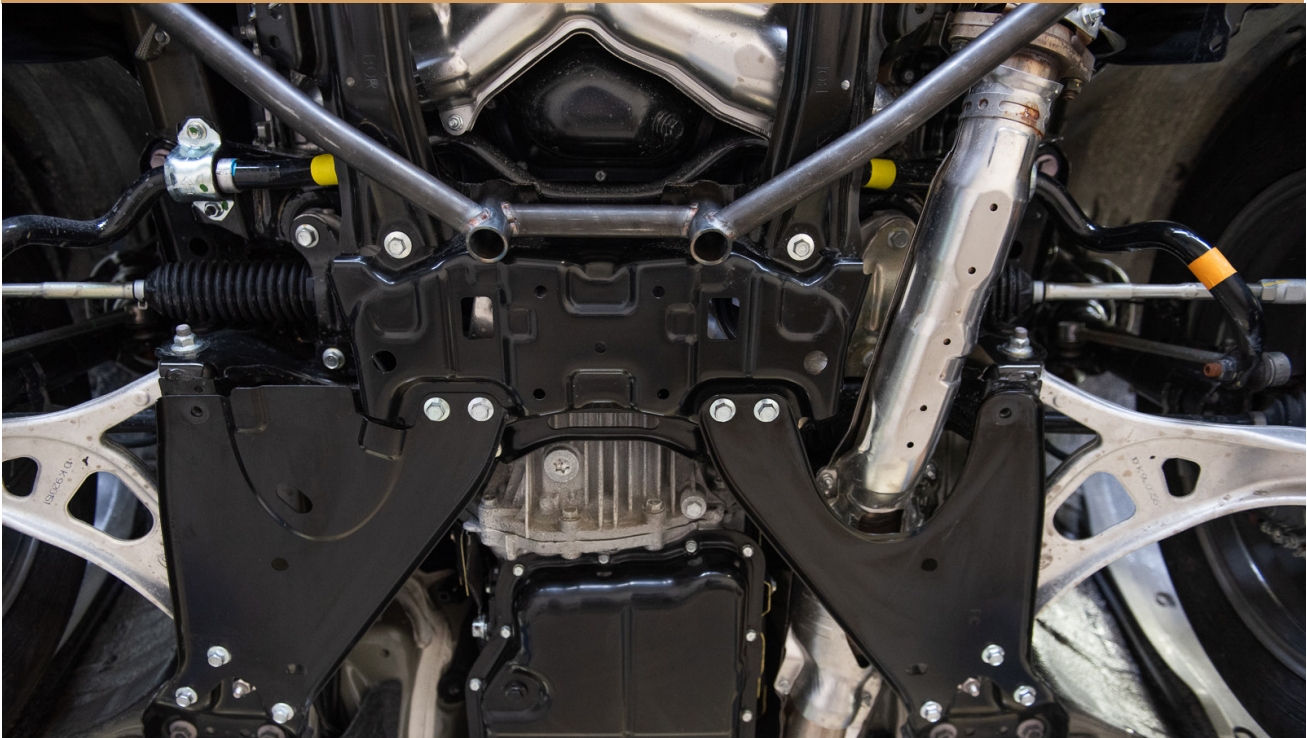

2

USE A JACK AND PIECE OF WOOD TO HELP SUPPORT THE SKID PLATE WHILE INSTALLING

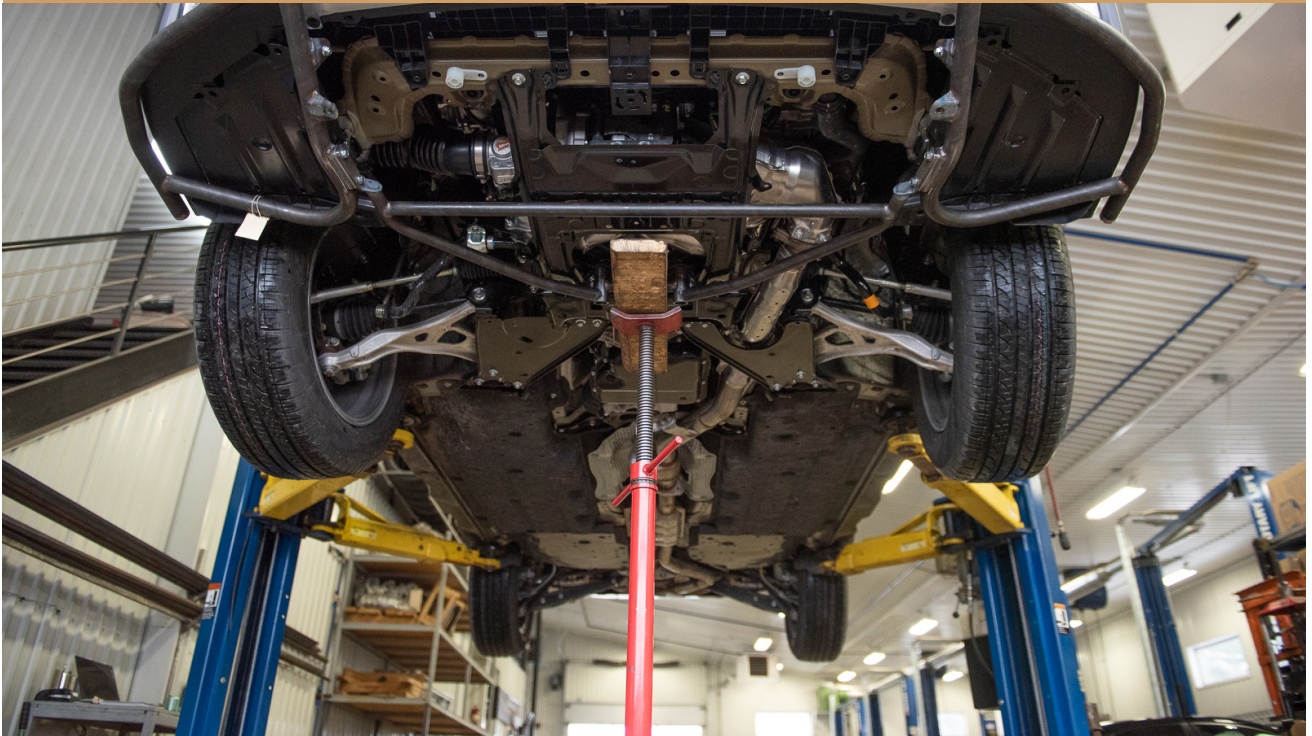


3

RAISE SKID PLATE INTO PLACE




4

BOLT UP FRONT OF THE SKIDPLATE TO THE BUMPER GUARD

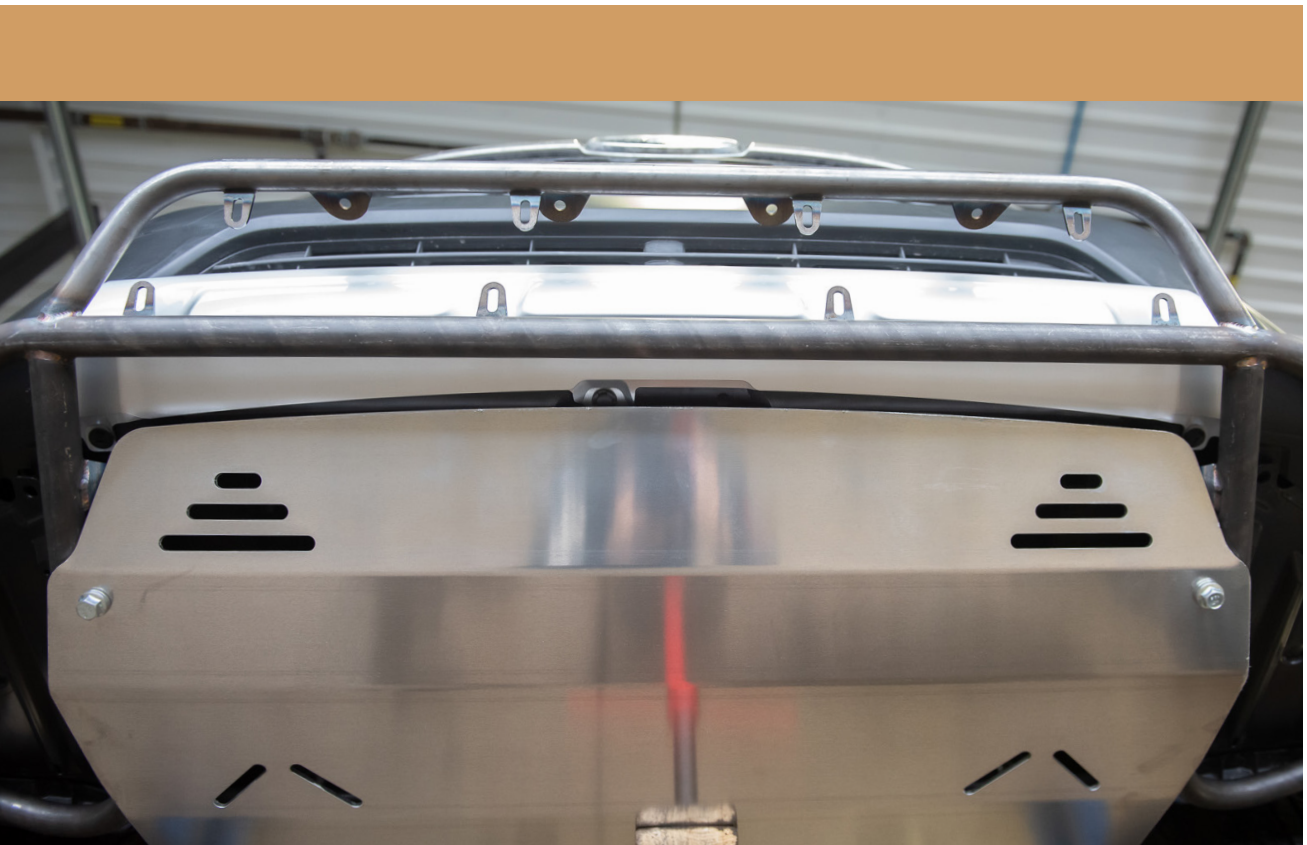

5

INSTALL REAR SKIDPLATE SPACERS

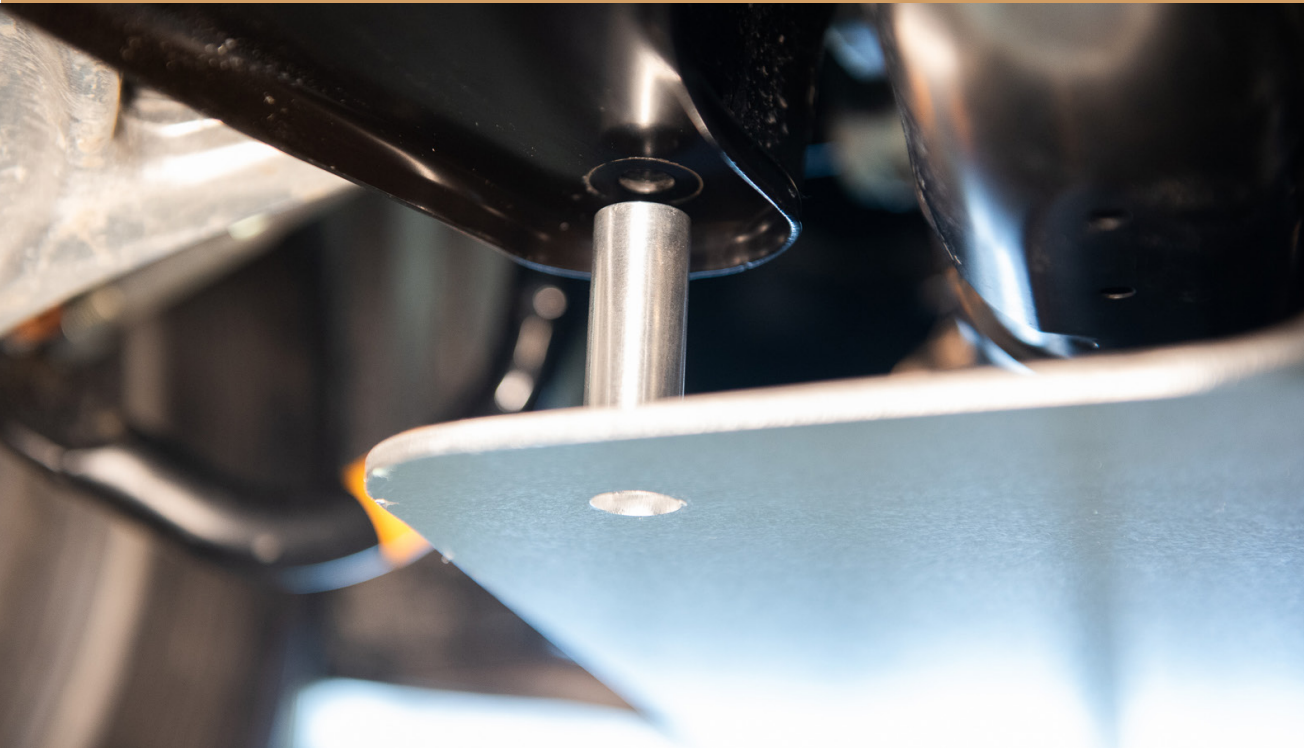

6

INSTALL SUPPLIED BOLTS WITH WASHERS



7

TIGHTEN ALL BOLTS



8

INSTALLATION COMPLETE!



▼
NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

**Double check your work.
and be sure to tighten
the nuts with a torque wrench.**

**Products warnings:
<https://lpaventure.com/pages/products-warnings>**

**Limited product warranty:
<https://lpaventure.com/pages/limited-prod->**



You have completed the installation.
Thank you for your interest
in our products.

For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316

We are available Monday to Friday
Between 8AM and 5PM (EST).

Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!