


## Opal Shower Mixer With Divertor Separate Plate



Nero

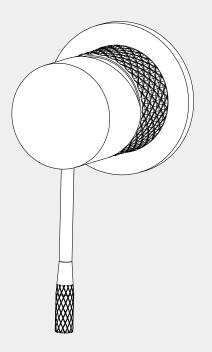


Versions:202401

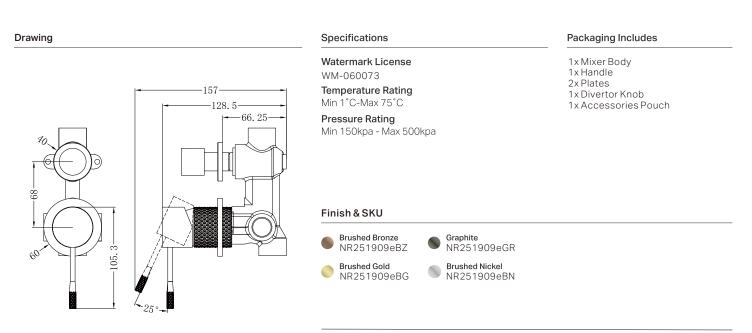

\*Dimensions are nominal measurements only.

## **Installation Instruction**

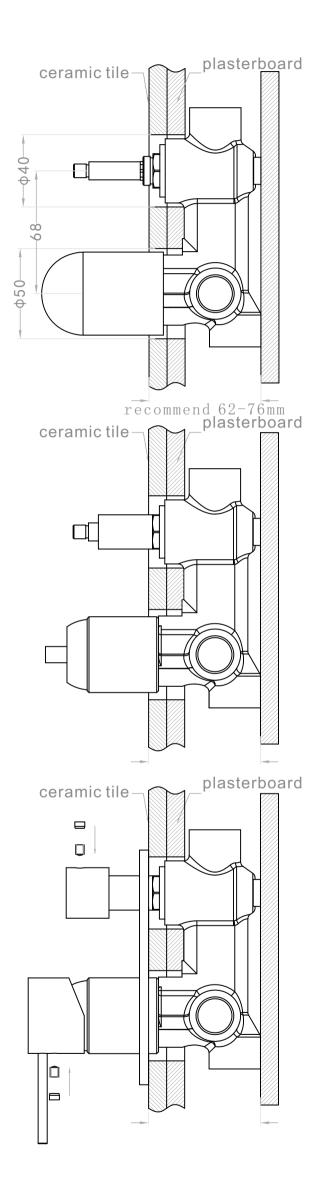

Fix body on noggin and ensure installation depth is 62-76mm from noggin to ceramic tile.
Connect cold water hose and hot water hose and test for leakage.
Install plasterboard and ceramic tile after drilling a φ50 and a φ40 hole according to the right drawing.

4. Remove the plastic sleeve and install sleeve of divertor.

5.Install plates, handle and knob.

www.nerotapware.com.au

Opal Shower Mixer With Divertor Separate Plate - Manual

## Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

