

Bianca Shower Mixer 60mm Plate Trim Kits Only

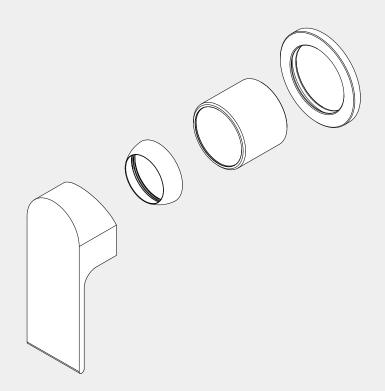


Versions:202401

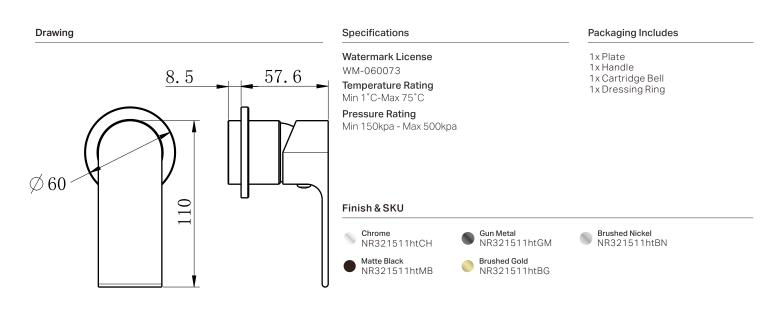

*Dimensions are nominal measurements only.

Nero

Installation Instruction For Trim Kits Only

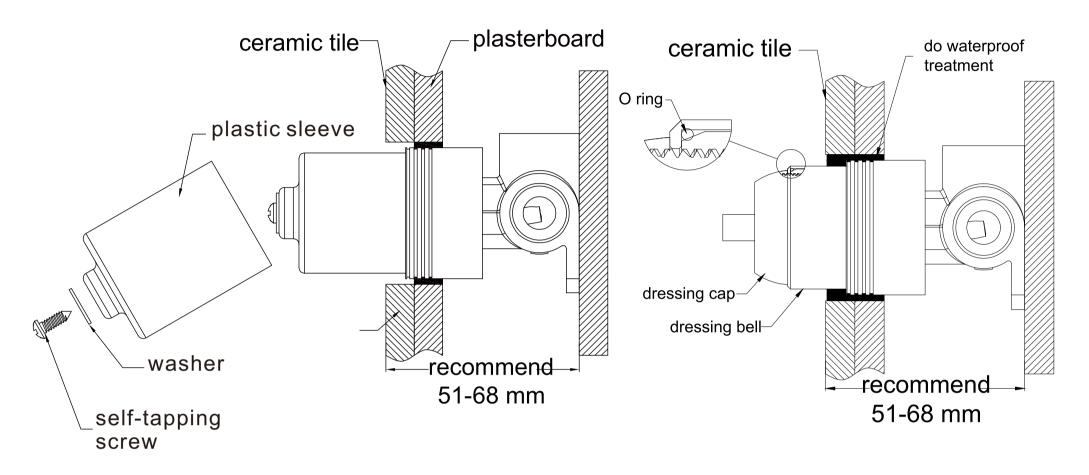


1.Drill a φ 50mm hole in the ceramic tile, then position it as shown in the above diagram.

2. Undo the self-tapping screw, washer, plastic sleeve.

3. Insert the O ring to the dressing bell groove, and slide the dressing bell onto cartridge.

4. Apply waterproof treatment to the area in the diagram above.

5. Tighten the dressing ring on the dressing bell.

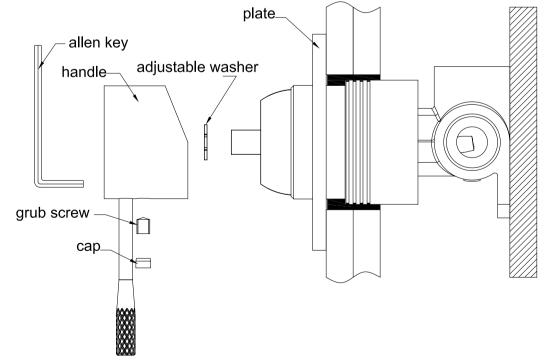

6.Slide the backplate onto the wall.

7. Attach the washer to the cartridge rod, position the handle, tighten it with a grub screw using an Allen key, and cap the grub screw hole.

www.nerotapware.com.au

Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

