

Nero

Mecca Care 32mm DDA Grab Rail Set 45 /90 Degree

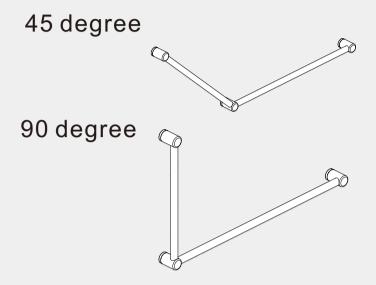


Versions:202401

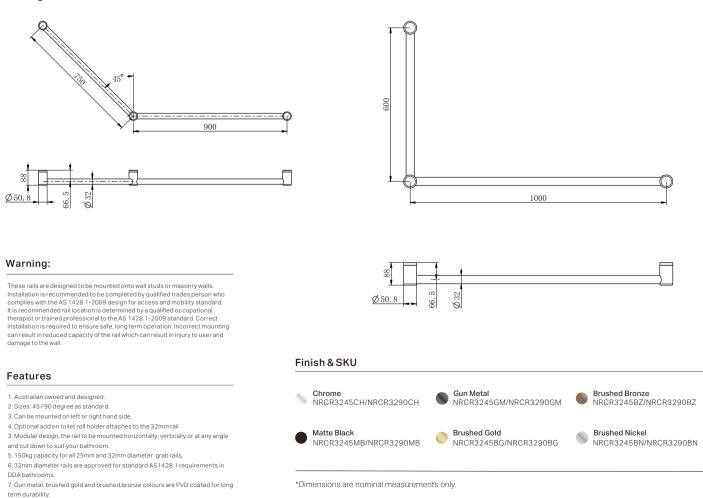



Installation Instruction

A5° =900 90° =1000 90° =1000	 Locate wall studs, install into at least one stud. Place wall seal/mounting bracket on wall at correct height over centre of stud and mark hole positions on wall refer left picture. (minimum 2 supplied screws per bracket). Tip: Rail height is 790mm above the ground.
wall plugs	2. Drill pilot holes into wall stud approximately 60mm deep to suit mounting screws (and wall plugs if required). Tip:3mm hole for screws into timber or 8mm hole for wall plugs.
wall plugs >	3. Apply small amount of silicon to mounting bracket and wall in and around the screw holes.
	4. Install mounting brackets by screwing onto wall. Tip: Use appropriate mounting screws for the wall stud material, supplied screws are for timber wall studs.
	5. Slide rail tubes into end brackets and push onto wall brackets,refer to left picture. Tip: Rail length can be cut down to a smaller size, simply use an angle grinder, hacksaw or pipe cutter then deburr the end with a file or grinder and reinsert into the end bracket.
	6. Tighten grub screws with allen key. Tip: If rail rattles, loosen end bracket, twist slightly and tighten.

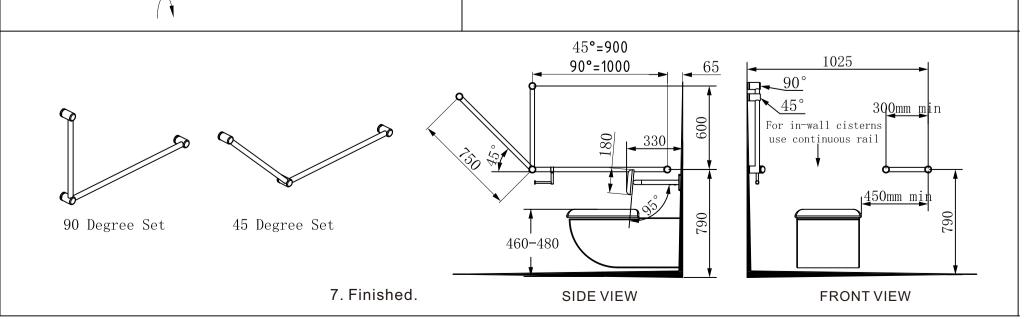

www.nerotapware.com.au

Mecca Care 32mm DDA Grab Rail Set 45 /90 Degree - Manual

Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201





