


Assembly Instructions for 09030101/09031004 Karma Rotorua Full Electric Bed

Thank you for purchasing the Karma Rotorua Full Electric Bed, below are the instructions for assembly.

1. Carefully remove all components of the bed and discard the carton and unwanted packaging.
2. Remove the control box and hardware by cutting the cable ties holding it to the frame.



3. Remove the rubber feet from the frame and screw them into the bottom of the frame. This is best done with the bed laying on its side.

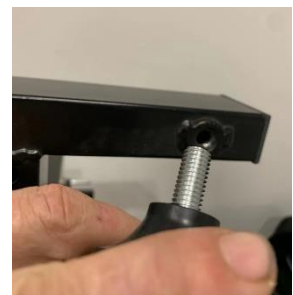


4. Stand the frame back on its feet and connect the control box to the frame by sliding it over the metal plate sticking up on the end of the frame. Now connect the power lead, hand control and the motors in the following order.



M2 Head motor
M3 Leg motor
M4 Height motor

5. Connect the leg motor to the frame and extend the leg motor until the frame is straight.

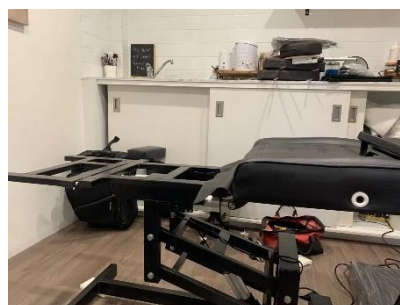

6. Remove the bolts from the head section buckets and stand the head section up on the frame to line up the hinges. There should be no gap between the hinges as the photos show.



To help support the head rest while you manoeuvre the bolts in place, insert a screwdriver in where the bolts go on one side while working on the other (an allen key or other small item can be used).

It is easier to insert the bolts from the inside (toward the middle) of the bed and the nut will go on from the outside.

It is important to tighten the bolts but do not over tighten them or the hinge will be too tight. The nut should be just touching the hinge bracket.

Once the head section hinge bolts have been attached, connect the head section motor, again the bolt for this should be tight but not too tight.

7. Put the leg cushion in place on the leg frame and connect the 4 bolts to hold it in place by starting them all first before tightening completely (the bolts for this are located in the back of the leg section, you need to remove them before attaching the cushion). Make sure the vinyl flaps are over the hinges to protect the vinyl of the cushion sections. Now lower the leg section all the way down, this will move the vinyl protection piece to the correct position.

8. Making sure the two vinyl sections are laid over the hinges that extend from the head and leg sections. Pierce a hole through the vinyl where the bolts need to go through to connect to the mid section. Once you have pierced the holes, you may want to make the hole a little larger to make it easier to line the bolts up with the holes.

9. Now place the mid section in place making sure the holes for the arms are closest to the head section. Insert the 4 bolts that you removed from the back section through the frame into the holes you removed them from. Start them all first before tightening. You

Attach the silver C bracket where you would like the hand control to hang from using the 2 shorter screws. Generally, people hang it from the mid section. When installing this remember it does not need to protrude too far out, usually only 1.5 to 2cm maximum.