


HEAVY DUTY DUAL BATTERY TRAY

Tray Fitting Instructions to suit Auxiliary battery for
TOYOTA Landcruiser Prado 120 Series

Years: 2003 to 2009

Models: 1KD-FTV, 3.0 Litre Turbo Diesel

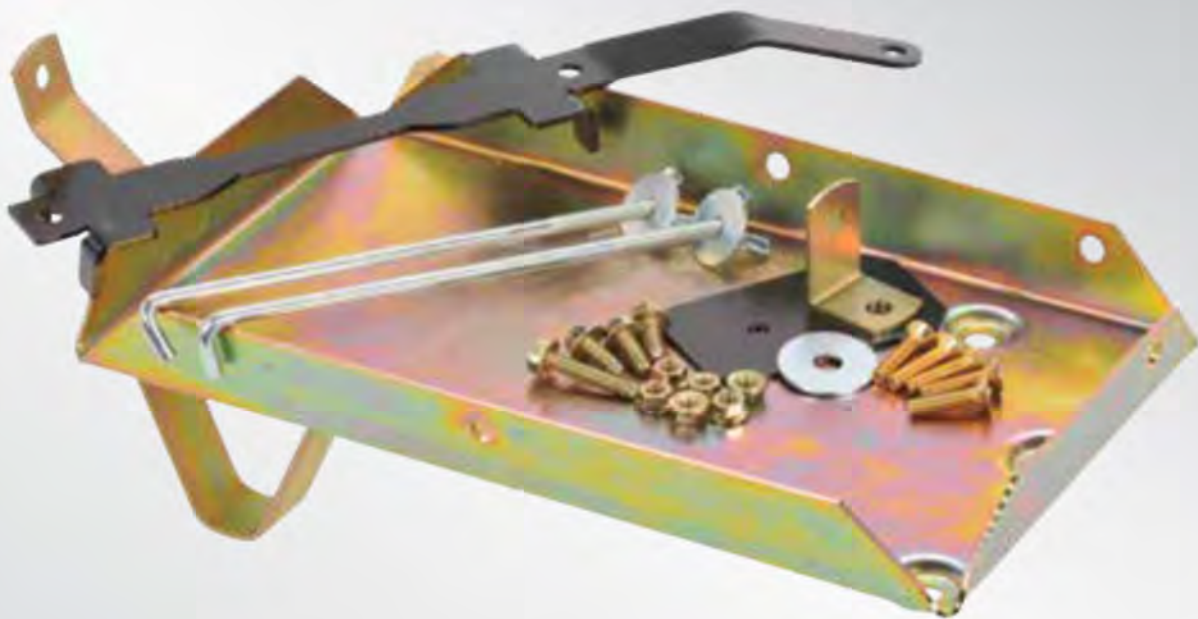

IMPORTANT SAFETY INFORMATION

Please read this instruction thoroughly before fitting the tray.

This product is recommend to be fitted by a workshop or qualified mechanical person.


WARNINGS

- Before installation, make sure that the vehicle is stationary and the wheels chocked.
- Be careful when laying wires, not to cause any electrical shorts or wire breakage.
- After installation ensure the bonnet can close without hitting the newly installed battery and battery tray.

SPECIFICATIONS

Max Battery Size (mm)	L300x W174 x H220
Max Battery Weight	23Kg
Recommended batteries	Exide LCS 27-97 & Century N70TMF
Approximate fitting time	1 hour
Special tools	None required
Recommended Dual Battery System	P/n: IDC25, DBC100 (can use DBC150), VSR100 (can use VSR200)
Tray Location	Engine Bay, Passenger side near firewall

KIT INCLUDES

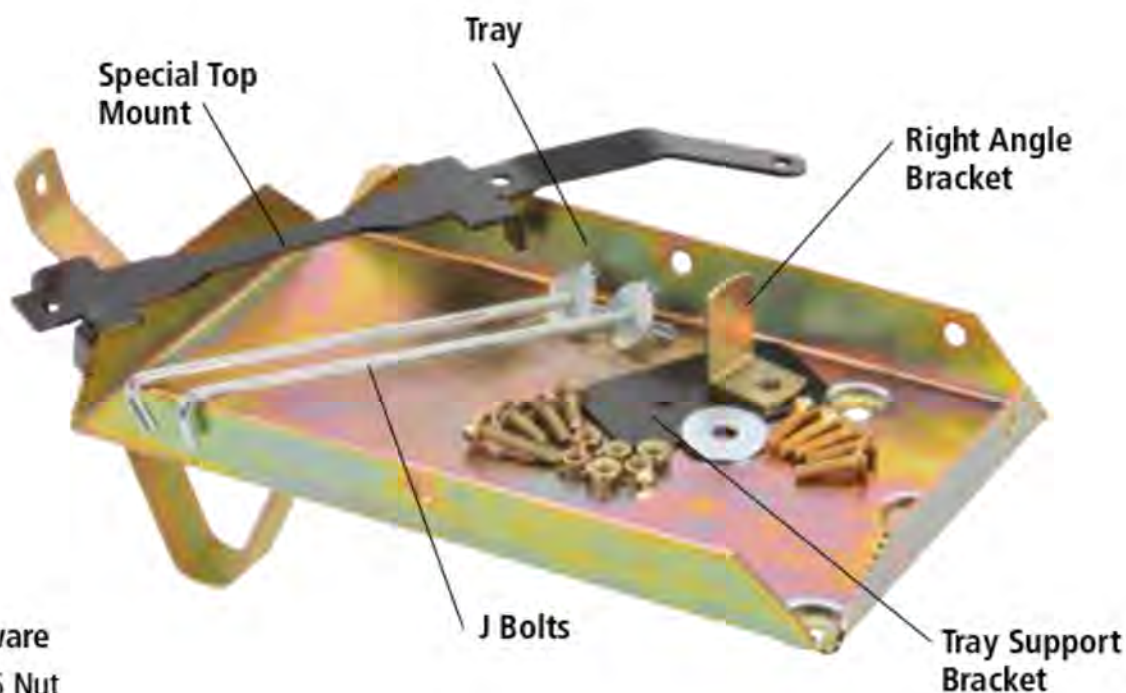

Hardware

4 x M6 Nut

2 x M6 Bolt

5 x M6 Bolts counter sunk

1 x M6 Washer

1 x M6 Bolt Long

FITTING INSTRUCTIONS

1. Make sure that the vehicle is stationary, the engine is switched off and cool. Disconnect the negative battery terminal from the main battery.
2. Locate the area where the tray will be fitted.



3. Unclip wiring loom and bolt in supplied right angle bracket using 1 x M6 bolt and nut. Hole created after unclipping loom clip.

