


Tips:

Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue

- Glue together columns (note corner and end columns have slightly different end pieces)
- Glue together columns then fit walls between them before gluing to the base.

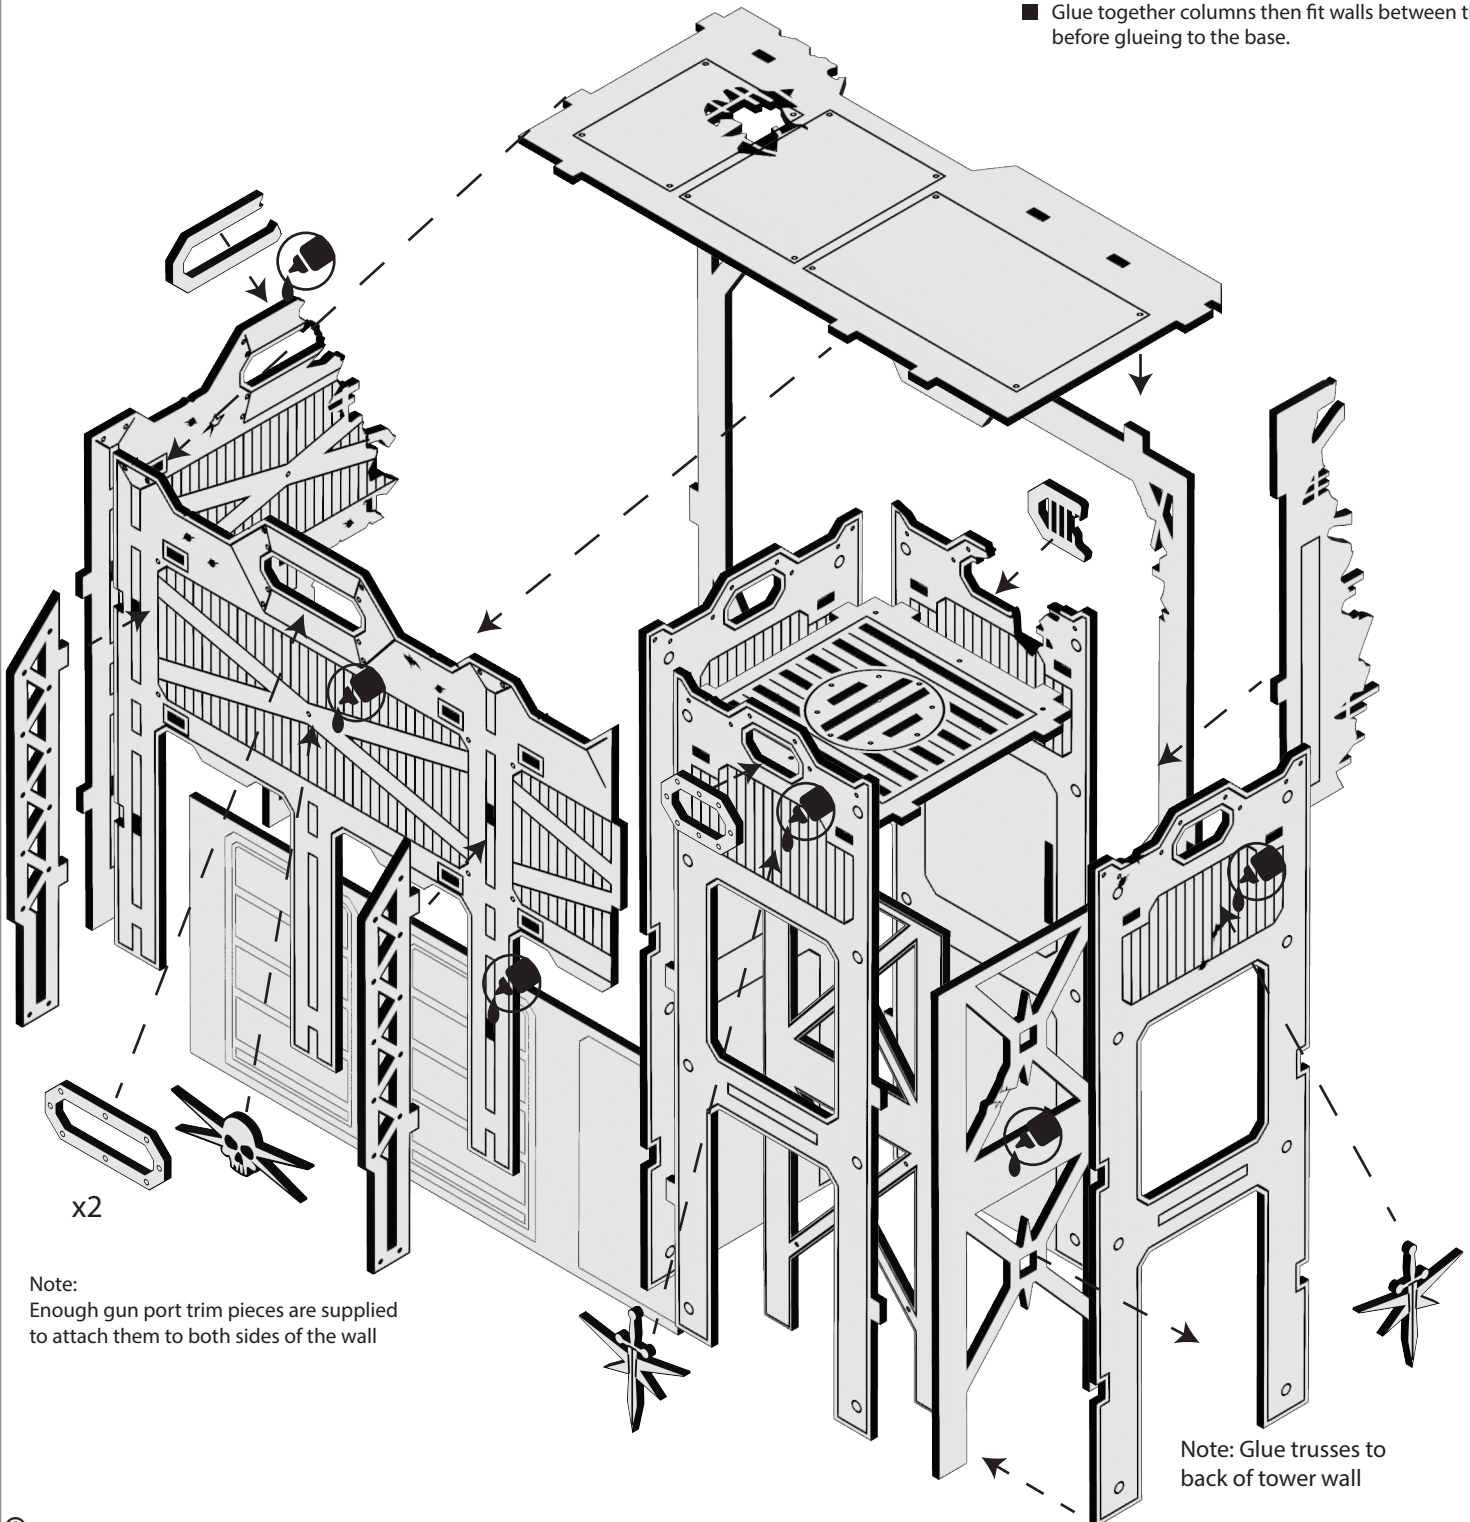

Note:
Enough gun port trim pieces are supplied
to attach them to both sides of the wall

Note: Glue trusses to
back of tower wall