



Suggested Layout on Plexiglass Base

COM SAT ARRAY


STEP 1: Test fit com sat supports.
Glue supports in place after fitting

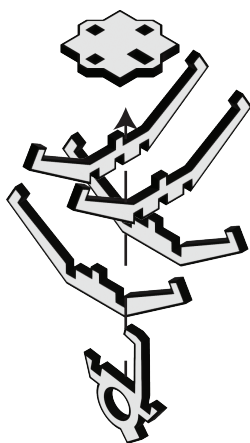

STEP 2: Fit com sat panels to supports

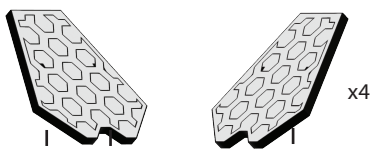

STEP 3: Glue com sat base together
Glue com sat array to com sat base

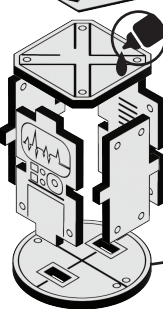

Tips:


Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue

■ Walls and floors first

■ Add gun port trim, buttress pieces and icons after walls and floors are assembled

NOTE: Com Sat Array is designed to fit in the circular recess on the corner of ruins.
If you wish to make the terrain easier to transport, we recommend not gluing the Com Sat Array to the ruin

Panel goes behind Trusses

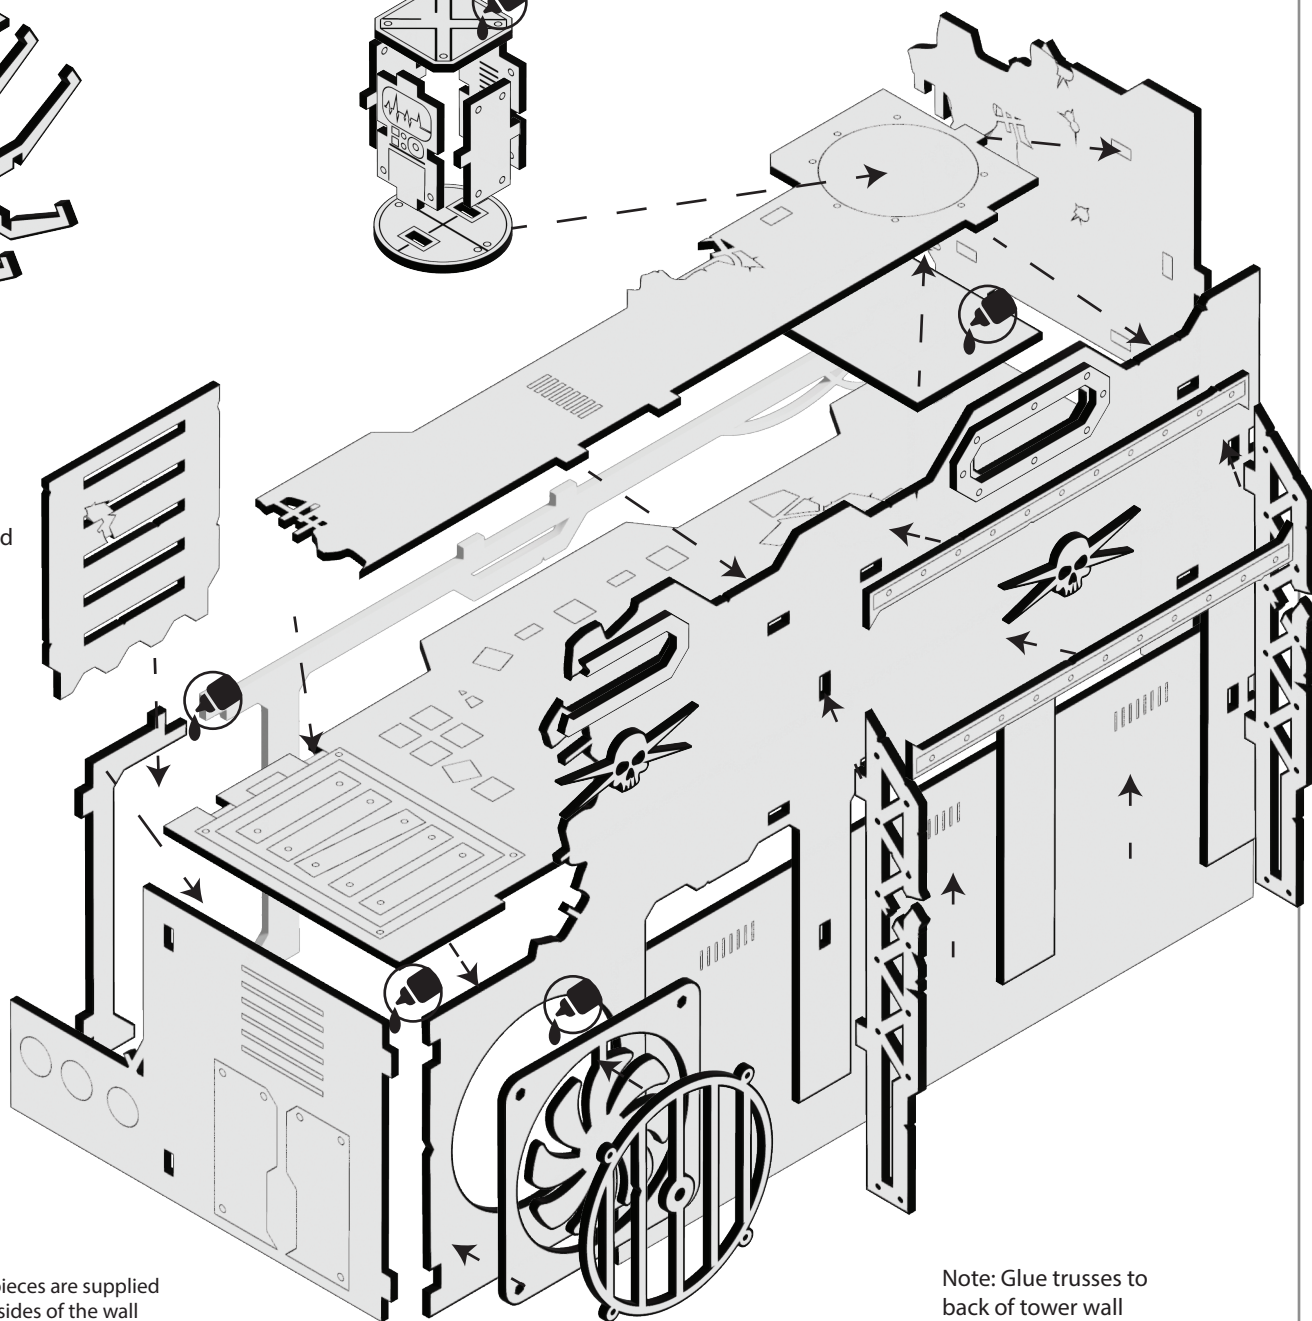

Note:
Enough gun port trim pieces are supplied to attach them to both sides of the wall

Note: Glue trusses to back of tower wall