

KARSK OUTPOST BASTION


ASSEMBLY INSTRUCTIONS

PAGE 1 OF 1

Tips:

Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue


- Glue together columns (note corner and end columns have slightly different end pieces)
- Glue together columns then fit walls between them before gluing to the base.

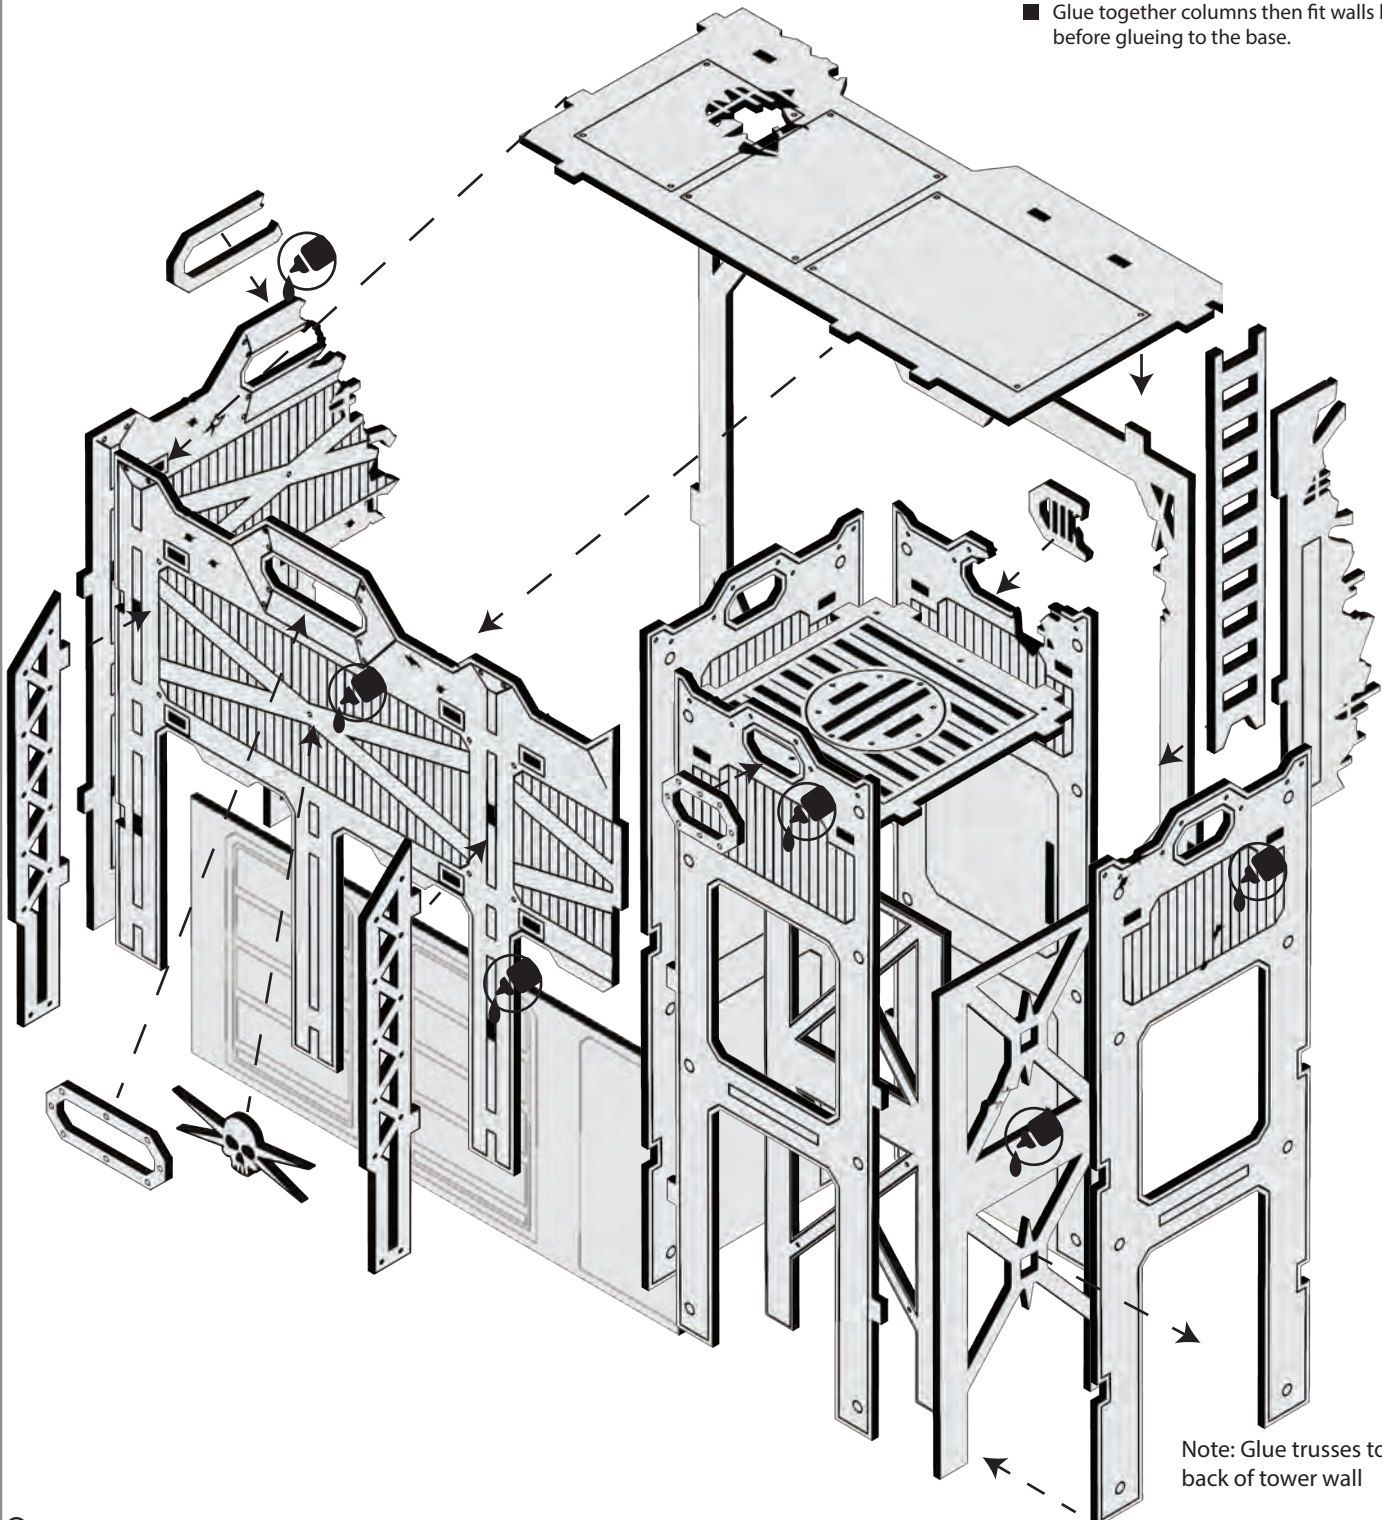

KARSK OUTPOST: RELAY

ASSEMBLY INSTRUCTIONS


PAGE 1 OF 1

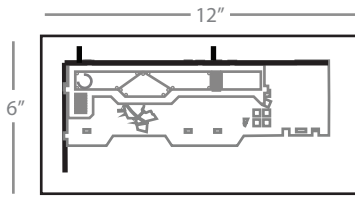

Suggested Layout on Plexiglass Base

COM SAT ARRAY


STEP 1: Test fit com sat supports.
Glue supports in place after fitting

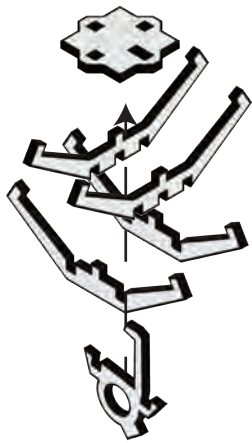

STEP 2: Fit com sat panels to supports



STEP 3: Glue com sat base together
Glue com sat array to com sat base

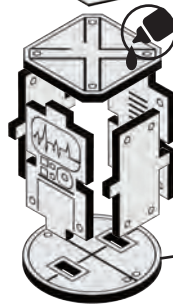


Tips:

Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue

■ Walls and floors first

■ Add gun port trim, buttress pieces and icons after walls and floors are assembled

NOTE: Com Sat Array is designed to fit in the circular recess on the corner of ruins.
If you wish to make the terrain easier to transport, we recommend not gluing the Com Sat Array to the ruin

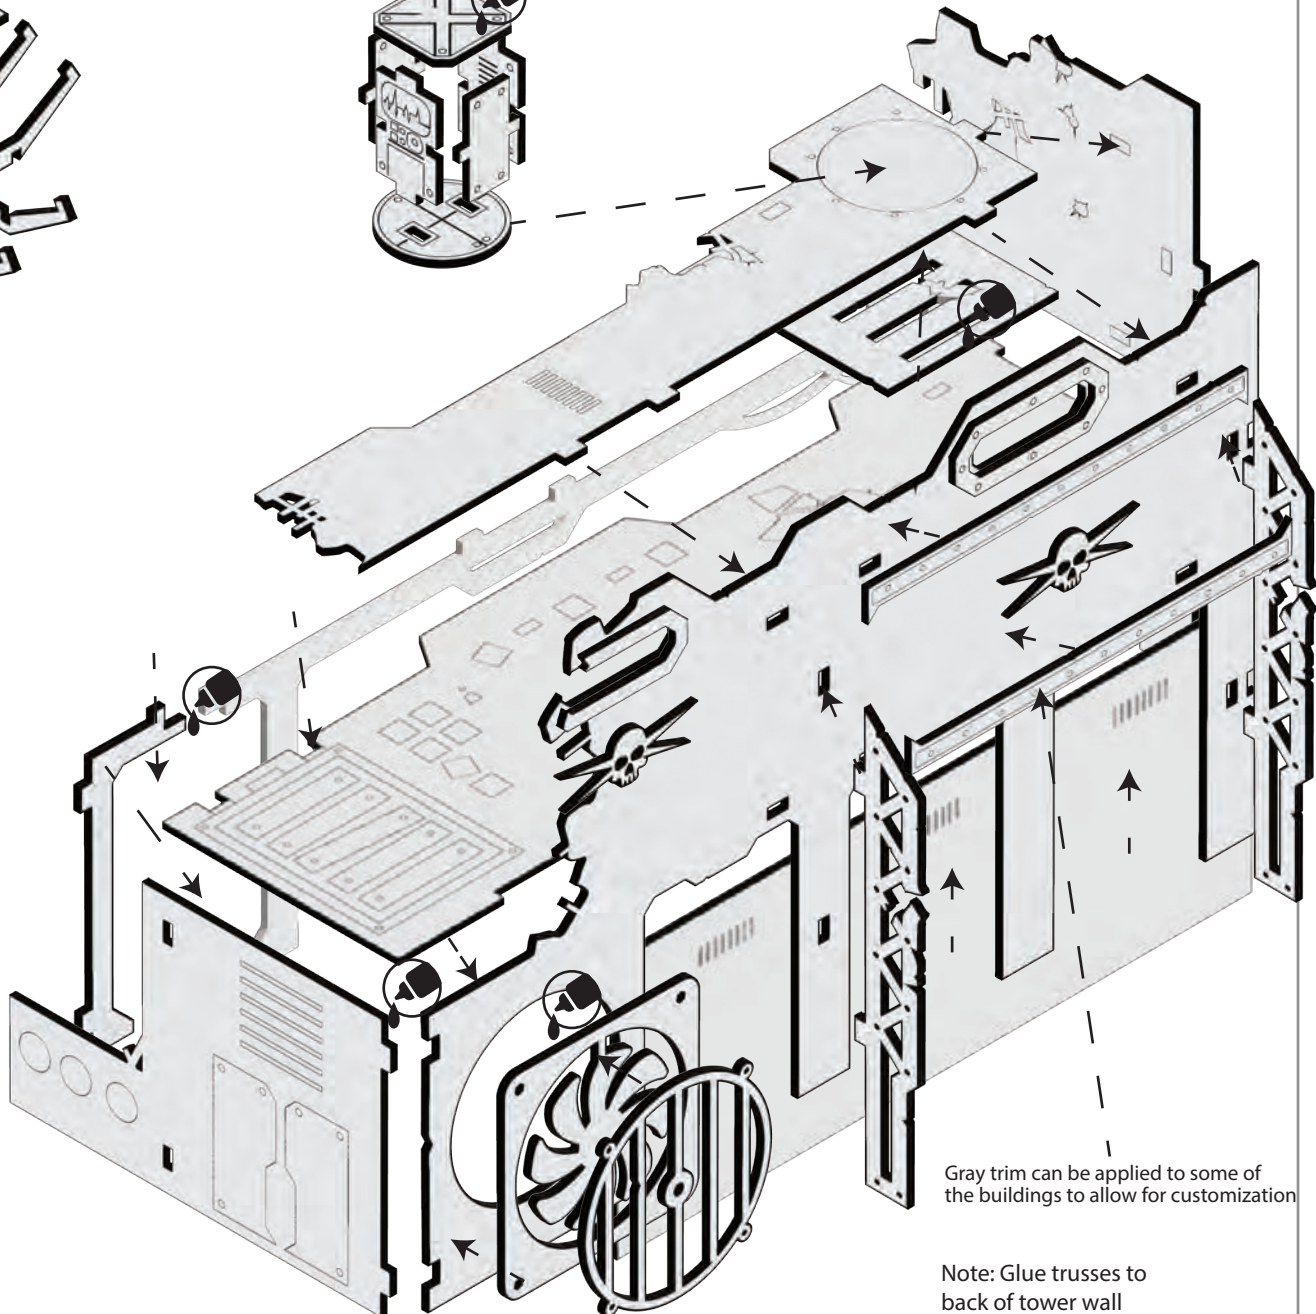


Gray trim can be applied to some of the buildings to allow for customization

Note: Glue trusses to back of tower wall

KARSK OUTPOST DEPOT

ASSEMBLY INSTRUCTIONS

PAGE 1 OF 1

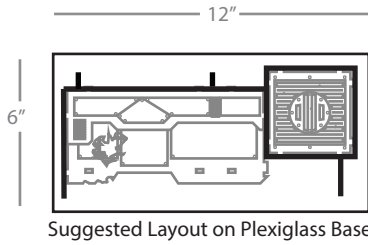



Tips:

Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue

■ Glue together tower, then glue to walls

■ Add gun port trim, buttress pieces and icons after walls and tower are fully assembled

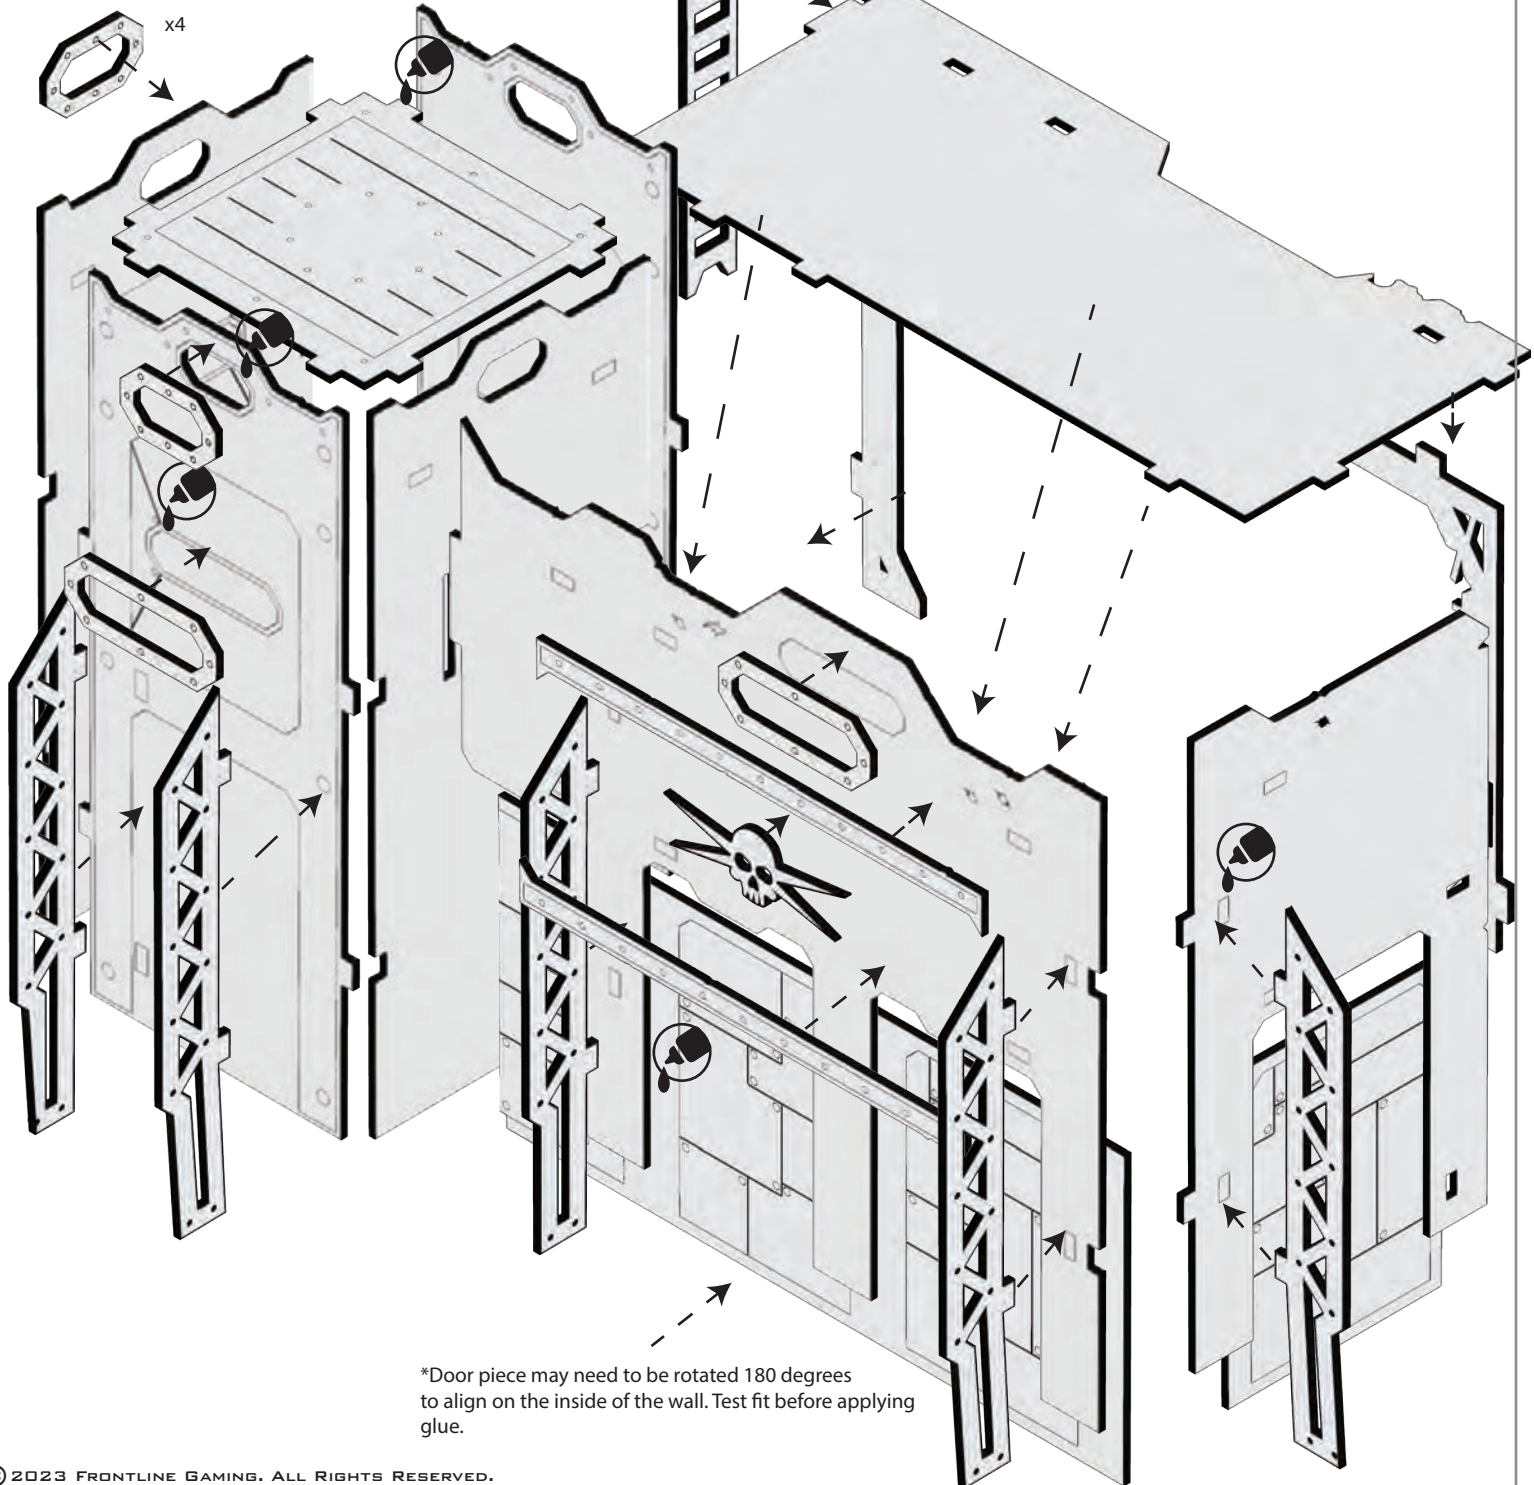

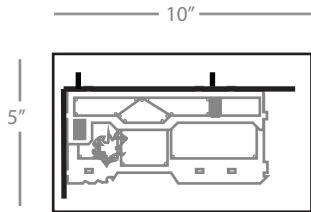


Suggested Layout on Plexiglass Base

Tips:


Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue

■ Glue together tower, then glue to walls

■ Add gun port trim, buttress pieces and icons after walls and tower are fully assembled

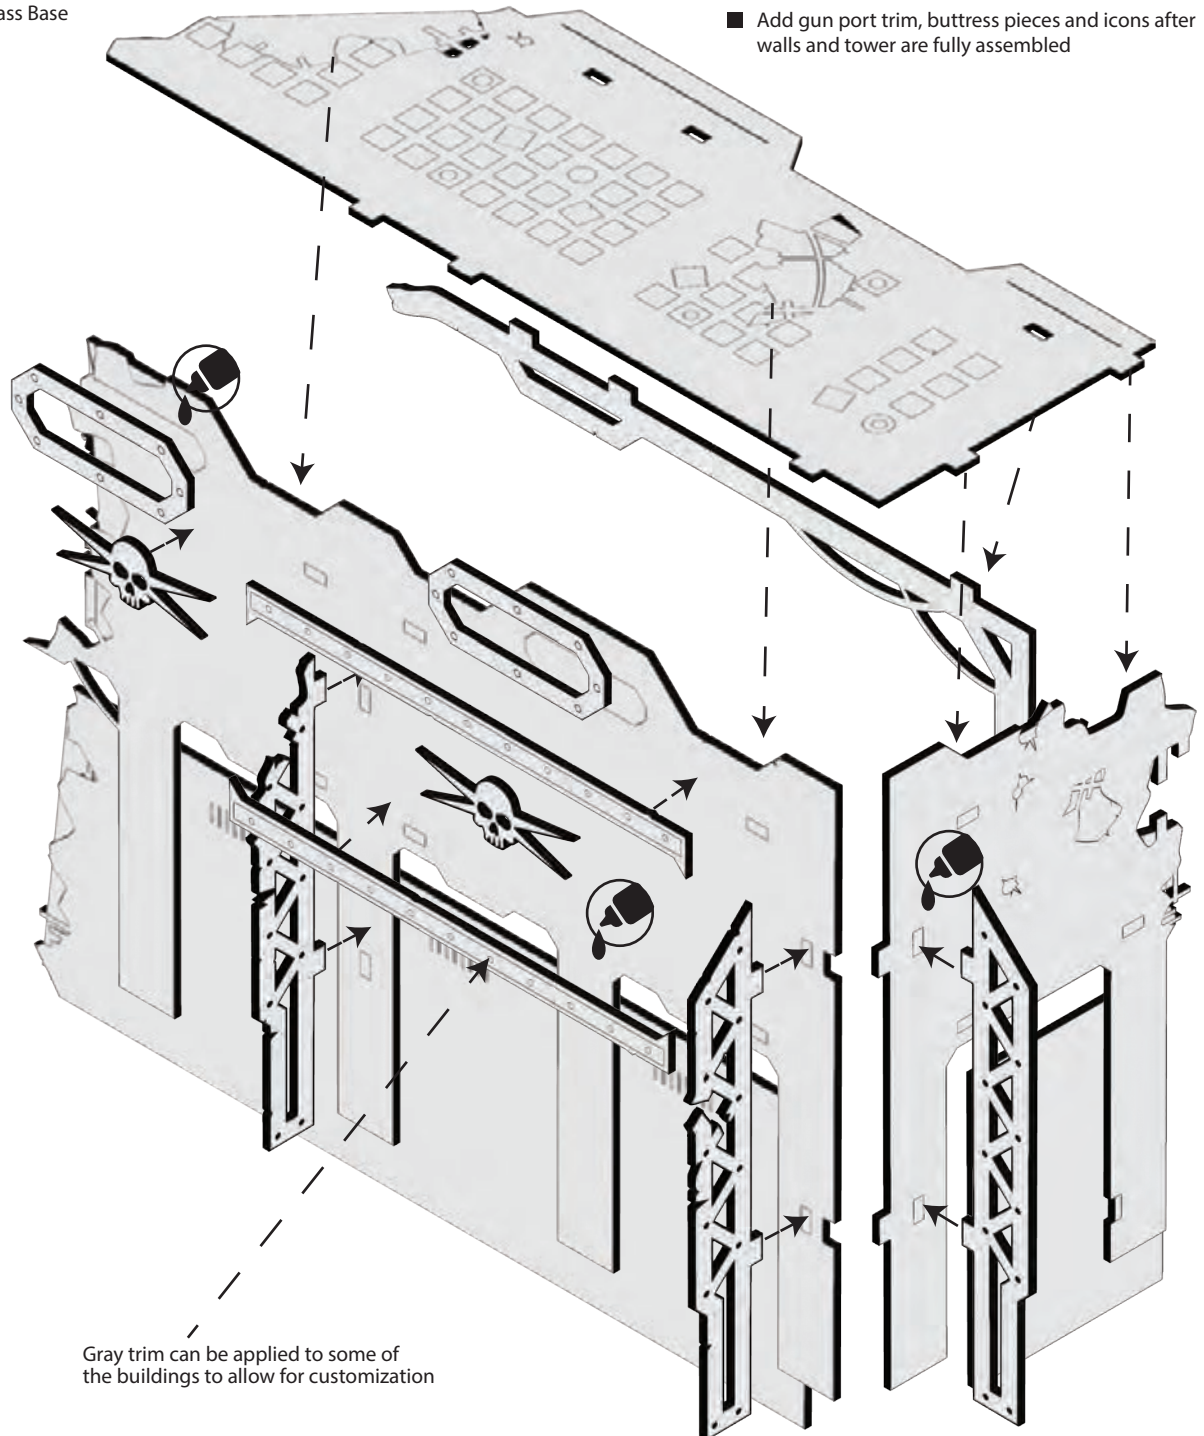


Gray trim can be applied to some of the buildings to allow for customization

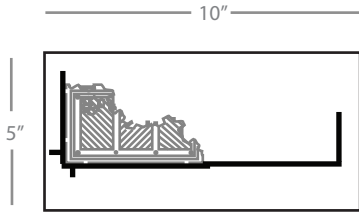

Tips:

Test fit each part prior to gluing
Recommend PVA (wood) glue or Super Glue

- Glue together tower, then glue to walls
- Add gun port trim, buttress pieces and icons after walls and tower are fully assembled

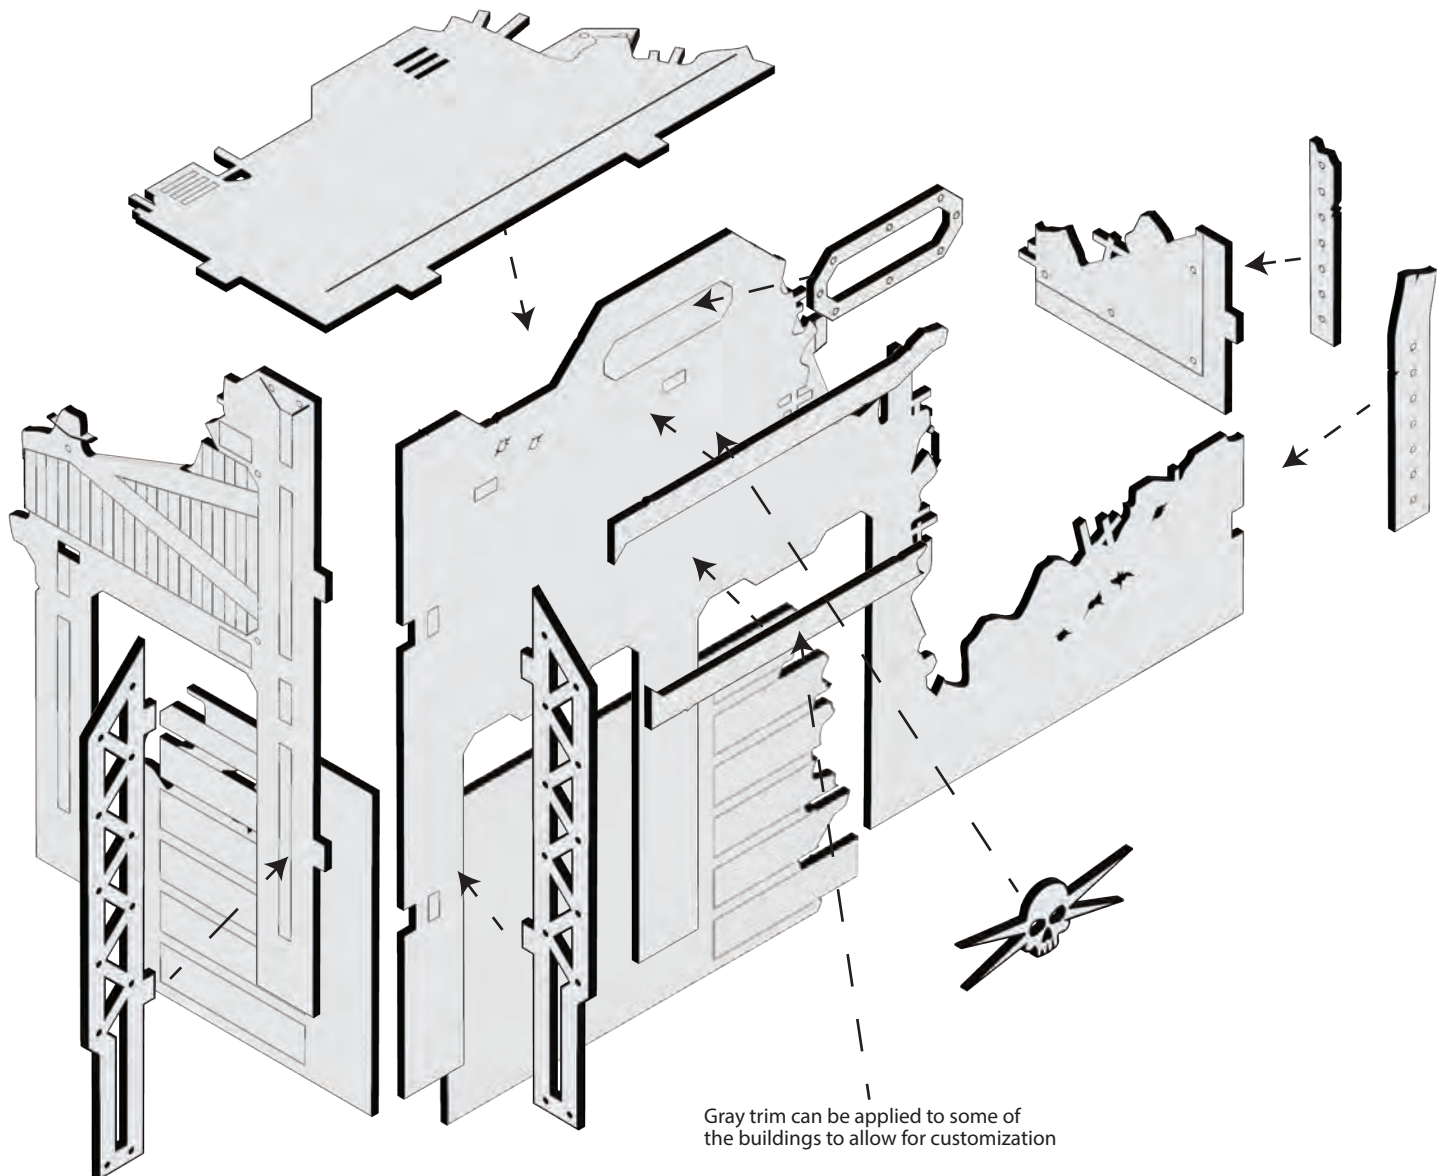

KARSK OUTPOST WALLS

ASSEMBLY INSTRUCTIONS

PAGE 1 OF 1

Tips:

Test fit each part prior to gluing

Recommend PVA (wood) glue or Super Glue

